

F3871

MOOG
STEERING & SUSPENSION



July 2014 | juillet 2014 | julio 2014
Supersedes F3871 May 2010
Remplace F3871 de mai 2010
Sustituye a F3871 con de mayo 2010

Alignment Products

For Foreign and Domestic Vehicle Applications

Réglage de la géométrie

Pour applications sur véhicules d'importation et Nord-Américains

Productos de alineación

Para aplicaciones de vehículos de importación y Norte-Americanos



Be Car Care Aware

THE PROBLEM SOLVER®

FEDERAL-MOGUL
MOTORPARTS

MOOG®

STEERING & SUSPENSION

QUALITY

Combining superior metallurgy, problem-solving design and precise manufacturing, MOOG® steering and suspension components set the benchmark for unparalleled quality.



COVERAGE

MOOG products encompass the broadest range of foreign and domestic nameplates, giving technicians the steering and suspension components they need. The comprehensive range MOOG offers includes chassis parts, hub assemblies, complete strut assemblies and universal joints.



INNOVATION

Federal-Mogul Motorparts' global resources and world-class engineering combine to create breakthrough problem-solving technologies that address undercar issues and enable faster, easier installation.



SUPPORT

Industry-leading technical assistance is readily available via an experienced, ASE-certified call center staff, and the complete lineup of our trusted Problem Solver Bulletins is online 24/7 at www.moogproblemsolver.com

TRAINING

Federal-Mogul Motorparts offers technicians industry-leading training opportunities through classroom instruction, field seminars and interactive educational tools.



PERFORMANCE

NASCAR® crew chiefs trust MOOG for championship-winning performance. In the repair bay, more professional technicians trust MOOG as well — to provide ease of installation and restore like-new steering and handling to their customers' vehicles.



MOOG® STEERING AND SUSPENSION PARTS OFFER THE COMPLETE PACKAGE.



Ball Joints



Tie Rod Ends



Sway Bar Link Kits



Control Arms



Idle Arms



Complete Strut Assemblies



Hub Assemblies



Universal Joints

THE PROBLEM SOLVER®



moogproblemsolver.com

**CAMBER ADJUSTING CAMS
AND BOLT KITS****MAGNA CAMS**

- Quick and easy camber adjustments on front and rear suspension
- No guessing: Accurately adjust camber with weight of vehicle on its wheels; simply turn the bolt and adjust to live readings
- Adjustable for future alignments
- Provides a range of adjustments from -1-3/4° to 1-3/4°, or replace upper and lower OE bolts for double the total adjustment range of up to $\pm 2.5^\circ$

Part Number	Bolt Size	Adj. Range
K928	16 mm	-1-3/4° to 1-3/4°
K929	17 mm	
K5330	14 mm	
K6699	12 mm	
K7256	14 mm	
K7436	16 mm	
K9757	12 mm	
K80110	12 mm	
K90208	15 mm	

**AXIS CAMS**

- Quick and easy camber adjustments on front and rear suspension
- Adjustable for future alignments
- Provides a range of adjustments from -1-3/4° to 1-3/4°, or replace upper and lower OE bolts for double the total adjustment range of up to $\pm 2.5^\circ$

Part Number	Bolt Size	Adj. Range
K90473	12 mm	-1-3/4° to 1-3/4°
K90474	14 mm	
K90475	15 mm	
K90476	16 mm	
K90477	17 mm	



PROBLEM:

Corrosion freezes the camber bolt in place

The camber adjustment bolt on lower control arms of certain Toyota trucks is subject to excessive corrosion (especially in the North, where salt is prevalent). The corrosion seizes the bolt and/or sleeve in the bushing, preventing rotation. The seized parts prevent the vehicle from being aligned properly. The process of removing the seized bolt can be difficult and may damage the bushing.




SEIZING OCCURS IN THESE AREAS, CAUSING ISSUES AND PREVENTING ALIGNMENT.

Description	Years	Make/Model	Part Number
Adjustable Cam Bolts, Lower Front	1996-2002	Toyota 4Runner	K100127
	1995-2004	Toyota Tacoma	
	2003-2009	Toyota 4Runner	K100128
	2007-2009	Toyota FJ Cruiser	
	2005-2012	Toyota Tacoma	
	2010-2014	Lexus GX460	K100129
		Toyota 4 Runner	
		Toyota FJ Cruiser	

SOLUTION:

MOOG® Problem Solver® greaseable camber adjustment bolt

The MOOG® Problem Solver® camber adjustment bolt features a fully greaseable design that prevents corrosion. A grease fitting on one end of the bolt allows grease flow inside. An engineered grease channel in the bolt lets grease flow out and along the interior and exterior of the sleeve to keep the bolt and sleeve lubricated. With these features enabling regular maintenance, the MOOG camber adjustment bolt will remain adjustable even after many miles of service in harsh conditions.

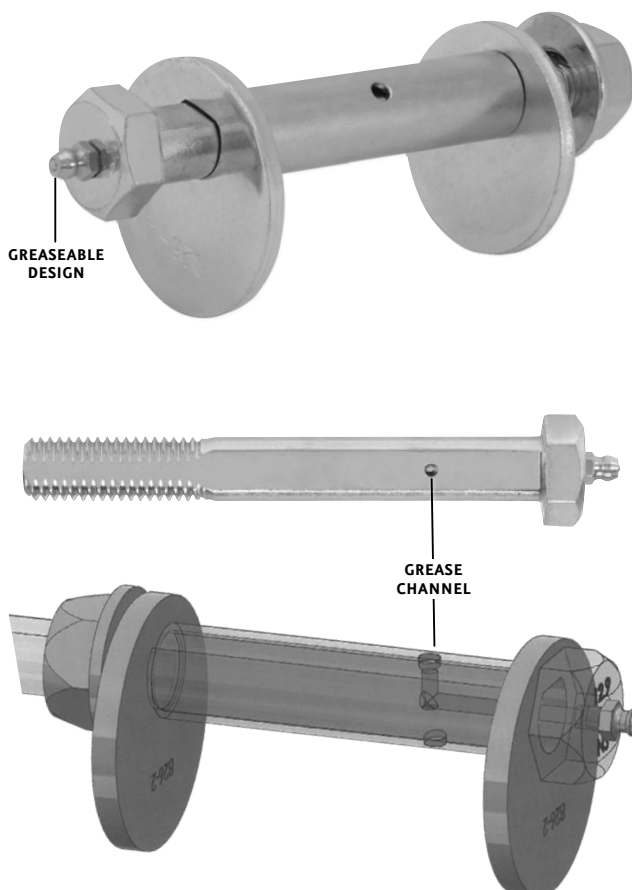

1984-2014 JEEP
1994-2014 DODGE RAM**PROBLEM:****Alignment change problems**

- No provisions given in the OE system and design to allow an alignment to be performed (caster & camber).



Year	Make/Model	Replacement Part Number
1984-2001	Jeep Cherokee	K7403
1986-1992	Jeep Comanche	
1993-1998	Jeep Grand Cherokee	
1987-2014	Jeep Wrangler	
1999-2004	Jeep Grand Cherokee	K7429
1994-1999	Dodge Ram 1500, 2500 LD 4WD	K7405
2000-2001	Dodge Ram 1500, 2500 4WD	K7407
2000-2002	Dodge Ram 2500HD, 3500 4WD	K7396
2003-2010	Dodge Ram 2500, 3500 4WD	K7448
2010	Dodge Ram 3500 RWD	
2011-2014	Ram 2500, 3500 4WD	
2011-2013	Ram 2500, 3500 RWD	

SOLUTION:**MOOG® adjustable
(caster/camber) balljoints**

- Makes “non-adjustable” vehicles fully adjustable for front caster and camber.
- Fully adjustable ball joint designs allow for most combinations of caster and camber, from -1-3/4 to +1-3/4 degrees.
- Unique designs allow for fast and easy “on-vehicle” replacement.
- Adjustable designs mean fewer part numbers per application – fewer SKU's to carry.
- Future adjustments can be easily made with a simple turn of the ball stud.
- No need to replace the ball joint again if alignment angles change.

**ADJUSTABLE BALL JOINT
WITH HEX NUT AND RUBBER
BOOT REMOVED**

REAR CAMBER / UPPER CONTROL ARM

**DODGE CALIBER /
JEEP COMPASS AND PATRIOT**

PROBLEM:

Bushing failure causes noise; no provision for camber adjustment


Affected vehicles may require rear camber adjustment. The OE rear camber arm (also known as the rear upper control arm or rear lateral link) does not have a provision for adjustment. In addition, the bushings are prone to failure and can cause excessive noise and tire wear.

SIDE VIEW



REAR CAMBER ARM

BOTTOM UP VIEW

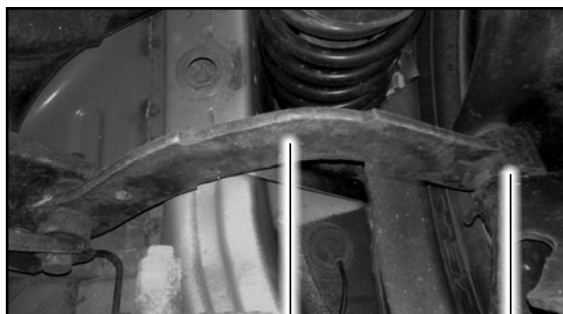


NO ADJUSTMENT
PROVISION

FAILED
BUSHING

SOLUTION:

MOOG® Problem Solver® K100114 rear camber arm with bushings

Replace the non-adjustable rear upper control arm with the MOOG® Problem Solver® K100114 adjustable arm to dial in $\pm 2.0^\circ$ of rear camber. This easily installed part includes a pivot bushing at the trailing link and a premium bonded rubber bushing at the cross member.

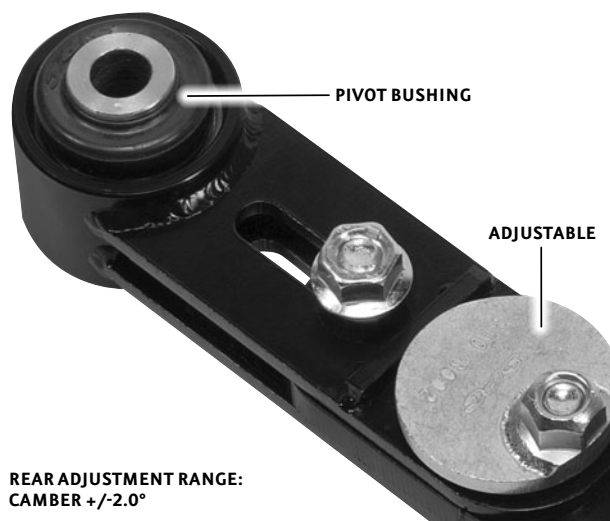

PIVOT BUSHING

ADJUSTABLE

REAR ADJUSTMENT RANGE:
CAMBER $\pm 2.0^\circ$



PRE-INSTALLED BUSHINGS



Description	Years	Make/Model	Part Number
Upper Control Arm / Rear Lateral Link / Rear Camber Arm	2007-2012	Dodge Caliber	K100114
	2007-2012	Jeep Compass, Patriot	

VARIOUS APPLICATIONS

PROBLEM:

Binding between rotor and caliper occurs when full contact shim is installed

In some instances when using full contact alignment shims at the rear of the vehicle, the caliper does not move with the rotor, and binding between the rotor and caliper will occur, resulting in brake drag.

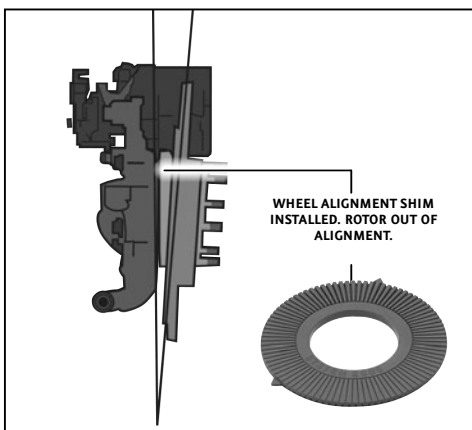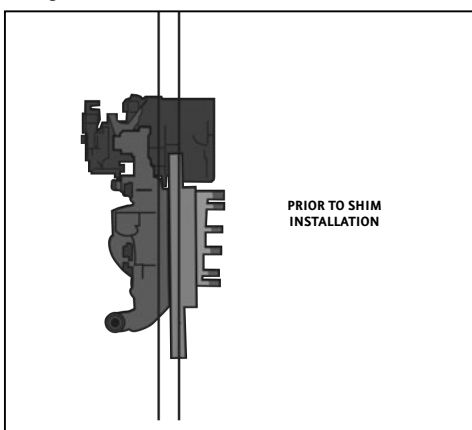

Description	Applications	Part Number
Rear Alignment Shim Caliper Spacers	This problem occurs in a variety of vehicles with rear wheels that are "shimmable" for camber/toe adjustment but have rear-axle-mounted calipers that do not automatically follow the rotor and match its new angle when the shim is installed.	K100125



SOLUTION:

MOOG® Problem Solver® rear alignment caliper spacers K100125

The MOOG® K100125 rear caliper spacer assortment provides easy-to-install spacers that will bring the rotor and caliper back into alignment.

Unique snap-together design allows any required thickness to be created by interlocking as many or as few spacers as needed.

- Assortment includes twelve .04" thick spacers and twelve .06" thick spacers.
- Sizes can be combined.
- Removable "fingertab" makes installation quick and easy.

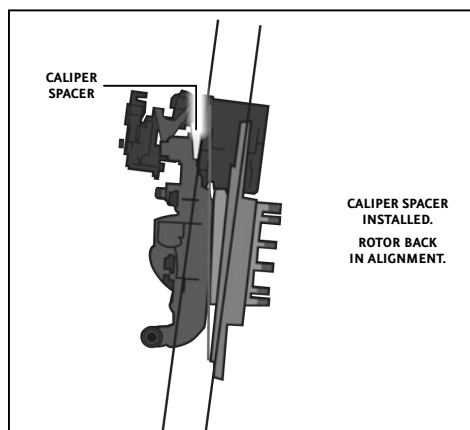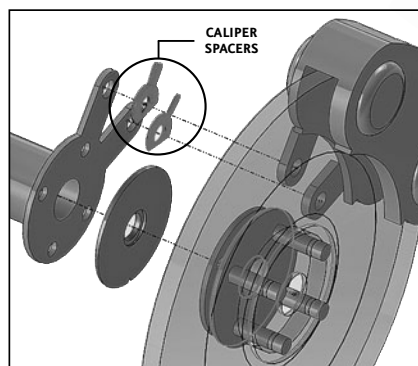

2007-2014 FORD EDGE/LINCOLN MKX

Overview

Aligning the front of the affected vehicles can be time-consuming. Camber can be adjusted, but caster cannot. Camber adjustment using the factory method is estimated at 1.4 - 1.8 hours. MOOG® offers a more time-saving and easier solution to adjusting camber on these vehicles.

Affected vehicles:
2007 - 2014 Ford Edge
2007 - 2014 Lincoln MKX

Inspection Procedure

If, during an alignment check, camber angles are found to be out of specification (see chart below), there are two options available to bring the camber to factory specifications.

Front Camber Adjustment

	2007-2008	2009-2010	2011
Left	$-0.30^{\circ} \pm 0.75^{\circ}$	$-0.1 \pm 0.75^{\circ}$	$-0.04^{\circ} \pm 0.75^{\circ}$
Right	$-0.30^{\circ} \pm 0.75^{\circ}$	$-0.6 \pm 0.75^{\circ}$	$-0.54^{\circ} \pm 0.75^{\circ}$

Repair Procedure


Option 1. The factory adjustment method calls for rotation of the strut plate. Rotating the upper strut plate 180 degrees will change the camber +0.5 degrees. This option is time-consuming and difficult.

Option 2. Adjust the camber using MOOG Problem Solver cam bolt kit K90476:

After determining the amount of camber adjustment required, safely secure the vehicle and remove the tire/wheel assembly. Remove the top bolt at the lower strut-to-knuckle mount. Replace this bolt, using MOOG cam bolts, part #K90476.

Repair Procedure (Con't)


This easy-to-use adjuster provides built-in adjustment over the life of a vehicle just by rotating the head of the bolt. Each kit contains two cam bolt assemblies, enough for both sides of the vehicle, and has an adjustment range from -1.75 to +1.75.

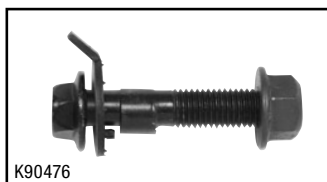

Install the MOOG cam bolt with the tabbed washer on the head of the bolt. Make sure the inner tab is recessed in the hole, and the other handle on the washer is installed facing out.



Position outer handle towards tire for + camber, or towards engine for - camber.

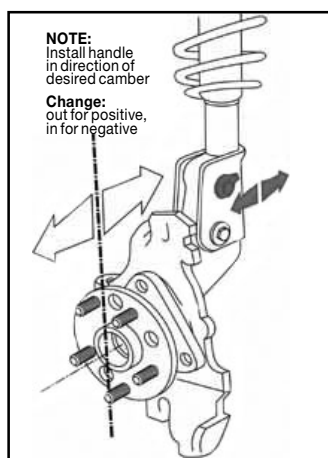

Repair Procedure (Con't)

Install the lock nut and tighten assembly slightly, so the head of the bolt can still be rotated.

At this point the MOOG camber gauge T40262 may be helpful and save time. Install the camber gauge and set to zero.



Loosen the lower bolt at the strut mount-to-knuckle location.

Then turn the upper cam bolt head to achieve proper adjustment.



Once proper adjustment has been achieved, tighten the lower and upper bolts to specification per the instruction sheet supplied.

Install the tire/wheel assembly.

Verify vehicle alignment to proper specifications. Camber can be adjusted with tire/wheel assembly on the vehicle, if required, by reaching and adjusting the bolts from underneath the vehicle.

HIDDEN CAMBER/CASTER ADJUSTER

2003 & LATER FORD CROWN VICTORIA
AND OTHERS

Overview

Technicians cannot find the OE adjustment because of a plate covering the cam. Many techs try to adjust camber and caster on the upper control arm, when actually the adjustment is on the lower control arm.

Models affected:


Year	Make/Model
03-Present	Ford Crown Victoria, Mercury Grand Marquis/ Marauder

Repair Procedure

Camber Adjustment

NOTE: Camber adjustment can affect caster and toe settings.


1. Camber is adjusted by rotating the cam bolts located at the forward control arm bushing. A retaining cover (also known as a "retainer flag") can be removed and discarded if necessary.

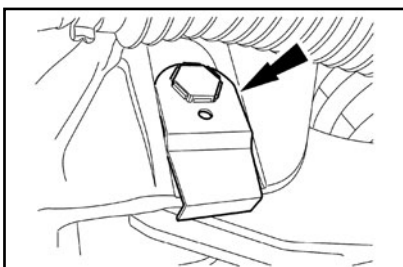


Repair Procedure (Con't)

Camber Adjustment (con't.)


2. Loosen the cam bolt nut.

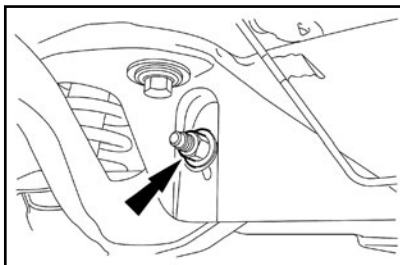

3. Rotate the cam bolt to adjust camber.

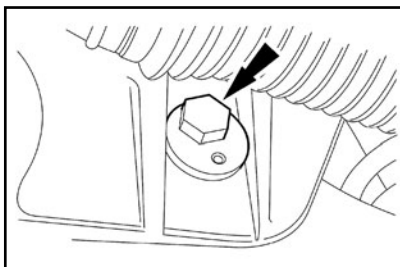

4. After the adjustment, tighten the nut while holding the cam bolt. Recheck the camber, caster and toe, and adjust as needed. Be sure to torque the cam bolt nut to specification.

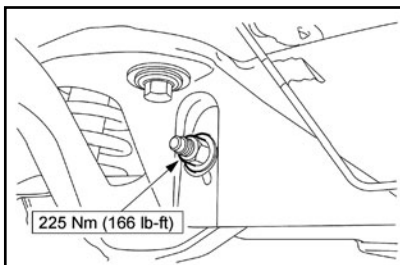


Repair Procedure (Con't)

Caster Adjustment


NOTE: Caster adjustment can affect camber and toe settings.

1. Caster is adjusted by loosening the rearward lower control arm bushing nut and moving the arm inward or outward.

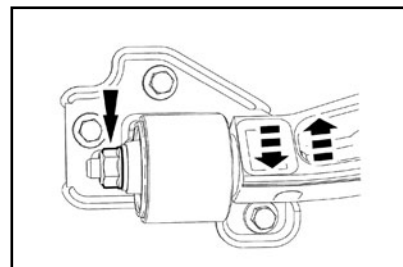

NOTE: When adjusting left-hand caster, a centering washer may have to be removed and discarded prior to adjustment.

2. After adjustment, while holding the arm, tighten the nut.

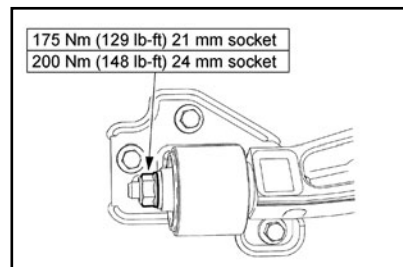

3. Recheck the camber, caster and toe, and adjust as needed.


REMOVING AND INSTALLING HONDA/ACURA LOWER BALL JOINTS

HONDAS AND ACURAS
WITH WISHBONE FRONT SUSPENSION

PROBLEM:

Lower ball joints are difficult to remove and install

The lower ball joints on many Hondas and Acuras are pressed into the steering knuckle and are difficult to remove and install, especially with age. Many technicians beat and hammer the ball joints out and in. This is very time-consuming and can damage the steering knuckle and the new ball joint.

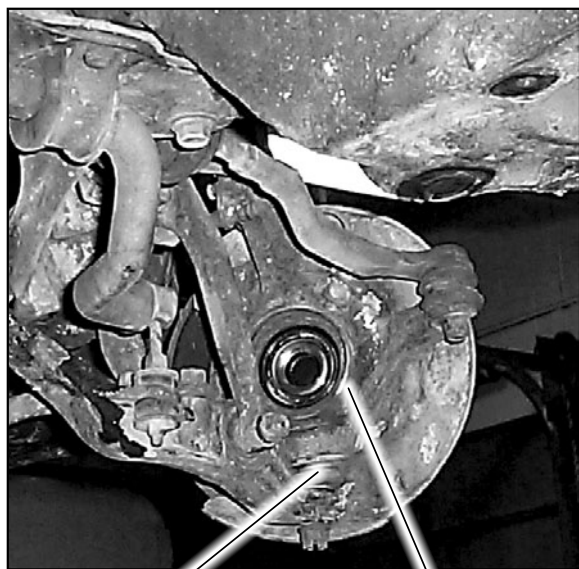

BALL JOINT

STEERING KNUCKLE

Years	Make/Model	Part Number
Various	Most Hondas/Acuras with wishbone front suspension	T80541 Ball Joint Removal Tool


SOLUTION:

MOOG® Problem Solver® tool T80541

MOOG Problem Solver Tool T80541 is specially designed to press out old Honda/Acura lower ball joints and press new ones in.


Steps to remove:

1. Separate ball joint from lower control arm.
2. Remove snap ring if applicable.
3. Using a C-clamp style ball joint press and T80541 sockets, push ball joint out of steering knuckle.

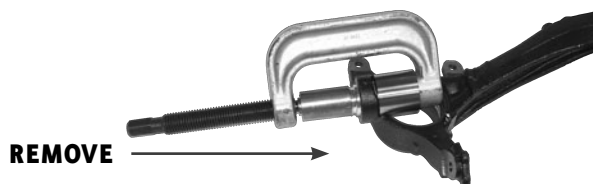


Steps to install:

1. Using a C-clamp style ball joint press and T80541 sockets, push ball joint into steering knuckle. Be sure to orient the ball joint grease-relief valve (if applicable) to the center of the car. Install a new snap ring if required.
2. Install the steering knuckle and complete ball joint installation. Torque castle nut to specifications.

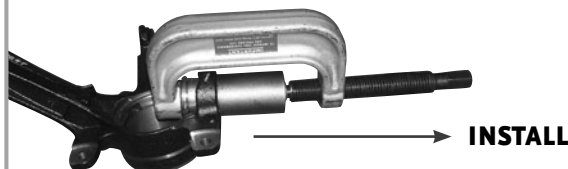

T80541

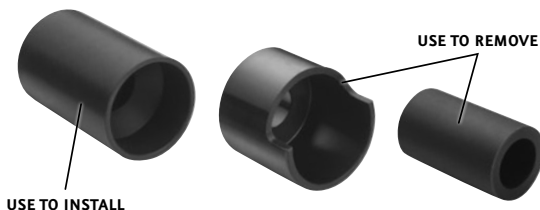


1999-2011
GM TRUCKS

PROBLEM:

Alignment adjustability restrictions

- OE adjustments may not provide adequate range to obtain a proper alignment on late-model Chevrolet and GMC light trucks.
- Excessive positive or negative camber will cause the vehicle to pull left or right and will create wear on the inside or outside edge of the tire.

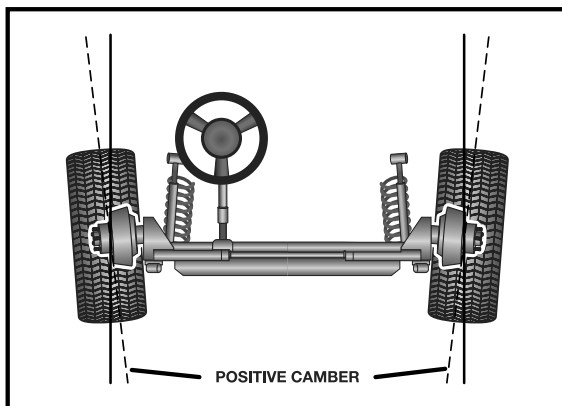

Description	Year	Make/Model	P/N
Bushing	2002-2006	Cadillac Escalade, EXT	K6669
	2003-2006	Cadillac Escalade ESV	
	2002-2006	Chevrolet Avalanche 1500	
	2003-2011	Chevrolet Express 1500	
	2003-2010	Chevrolet Express 2500/3500	
	1999-2007	Chevrolet Silverado 1500	
	1999-2000	Chevrolet Silverado 2500 RWD	
	2000-2006	Chevrolet Suburban 1500	
	2000	Chevrolet Suburban 2500 RWD	
	2001-2006	Chevrolet Tahoe	
	2000	Chevrolet Tahoe (Exc. 5.7L)	
	2003-2011	GMC Savana 1500	
	2003-2010	GMC Savana 2500/3500	
	1999-2007	GMC Sierra 1500	
	1999-2000	GMC Sierra 2500 RWD	
	2001	GMC Sierra C3	
	2001-2006	GMC Yukon	
	2000	GMC Yukon (Exc. 5.7L), Yukon XL 2500 RWD	
	2000-2006	GMC Yukon XL 1500	
Bushing	2002-2006	Chevrolet Avalanche 2500	K6670
	2001-2007	Chevrolet Silverado 1500 HD	
	2001-2004	Chevrolet Silverado 2500	
	1999-2000	Chevrolet Silverado 2500 4WD	
	2001-2011	Chevrolet Silverado 2500 HD	
	2001-2007	Chevrolet Silverado 3500	
	2007-2011	Chevrolet Silverado 3500 HD	
	2001-2011	Chevrolet Suburban 2500	
	2000	Chevrolet Suburban 2500 4WD	
	2001-2007	GMC Sierra 1500 HD, 3500	
	2001-2004	GMC Sierra 2500	
	1999-2000	GMC Sierra 2500 4WD	
	2001-2011	GMC Sierra 2500 HD	
	2007-2011	GMC Sierra 3500 HD	
	2001-2011	GMC Yukon XL 2500	
	2000	GMC Yukon XL 2500 4WD	
	2003-2009	Hummer H2	


To see applications for MOOG CK620053 / CK80826 control arms, visit FMe-cat.com

SOLUTION:

MOOG® offset bushings for camber

- MOOG bushings offer an additional 2 degrees of camber change.
- Used with factory cam adjuster, but allow greater range.
- Designed with OE-type material to maintain ride quality and service life.
- Fast and simple installation – made easier with the use of MOOG T40259, a bushing adapter specially designed to work with MOOG K6669 and MOOG K6670.

REPLACEMENT BUSHINGS

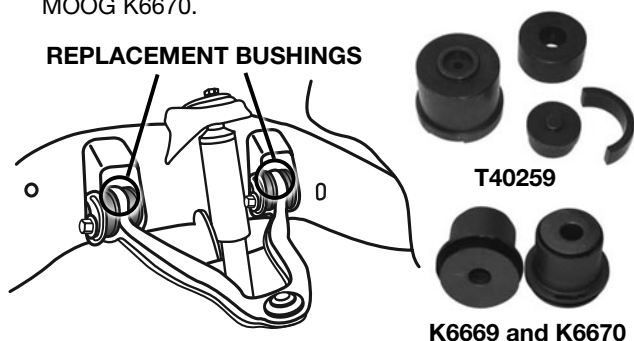

MOOG CK620053 / CK80826 control arms offer additional camber

- Easy to install, one-piece design.
- Pre-installed bushings provide +1 degree of additional camber.



QUICK CAMS CASTER/CAMBER ADJUSTMENT


CHEVROLET AND GENERAL MOTORS TRUCKS

PROBLEM:

Difficulty adjusting caster/camber

- Space constraints on Chevy/GMC trucks limit access to the inboard OEM caster/camber adjustment cam, making adjustments difficult to perform.

INBOARD LOCATION MAKES
ADJUSTMENT DIFFICULT

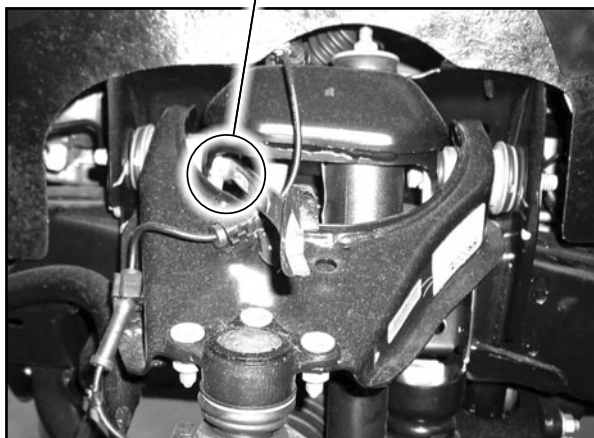

Description	Year	Make/Model	Replacement Part Number
Quick Cam	2004-2012 2004-2012 2006-2010 2009 2006 2007-2008	Chevrolet Colorado 4WD GMC Canyon 4WD Hummer H3 Hummer H3T Isuzu i-280/i-350 Isuzu i-290/i-370	K6721
Quick Cam	2003-2014 2003-2014 2003-2009	Chevrolet Express Van GMC Savana 1500 Van GMC Savana 2500/3500 Van	K80277
Guide Pins	1999-2014	Chevrolet, GMC, Hummer	K6716

NOTE: The Quick Cams are problem solvers for the applications listed above. They fit many other Chevy/GMC vehicles as replacement parts.

SOLUTION:

MOOG® Quick Cam K6721 and K80277

- Replaces the non-adjustable outboard OEM cam.
- Easy-access Allen wrench slot enables fast and easy caster/camber adjustment.
- Allows for future adjustments.
- Works with the OEM bolt, cutting installation time greatly.



OUTBOARD LOCATION
AIDS IN ADJUSTMENTS



NOTE: MOOG also offers guide pins to replace those that break off.

**2000-2014
FORD FOCUS****PROBLEM:****Premature wear on the edges
of rear tires**

- No allowance provided in the rear OE suspension system and design to allow for a camber adjustment to be performed.
- The OE fix is to replace the entire upper control arm.


**TYPICAL TIRE WEAR FROM
EXCESSIVE CAMBER**

Make/Model/Year	Replacement Part Number
Ford Focus 2000-2014	K80002

SOLUTION:**MOOG® rear suspension
camber shims**


- Makes non-adjustable rear suspensions on the Focus adjustable for camber.
- Easy installation.
- Changes camber 1/2 or one degree positive or negative.
- Suitable for ABS-equipped vehicles.
- Full contact for support of rear hub/wheel.
- Works in conjunction with factory toe adjuster to accurately set rear angles to desired readings.

Also available - part no. K80001, Front Camber plate for up to one degree of adjustment.

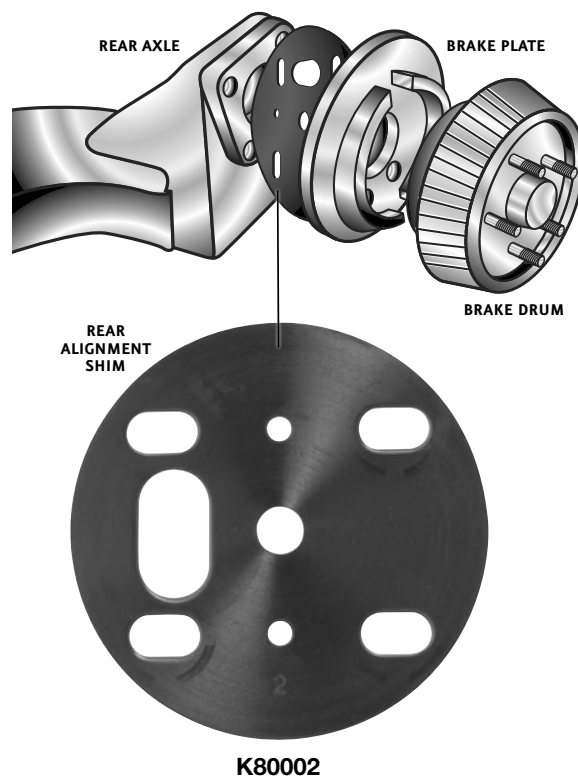

ADJUSTABLE BUSHINGS

Offset bushings are available for camber/caster change on front suspensions and toe adjustment on some rear suspensions. Allows up to 25% greater range of adjustment. Used extensively in Ford truck applications.

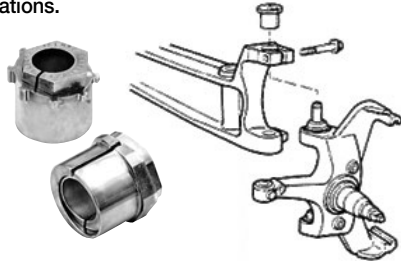


REAR CONTACT SHIMS

Full-contact rear shims fit between the axle and hub. The shims can be used for camber and toe change. After an initial alignment reading, the necessary change can be calculated using the chart provided in the instructions.

Full-contact shims are manufactured from non-corrosive materials and are accurate to one-tenth of a degree.

Full-contact shims can be used to set camber or toe, or to correct camber and toe simultaneously.

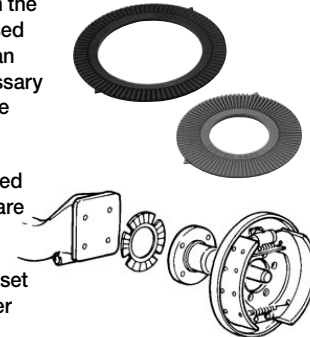


ADJUSTABLE BALL JOINTS

These ball joints make "non-adjustable" vehicles fully adjustable for front caster and camber.




CAM PLATE ADJUSTING KITS

These enable precise, easily controlled adjustments, and install with no drilling or modifying required.

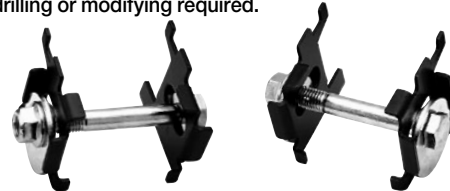

UPPER CONTROL ARM OFFSET BUSHINGS FOR CAMBER AND CASTER

REPLACEMENT BUSHINGS

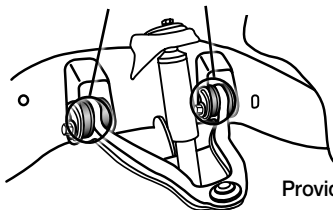

Provides an effective, low-cost means of obtaining more camber (and/or caster).

- Offers an additional 2 degrees of camber change.
- Used with factory cam adjuster, but allows greater range.
- Designed with OE-type material to maintain ride quality and service life.
- Fast and simple installation – made easier with the use of T40259, a bushing adapter specially designed to work with K6669 and K6670.




T40259



K6669 and K6670

SHIMS


Shims can vary in thickness from 1/4" to 1/64". If there is insufficient adjustment available, this is an indication of a problem.

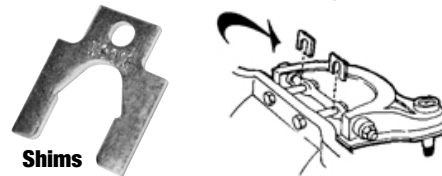

Shims

GM TRUCK CONTROL ARM KNOCKOUT TOOL T40222

Required to remove factory frame knockouts. This tool will not damage the alignment bracket, as can happen when a pry bar is used.

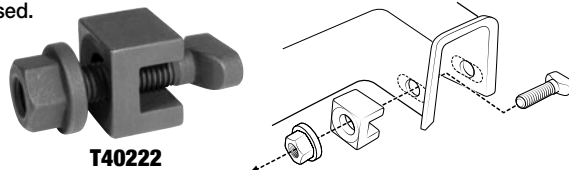


T40222

ALIGN WITH MOOG® CHASSIS ALIGNMENT AIDS, PARTS & TOOLS


TOOL T40011

This special socket tool has two set screws to allow removal of rack and pinion inner tie rod sockets without wrench flats.

3/8" drive socket for use with extension

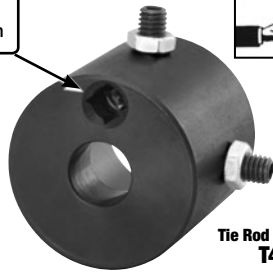

Tie Rod Removal Tool
T40011

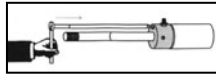

GM TRUCK QUICK CAM AND GUIDE PINS

- Replaces the non-adjustable outboard OE cam.
- Easy-access Allen wrench slot enables fast and easy caster/camber adjustment.
- Allows for future adjustments.
- Works with the OE bolt, cutting installation time greatly.
- Replaceable guide pins for the OE units that break or fall off.



K6721



K6716

BALL JOINT CHANGING TOOLS

MOOG offers a full line of quality tools that aid in the removal of stubborn ball joints. Having the proper tool allows the ball joint to be removed and installed without damaging the ball joint or control arm.


T40014



use to install



use to remove

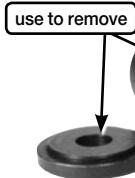


use to remove

T80275




use to install

T80541

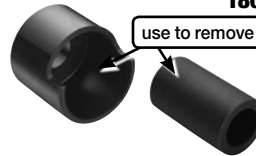

use to remove

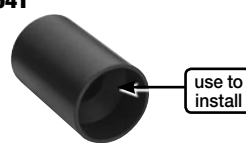



use to install

T40003



CONTROL ARM SHAFT KITS AND CONTROL ARM MOUNTS

Shaft kits provide an additional one degree or more of camber adjustment. Control arm mounts replace non-adjustable OE anchor bolts for true adjustability.

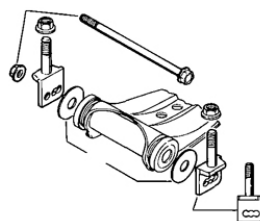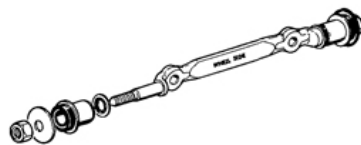

ADJUSTMENT CAMS (AND CAM BOLTS)

Cams can vary in diameter and location. Cams can be used for camber or caster and toe adjustment and are usually sold with a new bolt.



Cams


REAR ADJUSTING LATERAL LINK

MOOG K90706 Rear Camber Adjusting Lateral Links allow for on-vehicle additional camber adjustment from -1.5 to +3 degrees as well as fast and easy installation.



K90706

CAR / CROSSOVER

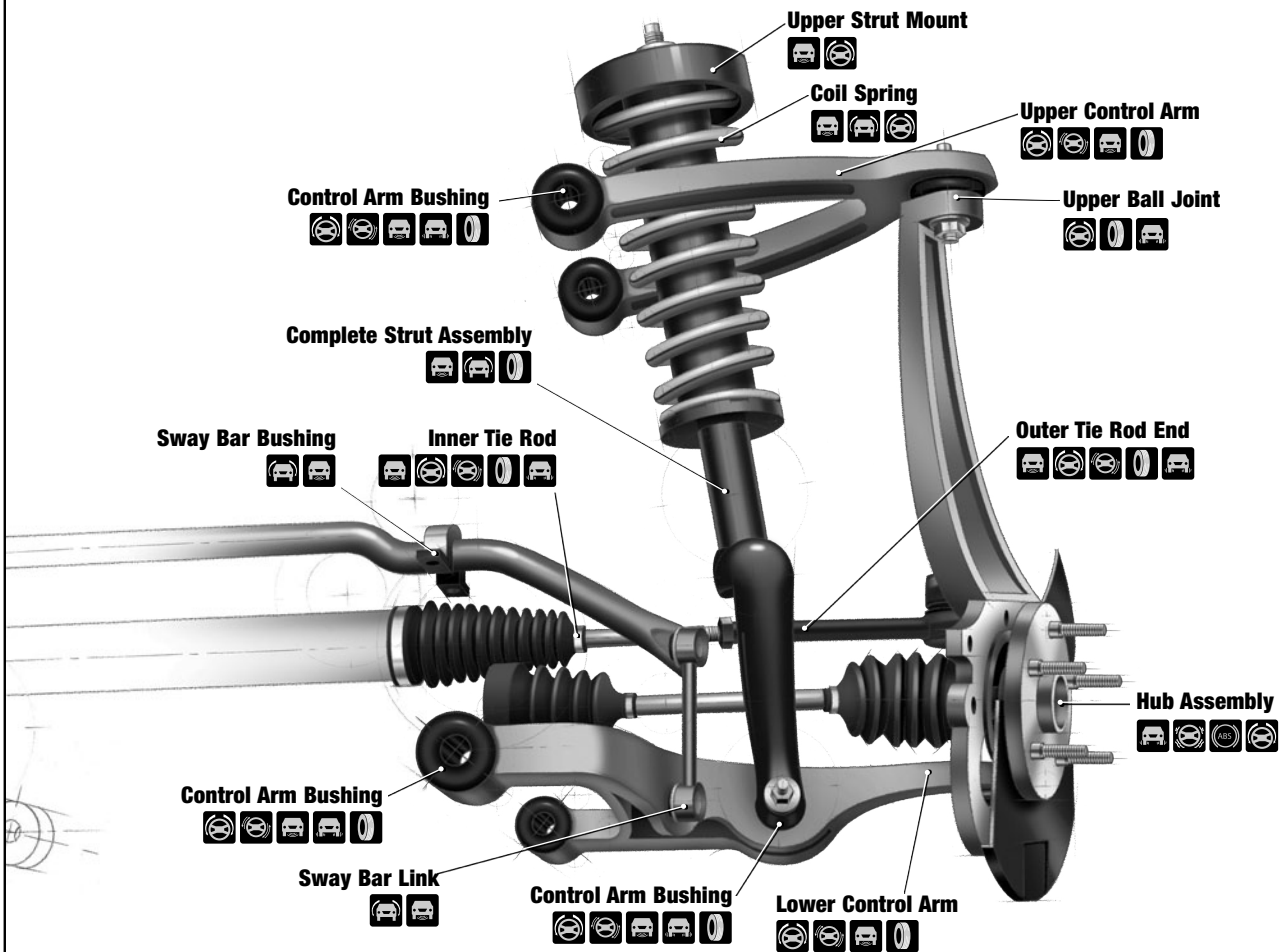

SYMPTOMS OF CHASSIS WEAR



Steering wheel pulls to the left or right



Front-end shimmy



Steering wheel play



Vehicle leans when turning



Rattling or grinding noise under vehicle



Steering wheel vibration



ABS light is illuminated

UNEVEN TIRE WEAR?



Tires show uneven or premature wear



Center Rib Wear
CAUSE: Over-inflation.



Outer Edge Wear
CAUSE: Under-inflation, high speed cornering, excessive positive or negative camber.



Camber or Toe Wear
CAUSE: Misalignment, loose parts, incorrect ride height.




Diagonal Wear
CAUSE: Typically incorrect rear toe adjustment. Wear pattern will be determined by tire construction.



Cupped Wear
CAUSE: Loose or worn parts, improper wheel balance.

LIGHT TRUCK / SUV

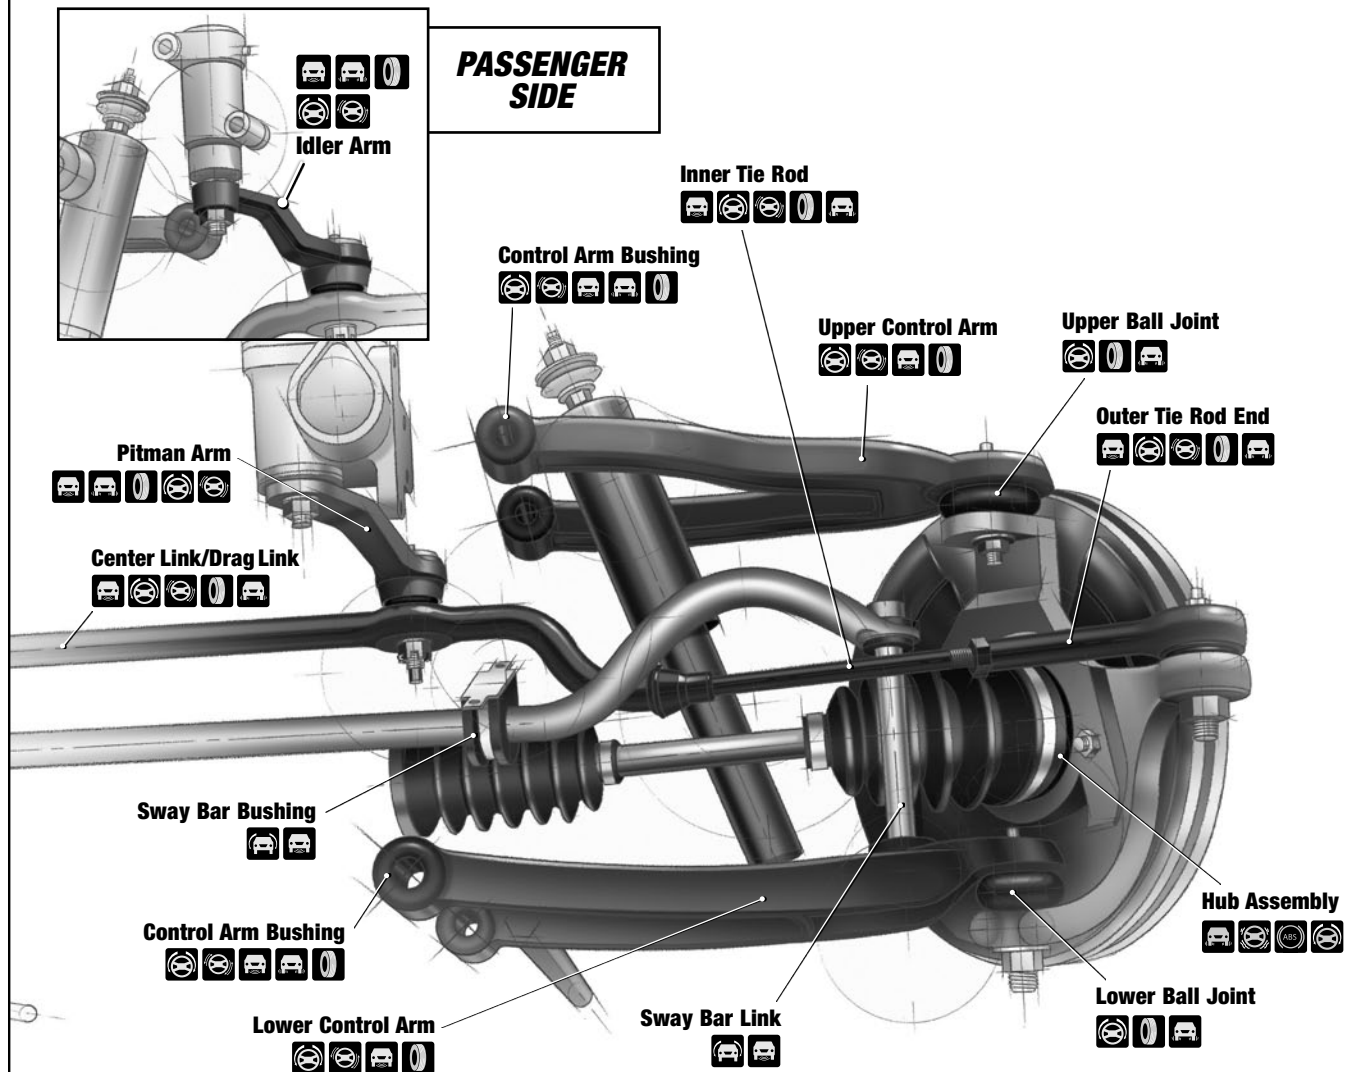

STEERING AND SUSPENSION PARTS

Control Arms



Tie Rod Ends



Alignment Parts



Bushings



Coil Springs



Idler Arms



Ball Joints



Sway Bar Link Kits



Complete Strut Assemblies



Hub Assemblies



Upper Strut Mounts



TABLE OF CONTENTS

General Information

Make and Model Index	ii
----------------------------	----

Application Information

All	1
-----------	---

Numerical List/Buyers Guide

Car and Truck	A1
Flat Rate Time Guide	A1
Heavy Duty Truck.....	A27, A61
Offset Control Arm Shaft Kits	A72
Tools and Accessories	A75

MAKE / MODEL INDEX

Model	Page	Model	Page	Model	Page
Acura Car		Buick Truck		Chevrolet Car	
CL	1	Enclave	7	Townsmen	46
EL	1	Rendezvous	12	Volt	48
ILX	1	Cadillac Car		Chevrolet Van	
Integra	1	60 Special	16	Astro	21
Legend	1	Allante	16	Express 1500	31
RL	2	Brougham	16	Express 2500	31
RSX	2	Catera	16	Express 3500	32
TL	2	Cimarron	16	LLV	36
TSX	3	Commercial Chassis	17	Lumina APV	36
Vigor	3	DeVille	17	Uplander	47
Acura Truck		DTS	17	Venture	48
MDX	2	Eldorado	18	Chevrolet Truck	
RDX	2	Fleetwood	19	Avalanche	21
Audi Car		Seville	19	Avalanche 1500	21
100	3	STS	20	Avalanche 2500	21
200	3	Cadillac Truck		Blazer	23
4000	4	Escalade	18	C10 Pickup	23
5000	4	Escalade ESV	18	C10/C1500 Suburban	23
80	4	Escalade EXT	19	C1500 Pickup	23
90	4	SRX	20	C20 Pickup	24
A4	4	Chevrolet Car		C20/C2500 Suburban	24
A6	4	Aveo	21	C2500 Pickup	24
Cabriolet	4	Aveo5	22	C30 Pickup	24
Coupe	5	Bel Air	22	C3500 Pickup	24
Fox	5	Beretta	22	C4500 Kodiak	24
RS6	5	Biscayne	23	Captiva Sport	26
S4	5	Camaro	25	Colorado	28
S6	5	Caprice	26	Corvair Truck	29
TT	5	Cavalier	26	El Camino	30
TT Quattro	5	Celebrity	27	Equinox	31
Buick Car		Chevelle	27	G10 Van	32
Allure	6	Chevette	27	G20 Van	33
Apollo	6	Chevy II	27	G30 Van	33
Centurion	6	Citation	27	K10 Pickup	34
Century	6	Citation II	28	K10 Suburban	35
Commercial Chassis	7	Classic	28	K1500 Pickup	35
Electra	7	Cobalt	28	K1500 Suburban	35
Estate Wagon	8	Commercial Chassis	28	K20 Pickup	35
LaCrosse	8	Corsica	29	K20 Suburban	35
LeSabre	9	Corvette	29	K2500 Pickup	35
Lucerne	10	Cruze	29	K2500 Suburban	35
Opel	10	Epica	30	K30 Pickup	35
Park Avenue	11	HHR	33	K3500 Pickup	36
Reatta	11	Impala	34	K5 Blazer	36
Regal	12	Kingswood	36	LUV	37
Riviera	13	Lumina	36	P10 Van	41
Roadmaster	13	Malibu	38	P20 Van	41
Skyhawk	13	Metro	39	P30 Van	41
Skylark	14	Monte Carlo	40	R10/R1500 Pickup	42
Somerset	14	Nova	41	R10/R1500 Suburban	42
Somerset Regal	15	Opra	41	R20/R2500 Pickup	42
Special	15	Prizm	42	R20/R2500 Suburban	42
Verano	15	Sonic	45	R30/R3500 Pickup	42
Buick Van		Spark	45	S10 Blazer	42
Terraza	15	Spectrum	45	S10 Pickup	43
		Sprint	45	Silverado 1500	43

MAKE / MODEL INDEX

Model	Page	Model	Page	Model	Page
Chevrolet Truck		Dodge Car		Dodge Truck	
Silverado 1500 HD	43	400	57	W100 Pickup	70
Silverado 2500	44	440	57	W150 Pickup	70
Silverado 2500 HD	44	600	57	W200 Pickup	71
Silverado 3500	44	880	58	W250 Pickup	71
Silverado 3500 HD	44	Aries	58	W300 Pickup	72
Suburban 1500	45	Avenger	58	W350 Pickup	72
Suburban 2500	46	Caliber	58	Eagle Car	
Tahoe	46	Challenger	59	2000 GTX	72
Tracker	47	Charger	60	Medallion	72
Traverse	47	Colt	60	Premier	73
V10 Suburban	47	Coronet	60	Summit	73
V10/V1500 Pickup	47	Custom	61	Talon	73
V20 Suburban	47	Dart	62	Vision	73
V20/V2500 Pickup	48	Daytona	62	Vista	73
V30/V3500 Pickup	48	Dynasty	62	Fiat Car	
Chrysler Car		Intrepid	63	128	73
200	48	Lancer	63	131	74
300	49	Magnum	64	500	74
300M	49	Monaco	64	500L	74
Cirrus	49	Neon	64	Brava	74
Concorde	49	Omni	65	X-1/9	74
Daytona	49	Polara	66	Fiat Truck	
Dynasty	50	Shadow	69	Strada	74
E Class	50	Sierra	69	Ford Car	
Executive Limousine	50	Spirit	69	Aspire	75
Executive Sedan	50	Stratus	70	Contour	77
Imperial	51	SX 2.0	70	Crown Victoria	77
Intrepid	51	Dodge Van		Escort	80
Laser	51	Caravan	59	EXP	81
LeBaron	51	Grand Caravan	62	Fairlane	94
LHS	52	Mini Ram	64	Fairmont	94
Neon	52	Sprinter 2500	69	Falcon	94
New Yorker	52	Sprinter 3500	69	Festiva	94
Newport	53	Dodge Truck		Fiesta	94
PT Cruiser	53	B100 Van	58	Five Hundred	94
Saratoga	53	B200 Van	58	Focus	94
Sebring	54	B300 Van	58	Freestyle	95
TC Maserati	54	CB300	59	Fusion	95
Windsor	55	D100 Pickup	61	Granada	95
Chrysler Van		D150 Pickup	61	LTD	95
Grand Voyager	50	D200 Pickup	61	Maverick	95
Town & Country	55	D250 Pickup	61	Mustang	96
Voyager	55	D300 Pickup	61	Probe	96
Chrysler Truck		D350 Pickup	61	Taurus	97
Pacifica	53	D400 Pickup	61	Taurus X	98
Daewoo Car		D450 Pickup	62	Tempo	98
Leganza	56	Durango	62	Thunderbird	98
Nubira	56	Journey	63	Torino	98
Daihatsu Car		P100	65	Ford Van	
Charade	56	P200	65	Aerostar	75
Daihatsu Truck		P300	65	E-250 Super Duty	78
Rocky	56	Ram 1500	66	E-350 Super Duty	79
Dodge Car		Ram 2500	67	E-550 Super Duty	79
2000 GTX	57	Ram 3500	68	Econoline Super Duty	79
330	57	Ramcharger	68	Freestar	95
		Rampage	68		

MAKE / MODEL INDEX

Model	Page	Model	Page	Model	Page
Ford Van		GMC Truck		Honda Van	
Transit Connect	99	Canyon	103	Odyssey	118
Windstar	99	G15/G1500 Van	103	Honda Truck	
Ford Truck		G1500 Van	104	CR-V	117
Bronco	76	G25/G2500 Van	104	Element	118
Bronco II	77	G2500 Van	104	Passport	118
E-150 Series Van	78	G35/G3500 Van	104	Pilot	119
E-250 Series Van	78	G3500 Van	105	Ridgeline	119
E-350 Series Van	78	Jimmy	105	Hummer Truck	
E-450 Super Duty Series	79	K15/K1500 Pickup	105	H2	119
Edge	79	K15/K1500 Suburban	105	H3	119
Escape	80	K1500 Suburban	105	H3T	119
Excursion	81	K25/K2500 Pickup	106	Hyundai Car	
Expedition	82	K25/K2500 Suburban	106	Accent	120
Explorer	83	K2500 Suburban	106	Elantra	120
Explorer Sport Trac	83	K35/K3500 Pickup	106	Excel	120
F-100 Pickup	84	P15/P1500 Van	106	Genesis Coupe	120
F-150 Heritage	84	P25/P2500 Van	107	Scoupe	121
F-150 Pickup	85	P35/P3500 Van	107	Sonata	121
F-250 Pickup	87	R1500 Pickup	107	Tiburon	121
F-250 Super Duty Pickup	89	R1500 Suburban	107	Veloster	122
F-350 Pickup	91	R2500 Pickup	107	XG300	122
F-350 Super Duty Pickup	92	R2500 Suburban	107	XG350	122
F-450 Super Duty Pickup	93	R3500 Pickup	107	Hyundai Truck	
F-550 Super Duty Pickup	93	S15 Jimmy	107	Santa Fe	121
Ranchero	96	S15 Pickup	108	Tucson	121
Ranger	97	Sierra 1500	110	Infiniti Car	
Freightliner Van		Sierra 1500 HD	110	G20	122
Sprinter 2500	99	Sierra 2500	111	G25	122
Sprinter 3500	99	Sierra 2500 HD	111	G35	122
Geo Car		Sierra 3500	111	G37	122
Metro	99	Sierra 3500 HD	112	I30	123
Prizm	99	Sierra C3	112	I35	123
Spectrum	99	Sonoma	112	Infiniti Truck	
Storm	100	Sprint	112	FX35	122
Geo Truck		Suburban	112	FX45	122
Tracker	100	Syclone	112	QX4	123
GMC Van		Terrain	112	International Truck	
Safari	108	Tracker	113	Scout II	123
Savana 1500	109	Typhoon	113	Isuzu Car	
Savana 2500	109	V1500 Pickup	113	I-Mark	124
Savana 3500	110	V1500 Suburban	113	Impulse	125
GMC Truck		V2500 Pickup	113	Stylus	126
Acadia	100	V2500 Suburban	113	Isuzu Van	
C15/C1500 Pickup	101	V3500 Pickup	113	Oasis	125
C15/C1500 Suburban	101	Yukon	114	Isuzu Truck	
C1500 Pickup	101	Yukon XL 1500	114	Amigo	123
C1500 Suburban	101	Yukon XL 2500	115	Ascender	123
C25/C2500 Pickup	102	Honda Car		Axiom	124
C25/C2500 Suburban	102	Accord	115	Hombre	124
C2500 Pickup	102	Accord Crosstour	116	i-280	124
C2500 Suburban	102	Civic	116	i-290	124
C35/C3500 Pickup	102	Civic del Sol	117	i-350	124
C3500 Pickup	103	CRX	117	i-370	124
C4500 Topkick	103	Fit	118	Pickup	125
Caballero	103	Insight	118		
		Prelude	119		

MAKE / MODEL INDEX

Model	Page	Model	Page	Model	Page
Isuzu Truck		Lexus Truck		Mercury Car	
Rodeo	125	RX350	134	Montego	144
Rodeo Sport	126	Lincoln Car		Mystique	145
Trooper	126	Continental	134	Sable	145
VehiCROSS	126	LS	134	Topaz	145
Jaguar Car		Mark VII	135	Tracer	146
S-Type	126	Mark VIII	135	Zephyr	146
Jeep Truck		MKZ	135	Mercury Van	
Cherokee	127	Town Car	136	Monterey	144
CJ5	127	Versailles	136	Villager	146
CJ6	127	Zephyr	136	Mercury Truck	
CJ7	127	Lincoln Truck		Mariner	144
Comanche	127	Aviator	134	Mountaineer	145
Commander	127	Blackwood	134	Mini Car	
Compass	127	Mark LT	135	Cooper	146
Grand Cherokee	128	MX	135	Mitsubishi Car	
Grand Wagoneer	128	Navigator	136	3000GT	147
J10	128	Mazda Car		Cordia	147
J20	128	3	136	Diamante	147
Jeepster	128	323	137	Eclipse	147
Patriot	129	6	137	Expo	148
Scrambler	129	626	137	Galant	148
TJ	129	929	138	Lancer	148
Wagoneer	129	GLC	140	Mirage	148
Wrangler	130	MX-3	140	Precis	149
Kia Car		MX-6	140	Sigma	149
Amanti	130	Protege	141	Tredia	149
Forte	130	Protege5	141	Mitsubishi Truck	
Magentis	130	RX-7	142	Endeavor	148
Optima	130	Mazda Van		Montero	148
Rio	131	5	137	Outlander	149
Rio5	131	MPV	140	Nissan Car	
Rondo	131	Mazda Truck		200SX	149
Sephia	131	B2300	138	240SX	149
Soul	131	B2500	138	370Z	149
Spectra	133	B3000	139	Altima	149
Kia Van		B4000	139	Axxess	150
Sedona	131	CX-9	139	Cube	150
Kia Truck		Navajo	141	Leaf	150
Sportage	133	Tribute	142	Maxima	151
Land Rover Truck		Mercedes-Benz Car		Multi	151
Freelander	133	C200	142	NX	151
Lexus Car		E200	142	Pulsar	152
ES250	133	E250	142	Pulsar NX	152
ES300	133	E300	142	Sentra	152
ES330	133	Mercury Car		Stanza	153
ES350	133	Capri	143	Versa	153
GS300	133	Comet	143	Nissan Van	
GS350	133	Cougar	143	Quest	152
IS250	133	Grand Marquis	143	Nissan Truck	
IS350	133	LN7	143	Armada	150
Lexus Truck		Lynx	144	Frontier	150
GX460	133	Marauder	144	Juke	150
GX470	133	Marquis	144	Murano	151
RX300	133	Milan	144	Pathfinder	151
RX330	134	Monarch	144	Titan	153

MAKE / MODEL INDEX

Model	Page	Model	Page	Model	Page
Nissan Truck		Plymouth Car		Renault Car	
Xterra	153	Sundance	170	Alliance	186
Oldsmobile Car		Turismo	170	Encore	186
442	153	Valiant	171	Saab Car	
88	154	Plymouth Van		900	186
98	155	Grand Voyager	167	9000	186
Achieva	155	Voyager	171	9-3	186
Alero	156	Plymouth Truck		Saturn Car	
Aurora	156	PB100 Van	169	Astra	186
Calais	157	PB200 Van	169	Aura	186
Custom Cruiser	157	PB300 Van	169	Ion	187
Cutlass	158	Trailduster	170	L Series	187
Cutlass Calais	159	Pontiac Car		LS Series	187
Cutlass Ciera	159	6000	171	LW Series	187
Cutlass Cruiser	159	Acadian	172	SC Series	188
Cutlass Salon	160	Bonneville	173	SL Series	188
Cutlass Supreme	161	Catalina	174	SW Series	188
Cutlass Tiara	161	Fiero	174	Saturn Van	
Delta 88	162	Firebird	175	Relay	188
F85	162	Firefly	175	Saturn Truck	
Firenza	162	G5	175	Outlook	188
Intrigue	163	G6	176	Vue	189
LSS	163	G8	176	Scion Car	
Omega	163	Grand Am	176	FR-S	189
Regency	164	Grand LeMans	177	iQ	189
Toronado	164	Grand Prix	178	tC	189
Vista Cruiser	165	Grandville	179	xA	189
Oldsmobile Van		GTO	179	xD	190
Silhouette	164	J2000	179	Scion Van	
Oldsmobile Truck		J2000 Sunbird	180	xB	190
Bravada	156	LeMans	181	Subaru Car	
Plymouth Car		Parisienne	181	BRZ	190
Acclaim	165	Phoenix	182	Forester	190
Barracuda	165	Pursuit	182	Impreza	191
Belvedere	165	Safari	182	Legacy	191
Belvedere II	166	Sunbird	182	Outback	191
Breeze	166	Sunburst	183	XV Crosstrek	191
Caravelle	166	Sunfire	183	Subaru Truck	
Champ	166	T1000	183	Baja	190
Colt	166	Tempest	184	Suzuki Car	
Cuda	166	Ventura	184	Aerio	191
Duster	166	Vibe	184	Esteem	192
Fury	167	Wave	185	Forenza	192
Fury I	167	Pontiac Van		Reno	192
Fury II	167	Montana	181	Swift	192
Fury III	167	Trans Sport	184	Swift+	193
Gran Fury	167	Pontiac Truck		SX4	193
GTX	168	Aztek	172	Verona	193
Horizon	168	Torrent	184	Suzuki Truck	
Laser	168	Porsche Car		Grand Vitara	192
Neon	169	924	185	Sidekick	192
Reliant	169	944	185	Vitara	193
Roadrunner	169	Ram Truck		X-90	193
Satellite	170	1500	185	XL-7	193
Savoy	170	2500	185		
Scamp	170	3500	185		

MAKE / MODEL INDEX

Model	Page	Model	Page
Toyota Car		Volvo Car	
Avalon	194	S60	207
Camry	194	S70	207
Celica	195	S80	208
Corolla	196	S90	208
Cressida	196	V40	208
Echo	196	V50	208
Matrix	197	V70	208
MR2	197	V90	208
MR2 Spyder	197	Volvo Truck	
Paseo	197	XC70	208
Prius	198	XC90	208
Prius C	198		
Prius V	198		
Solara	199		
Tercel	199		
Venza	200		
Yaris	200		
Toyota Van			
Previa	198		
Sienna	198		
Toyota Truck			
4Runner	193		
FJ Cruiser	196		
Highlander	197		
Pickup	198		
RAV4	198		
T100	199		
Tacoma	199		
Volkswagen Car			
Beetle	200		
Cabrio	200		
Cabriolet	200		
Corrado	201		
Dasher	201		
Fox	201		
Golf	202		
Golf City	203		
GTI	203		
Jetta	203		
Passat	204		
Passat CC	205		
Quantum	205		
R32	205		
Rabbit	205		
Rabbit Convertible	206		
Scirocco	206		
Volkswagen Van			
Routan	206		
Volkswagen Truck			
Rabbit Pickup	206		
Volvo Car			
850	207		
C30	207		
C70	207		
S40	207		

Part Label	Part No.	Align Range	Qualifier	Qty
CL				
Front				
2003-2001				
Ball Joint	K90492	±1°	Upper; adjustable	2
Caster Shim	K90211		1/8" thick; 12 shims per package	2
1999-1997				
Ball Joint	K90490	±1°	Upper; adjustable	2
Camber Adj. Anchor Bolt	K90143	1 3/4°	Upper Control Arm	2
Camber Kit	K100066	3/4°	Upper; Includes 2 bushings, 2 cams, and lube pouch	2
Caster Shim	K90211		1/8" thick; 12 shims per package	2
Rear				
2003-2001				
Control Arm	K100067	camber -2° to +4°	Upper; adjustable; Incl. Ball Joint	2
Lateral Arm	K90204	camber -1-1/2° to +3°	Upper; adjustable; Incl. 2 complete adjustable arms and hardware	2
1999-1997				
Camber Shim	K90210	±1 1/4 °	Incl. 4 shims and 2 bolts	2
EL				
Front				
2000-1997				
Ball Joint	K90492	±1°	Upper; adjustable	2
Rear				
2000-1997				
Camber Shim	K90210	±1 1/4 °	Incl. 4 shims and 2 bolts	2
Control Arm	K100068	camber -2° to +5°	Upper; adjustable	2
ILX				
Rear				
2014-2013				
Control Arm	K100049	camber ±3°	Upper; adjustable	2
Integra				
Front				
2001-1990				
Ball Joint	K90492	±1°	Upper; adjustable	2
Camber Adj. Anchor Bolt	K90143	1 3/4°	Upper Control Arm	2
Rear				
2001-1990				
Camber Shim	K90210	±1 1/4 °	Incl. 4 shims and 2 bolts	2
Control Arm	K100068	camber -2° to +5°	Upper; adjustable	2
1989-1986				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Legend				
Front				
1995-1991				
Ball Joint	K90492	±1°	Upper; adjustable	2
Camber Adj. Anchor Bolt	K90143	1 3/4°	Upper Control Arm	2
Camber Kit	K100066	3/4°	Upper; Includes 2 bushings, 2 cams, and lube pouch	2
Rear				
1995-1991				
Camber Shim	K90210	±1 1/4 °	Incl. 4 shims and 2 bolts	2

Acura

Part Label	Part No.	Align Range	Qualifier	Qty
MDX				
Front				
2008-2001				
Cam Bolt Kit	K7436	±1-3/4°	"Magna Cam"; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Rear				
2014-2007				
Control Arm	K100122	camber ±2°	Upper; adjustable	2
2006-2001				
Control Arm	K100106	camber -2° to +4°	Upper; adjustable; Incl. Ball Joint	2
RDX				
Front				
2014-2007				
Cam Bolt Kit	K7436	±1-3/4°	"Magna Cam"; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
RL				
Front				
2008-2005				
Camber Adj. Anchor Bolt	K90143	1 3/4°	Upper Control Arm	2
2004-1996				
Ball Joint	K90492	±1°	Upper; adjustable	2
Camber Adj. Anchor Bolt	K90143	1 3/4°	Upper Control Arm	2
Rear				
2008-1996				
Control Arm	K100067	camber -2° to +4°	Upper; adjustable; Incl. Ball Joint	2
RSX				
Front				
2006-2003				
Cam Bolt Kit	K7436	±1-3/4°	"Magna Cam"; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
2002-2002				
Cam Bolt Kit	K7436	±1-3/4°	From Mid Year 2002; "Magna Cam"; 16mm bolts	2
Cam Bolt Kit	K90350	±1-3/4°	To Mid Year 2002; Pending Supersession to K90473	2
Cam Bolt Kit	K90473	±1-3/4°	To Mid Year 2002; "Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	From Mid Year 2002; "Axis Cam"; 16mm bolts	2
Rear				
2006-2002				
Lateral Arm	K90351	camber -2° to +3°	adjustable	2
TL				
Front				
2014-1999				
Ball Joint	K90492	±1°	Upper; adjustable	2
Caster Shim	K90211		1/8" thick; 12 shims per package	2
1998-1996				
Ball Joint	K90490	±1°	L5 2.5L; Upper; adjustable	2
Ball Joint	K90492	±1°	V6 3.2L; Upper; adjustable	2
Camber Adj. Anchor Bolt	K90143	1 3/4°	Upper Control Arm	2
Camber Kit	K100066	3/4°	L5 2.5L; Upper; Includes 2 bushings, 2 cams, and lube pouch	2
Caster Shim	K90211		1/8" thick; 12 shims per package	2
1995-1995				
Ball Joint	K90490	±1°	Upper; adjustable	2
Camber Adj. Anchor Bolt	K90143	1 3/4°	Upper Control Arm	2
Caster Shim	K90211		1/8" thick; 12 shims per package	2

Acura

Part Label	Part No.	Align Range	Qualifier	Qty
TL				
Rear				
2014-2009				
Control Arm	K100110	±1°	Lower Rearward; adjustable	2
2008-2004				
Lateral Arm	K90706	camber -1-1/2° to +3°	Lower; adjustable; repl. OEM non adj. susp. Arms	2
2003-1999				
Control Arm	K100067	camber -2° to +4°	Upper; adjustable; Incl. Ball Joint	2
Lateral Arm	K90204	camber -1-1/2° to +3°	Upper; adjustable; Incl. 2 complete adjustable arms and hardware	2
1998-1995				
Camber Shim	K90210	±1 1/4 °	Incl. 4 shims and 2 bolts	2
TSX				
Front				
2014-2004				
Ball Joint	K90492	±1°	Upper; adjustable	2
Rear				
2014-2009				
Control Arm	K100110	±1°	Lower Rearward; adjustable	2
2008-2004				
Control Arm	K100106	camber -2° to +4°	Upper; adjustable; Incl. Ball Joint	2
Lateral Arm	K90706	camber -1-1/2° to +3°	Lower; adjustable; repl. OEM non adj. susp. Arms	2
Vigor				
Front				
1994-1992				
Ball Joint	K90490	±1°	Upper; adjustable	2
Camber Adj. Anchor Bolt	K90143	1 3/4°	Upper Control Arm	2
Camber Kit	K100066	3/4°	Upper; Includes 2 bushings, 2 cams, and lube pouch	2
Caster Shim	K90211		1/8" thick; 12 shims per package	2
Rear				
1994-1992				
Camber Shim	K90210	±1 1/4 °	Incl. 4 shims and 2 bolts	2

Audi

Part Label	Part No.	Align Range	Qualifier	Qty
100				
Rear				
1994-1989				
Camber/Toe - Universal Shim	K916	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K994 Series	1/4° to 1-1/2°	Full Contact Shims; K994-1 (1/4), K994-2 (1/2), K994-3 (3/4), K994-4 (1), K994-5 (1-1/4), K994-6 (1-1/2)	2
200				
Rear				
1991-1989				
Camber/Toe - Universal Shim	K916	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K994 Series	1/4° to 1-1/2°	Full Contact Shims; K994-1 (1/4), K994-2 (1/2), K994-3 (3/4), K994-4 (1), K994-5 (1-1/4), K994-6 (1-1/2)	2

Audi

Part Label	Part No.	Align Range	Qualifier	Qty
4000				
Rear				
1983-1980				
Camber/Toe - Universal Shim	K915	$\pm 1-1/2^{\circ}$	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8" or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4" or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4" or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2" or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4" to 1-1/2"	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
5000				
Rear				
1988-1978				
Camber/Toe - Universal Shim	K916	$\pm 1-1/2^{\circ}$	universal full contact dual angle shim	2
Camber/Toe Shim	K994 Series	1/4" to 1-1/2"	Full Contact Shims; K994-1 (1/4), K994-2 (1/2), K994-3 (3/4), K994-4 (1), K994-5 (1-1/4), K994-6 (1-1/2)	2
80				
Rear				
1992-1988				
Camber/Toe - Universal Shim	K915	$\pm 1-1/2^{\circ}$	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8" or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4" or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4" or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2" or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4" to 1-1/2"	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
90				
Rear				
1995-1988				
Camber/Toe - Universal Shim	K915	$\pm 1-1/2^{\circ}$	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8" or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4" or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4" or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2" or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4" to 1-1/2"	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
A4				
Front				
2008-1996				
Control Arm	K100092	camber $\pm 1-1/2^{\circ}$; caster $\pm 1-1/2^{\circ}$	Upper; adjustable; set of two adjustable arms; replace factory fixed-length arms; Incl. Ball Joint	2
A6				
Front				
2004-1998				
Control Arm	K100092	camber $\pm 1-1/2^{\circ}$; caster $\pm 1-1/2^{\circ}$	Upper; adjustable; set of two adjustable arms; replace factory fixed-length arms; Incl. Ball Joint	2
Cabriolet				
Front				
1994-1994				
Cam Bolt Kit	K5330	$\pm 1-3/4^{\circ}$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1-3/4^{\circ}$	"Axis Cam"; 14mm bolts	2

Part Label	Part No.	Align Range	Qualifier	Qty
Coupe				
Rear				
1987-1981				
Camber/Toe - Universal Shim	K915	$\pm 1\text{-}1/2^\circ$	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	$3/8^\circ$ or $3/32''$	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	$3/4^\circ$ or $3/16''$	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	$1/4^\circ$ or $1/16''$	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	$1/2^\circ$ or $1/8''$	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	$1/4^\circ$ to $1\text{-}1/2^\circ$	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Fox				
Rear				
1979-1973				
Camber/Toe - Universal Shim	K915	$\pm 1\text{-}1/2^\circ$	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	$3/8^\circ$ or $3/32''$	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	$3/4^\circ$ or $3/16''$	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	$1/4^\circ$ or $1/16''$	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	$1/2^\circ$ or $1/8''$	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	$1/4^\circ$ to $1\text{-}1/2^\circ$	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
RS6				
Front				
2004-2003				
Control Arm	K100092	camber $\pm 1\text{-}1/2^\circ$; caster $\pm 1\text{-}1/2^\circ$	Upper; adjustable; set of two adjustable arms; replace factory fixed-length arms; Incl. Ball Joint	2
S4				
Front				
2006-2000				
Control Arm	K100092	camber $\pm 1\text{-}1/2^\circ$; caster $\pm 1\text{-}1/2^\circ$	Upper; adjustable; set of two adjustable arms; replace factory fixed-length arms; Incl. Ball Joint	2
S6				
Front				
2003-2002				
Control Arm	K100092	camber $\pm 1\text{-}1/2^\circ$; caster $\pm 1\text{-}1/2^\circ$	Upper; adjustable; set of two adjustable arms; replace factory fixed-length arms; Incl. Ball Joint	2
TT				
Front				
2006-2000				
Strut Mount	K90488	$\pm 1^\circ$		2
Rear				
2006-2000				
Camber Shim	K90483 to K90486	$\pm 1^\circ$	K90483 (+1/2), K90484 (+1), K90485 (-1/2), K90486 (-1)	2
Camber/Toe Shim Kit Assort.	K90478		Assortment incl. T40258 shim wrench and 2 of each toe shim K90479, K90480, K90481, K90482, 2 of each camber shim K90483, K90484, K90485, K90486	1
Spacer Multi-Pack	K90487		spacer set contains 4 sizes (2 of each) .12", .15", .18", .21", used to align caliper to rotor after installation of a camber shim	1
Toe Shim	K90479 to K90482	$1/8^\circ$ to $1/2^\circ$	K90479 (1/8), K90480 (1/4), K90481 (3/8), K90482 (1/2)	2
TT Quattro				
Front				
2006-2000				
Strut Mount	K90488	$\pm 1^\circ$		2

Buick

Part Label	Part No.	Align Range	Qualifier	Qty
Allure				
Front				
2010-2005				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2010-2005				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Apollo				
Front				
1975-1975				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1974-1973				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
Centurion				
Front				
1973-1971				
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
Century				
Front				
2005-1997				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1996-1982				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1981-1978				
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
1977-1974				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1973				
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2

Part Label	Part No.	Align Range	Qualifier	Qty
Century				
Rear				
2005-1997				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1996-1982				
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Commercial Chassis				
Front				
1996-1991				
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
Electra				
Front				
1990-1990				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1989-1985				
Cam Bolt Kit	K100024	±1 3/4°	FWD; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	FWD; "Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	FWD; "Magna Cam"; 16mm bolts	2
Control Arm Shaft Kit	K6210		RWD; Upper; provides additional positive camber adjustment	2
1984-1980				
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
1979-1974				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1971				
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
Rear				
1990-1985				
Cam Bolt Kit	K100024	±1 3/4°	FWD; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	FWD; "Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	FWD; "Magna Cam"; 16mm bolts	2
Camber/Toe - Universal Shim	K918	±1-1/2°	FWD; universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8° or 3/32"	FWD; half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	FWD; half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	FWD; half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	FWD; half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	FWD; Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Enclave				
Front				
2014-2008				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2

Buick

Part Label	Part No.	Align Range	Qualifier	Qty
Enclave				
Rear				
2014-2008				
Cam Bolt Kit	K100142	$\pm 1-1/2^{\circ}$		2
Estate Wagon				
Front				
1983-1980				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
1979-1974				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1971				
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
LaCrosse				
Front				
2014-2005				
Cam Bolt Kit	K90473	$\pm 1-3/4^{\circ}$	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	$\pm 1-3/4^{\circ}$	"Magna Cam"; 12mm bolts	2
Rear				
2009-2005				
Cam Bolt Kit	K5330	$\pm 1-3/4^{\circ}$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1-3/4^{\circ}$	"Axis Cam"; 14mm bolts	2

Part Label	Part No.	Align Range	Qualifier	Qty
LeSabre				
Front				
2005-1994				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1993-1991				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
1990-1986				
Cam Bolt Kit	K100024	±1 3/4°	FWD; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	FWD; "Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	FWD; "Magna Cam"; 16mm bolts	2
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6210		RWD; Upper; provides additional positive camber adjustment	2
1985-1980				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
1979-1976				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1975-1974				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1971				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1

Buick

Part Label	Part No.	Align Range	Qualifier	Qty
LeSabre				
Front				
1973-1971				
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
Rear				
2005-2000				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Camber Shim	K6661 Series	1/4° to 1°	K6661-1 (1/4), K6661-2 (1/2), K6661-3 (3/4). K6661-4 (1)	2
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
1999-1991				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
1990-1986				
Cam Bolt Kit	K100024	±1 3/4°	FWD; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	FWD; "Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	FWD; "Magna Cam"; 16mm bolts	2
Camber/Toe - Universal Shim	K918	±1-1/2°	FWD; universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8° or 3/32"	FWD; half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	FWD; half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	FWD; half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	FWD; half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	FWD; Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Lucerne				
Front				
2011-2006				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
2011-2006				
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Opel				
Front				
1979-1976				
Ball Joint	K5292	±1°	Upper; adjustable	2

Part Label	Part No.	Align Range	Qualifier	Qty
Park Avenue				
Front				
2005-1991				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
2005-1997				
Camber Shim	K6661 Series	1/4° to 1°	K6661-1 (1/4), K6661-2 (1/2), K6661-3 (3/4), K6661-4 (1)	2
1996-1991				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8" or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4" or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4" or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2" or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Reatta				
Front				
1991-1988				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
1991-1988				
Camber Shim	K6624 to K6627	1/4° to 1°	K6624 (1/4), K6625 (1/2), K6626 (3/4), K6627 (1)	2
Camber Shim Assort.	K6623		assortment contains 2 Each of K6624, K6625, K6626 & K6627	2

Buick

Part Label	Part No.	Align Range	Qualifier	Qty
Regal				
Front				
2013-2011				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
2004-1997				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1996-1988				
Camber Shim	K6478 to K6481	1/4° to 1°	K6478 (1/4), K6479 (1/2), K6480 (3/4), K6481 (1)	2
1987-1978				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
1977-1974				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1973				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
Rear				
2004-1997				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1996-1988				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K6375	±3/4°		2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rendezvous				
Front				
2007-2002				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2007-2002				
Camber/Toe - Universal Shim	K100143	±1-1/2°	FWD; universal full contact dual angle shim	2

Part Label	Part No.	Align Range	Qualifier	Qty
Riviera				
Front				
1999-1986				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1985-1979				
Cam Bolt Kit	K5266	±1-1/8°	Upper	2
Control Arm Offset Bushing Kit	K7104		Upper; eccentric bushing kit provides additional camber adjustment	2
1978-1974				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1971				
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
Rear				
1993-1986				
Camber Shim	K6624 to K6627	1/4° to 1°	K6624 (1/4), K6625 (1/2), K6626 (3/4), K6627 (1)	2
Camber Shim Assort.	K6623		assortment contains 2 Each of K6624, K6625, K6626 & K6627	2
1985-1979				
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Roadmaster				
Front				
1996-1991				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
Skyhawk				
Front				
1989-1982				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
1989-1982				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2

Buick

Part Label	Part No.	Align Range	Qualifier	Qty
Skylark				
Front				
1998-1996				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1995-1980				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1979-1976				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1975-1975				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1972-1966				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
1965-1964				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Rear				
1998-1980				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Somerset				
Front				
1987-1986				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2

Part Label	Part No.	Align Range	Qualifier	Qty
Somerset				
Rear				
1987-1986				
Camber/Toe - Universal Shim	K917	$\pm 1\text{-}1/2^\circ$	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	$3/8^\circ$ or $3/32''$	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	$3/4^\circ$ or $3/16''$	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	$1/4^\circ$ or $1/16''$	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	$1/2^\circ$ or $1/8''$	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	$1/4^\circ$ to $1\text{-}1/2^\circ$	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Somerset Regal				
Front				
1985-1985				
Cam Bolt Kit	K100024	$\pm 1\text{ }3/4^\circ$	16mm bolts	2
Cam Bolt Kit	K90476	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 16mm bolts	2
Rear				
1985-1985				
Camber/Toe - Universal Shim	K917	$\pm 1\text{-}1/2^\circ$	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	$3/8^\circ$ or $3/32''$	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	$3/4^\circ$ or $3/16''$	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	$1/4^\circ$ or $1/16''$	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	$1/2^\circ$ or $1/8''$	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	$1/4^\circ$ to $1\text{-}1/2^\circ$	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Special				
Front				
1969-1966				
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
Terraza				
Front				
2007-2005				
Cam Bolt Kit	K5330	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 14mm bolts	2
Rear				
2007-2005				
Camber/Toe - Universal Shim	K918	$\pm 1\text{-}1/2^\circ$	FWD; universal full contact dual angle shim	2
Camber/Toe Shim	K90149	$3/8^\circ$ or $3/32''$	FWD; half shim; 20 shims per package	1
Camber/Toe Shim	K90150	$3/4^\circ$ or $3/16''$	FWD; half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	$1/4^\circ$ or $1/16''$	FWD; half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	$1/2^\circ$ or $1/8''$	FWD; half shim; 20 shims per package	1
Verano				
Front				
2014-2012				
Cam Bolt Kit	K90473	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 12mm bolts	2

Cadillac

Part Label	Part No.	Align Range	Qualifier	Qty
60 Special				
Front				
1993-1993				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
1993-1993				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Allante				
Front				
1993-1987				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
1993-1987				
Camber Shim	K6624 to K6627	1/4° to 1°	K6624 (1/4), K6625 (1/2), K6626 (3/4), K6627 (1)	2
Camber Shim Assort.	K6623		assortment contains 2 Each of K6624, K6625, K6626 & K6627	2
Brougham				
Front				
1992-1987				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
Catera				
Front				
2001-1997				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cimarron				
Front				
1988-1982				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
1988-1982				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2

Part Label	Part No.	Align Range	Qualifier	Qty
Commercial Chassis				
Front				
1996-1994				
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
1993-1992				
Cam Bolt Kit	K100024	$\pm 1\ 3/4^\circ$	FWD; 16mm bolts	2
Cam Bolt Kit	K90476	$\pm 1\text{-}3/4^\circ$	FWD; "Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	$\pm 1\text{-}3/4^\circ$	FWD; "Magna Cam"; 16mm bolts	2
Control Arm Shaft Kit	K6210		RWD; Upper; provides additional positive camber adjustment	2
1991-1987				
Cam Bolt Kit	K100024	$\pm 1\ 3/4^\circ$	16mm bolts	2
Cam Bolt Kit	K90476	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 16mm bolts	2
Rear				
1993-1992				
Cam Bolt Kit	K100024	$\pm 1\ 3/4^\circ$	FWD; 16mm bolts	2
Cam Bolt Kit	K90476	$\pm 1\text{-}3/4^\circ$	FWD; "Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	$\pm 1\text{-}3/4^\circ$	FWD; "Magna Cam"; 16mm bolts	2
1991-1987				
Cam Bolt Kit	K100024	$\pm 1\ 3/4^\circ$	16mm bolts	2
Cam Bolt Kit	K90476	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 16mm bolts	2
DeVille				
Front				
2005-1985				
Cam Bolt Kit	K100024	$\pm 1\ 3/4^\circ$	16mm bolts	2
Cam Bolt Kit	K90476	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 16mm bolts	2
1984-1980				
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
1979-1977				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
Rear				
2005-2000				
Camber Shim	K6661 Series	$1/4^\circ$ to 1°	K6661-1 (1/4), K6661-2 (1/2), K6661-3 (3/4), K6661-4 (1)	2
Camber/Toe - Universal Shim	K100143	$\pm 1\text{-}1/2^\circ$	universal full contact dual angle shim	2
1993-1985				
Cam Bolt Kit	K100024	$\pm 1\ 3/4^\circ$	16mm bolts	2
Cam Bolt Kit	K90476	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 16mm bolts	2
DTS				
Rear				
2011-2006				
Camber/Toe - Universal Shim	K100143	$\pm 1\text{-}1/2^\circ$	universal full contact dual angle shim	2

Cadillac

Part Label	Part No.	Align Range	Qualifier	Qty
Eldorado				
Front				
2002-1986				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1985-1979				
Control Arm Offset Bushing Kit	K7104		Upper; eccentric bushing kit provides additional camber adjustment	2
1985-1967				
Cam Bolt Kit	K5266	±1-1/8°	Upper	2
Rear				
1992-1986				
Camber Shim	K6624 to K6627	1/4° to 1°	K6624 (1/4), K6625 (1/2), K6626 (3/4), K6627 (1)	2
Camber Shim Assort.	K6623		assortment contains 2 Each of K6624, K6625, K6626 & K6627	2
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
1985-1979				
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Escalade				
Front				
2014-2007				
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2006-2002				
Ball Joint	K100116	±3°	Upper; adjustable	2
Camber Bushing	K6669	±1 3/4°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	w/6 Lug; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
2000-1999				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
Escalade ESV				
Front				
2014-2007				
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2006-2003				
Ball Joint	K100116	±3°	Upper; adjustable	2
Camber Bushing	K6669	±1 3/4°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	w/6 Lug; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1

Part Label	Part No.	Align Range	Qualifier	Qty
Escalade EXT				
Front				
2013-2007				
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2006-2002				
Ball Joint	K100116	±3°	Upper; adjustable	2
Camber Bushing	K6669	±1 3/4°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	w/6 Lug; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Fleetwood				
Front				
1996-1993				
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
1992-1987				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1986-1985				
Cam Bolt Kit	K100024	±1 3/4°	FWD; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	FWD; "Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	FWD; "Magna Cam"; 16mm bolts	2
Control Arm Shaft Kit	K6210		RWD; Upper; provides additional positive camber adjustment	2
1984-1980				
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
1979-1977				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
Rear				
1992-1987				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1986-1985				
Cam Bolt Kit	K100024	±1 3/4°	FWD; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	FWD; "Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	FWD; "Magna Cam"; 16mm bolts	2
Seville				
Front				
2004-1986				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1985-1983				
Cam Bolt Kit	K5266	±1-1/8°	Upper	2
1982-1980				
Cam Bolt Kit	K5266	±1-1/8°	Upper	2
Control Arm Offset Bushing Kit	K7104		Upper; eccentric bushing kit provides additional camber adjustment	2
1979-1976				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2

Cadillac



Part Label	Part No.	Align Range	Qualifier	Qty
Seville				
Rear				
2004-1998				
Camber Shim	K6661 Series	1/4° to 1°	K6661-1 (1/4), K6661-2 (1/2), K6661-3 (3/4). K6661-4 (1)	2
1992-1986				
Camber Shim	K6624 to K6627	1/4° to 1°	K6624 (1/4), K6625 (1/2), K6626 (3/4), K6627 (1)	2
Camber Shim Assort.	K6623		assortment contains 2 Each of K6624, K6625, K6626 & K6627	2
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
1985-1980				
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
SRX				
Rear				
2014-2010				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
STS				
Front				
2011-2005				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
2011-2005				
Camber Shim	K6661 Series	1/4° to 1°	K6661-1 (1/4), K6661-2 (1/2), K6661-3 (3/4). K6661-4 (1)	2

Part Label	Part No.	Align Range	Qualifier	Qty
Astro				
Front				
2005-1990				
Cam Bolt Kit	K6302	±1-1/8°	AWD; Upper	2
Caster/Camber Shim	K957 to K960		RWD; Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		RWD; Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		RWD; Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6449		RWD; Upper; provides additional positive camber adjustment	2
1989-1985				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
Avalanche				
Front				
2013-2011				
Ball Joint	K100108	±3°	Upper; adjustable	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2010-2007				
Ball Joint	K100108	±3°	Upper; adjustable	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Avalanche 1500				
Front				
2006-2002				
Ball Joint	K100116	±3°	Upper; adjustable	2
Camber Bushing	K6669	±1 3/4°	Upper	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	w/6 Lug; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Avalanche 2500				
Front				
2006-2002				
Ball Joint	K100108	±3°	Upper; adjustable	2
Camber Bushing	K6670	±1°	Upper	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Aveo				
Front				
2011-2004				
Cam Bolt Kit	K6699	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2

Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
Aveo				
Rear				
2011-2004				
Camber/Toe - Universal Shim	K916	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K994 Series	1/4° to 1-1/2°	Full Contact Shims; K994-1 (1/4), K994-2 (1/2), K994-3 (3/4), K994-4 (1), K994-5 (1-1/4), K994-6 (1-1/2)	2
Aveo5				
Front				
2009-2006				
Cam Bolt Kit	K6699	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Rear				
2009-2006				
Camber/Toe - Universal Shim	K916	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K994 Series	1/4° to 1-1/2°	Full Contact Shims; K994-1 (1/4), K994-2 (1/2), K994-3 (3/4), K994-4 (1), K994-5 (1-1/4), K994-6 (1-1/2)	2
Bel Air				
Front				
1981-1981				
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
1975-1971				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1970-1970				
Control Arm Shaft Kit	K6104		Upper; provides additional positive camber adjustment	2
Beretta				
Front				
1996-1996				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1995-1987				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
1996-1987				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Biscayne				
Front				
1972-1971				
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
1970-1965				
Control Arm Shaft Kit	K6104		Upper; provides additional positive camber adjustment	2

Part Label	Part No.	Align Range	Qualifier	Qty
Blazer				
Front				
2005-1995				
Cam Bolt Kit	K6367	±1-1/8°	Upper	2
Control Arm Offset Bushing Kit	K7104		4WD; Upper; eccentric bushing kit provides additional camber adjustment	2
Control Arm Shaft Kit	K6218		RWD; Upper; provides additional positive camber adjustment	2
1994-1992				
Cam Bolt Kit	K6302	±1-1/8°	4WD; Upper	2
1991-1989				
Camber Shim	K974 Series	3/8° to 1-1/2°	4WD; K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	4WD; K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
1988-1987				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
1974-1973				
Camber Shim	K974 Series	3/8° to 1-1/2°	4WD; K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	4WD; K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
Control Arm Shaft Kit	K6184		RWD; Upper; provides additional positive camber adjustment	2
1972-1970				
Camber Shim	K974 Series	3/8° to 1-1/2°	4WD; K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	4WD; K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
C10 Pickup				
Front				
1986-1975				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6184		Upper; provides additional positive camber adjustment	2
1974-1973				
Control Arm Shaft Kit	K6184		Upper; provides additional positive camber adjustment	2
C10/C1500 Suburban				
Front				
1999-1992				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
1986-1973				
Control Arm Shaft Kit	K6184		Upper; provides additional positive camber adjustment	2
C1500 Pickup				
Front				
1999-1988				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2

Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
C20 Pickup				
Front				
1986-1965				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
1964-1963				
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
C20/C2500 Suburban				
Front				
1999-1992				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
1986-1968				
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
C2500 Pickup				
Front				
2000-1988				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
C30 Pickup				
Front				
1986-1965				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
1964-1963				
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
C3500 Pickup				
Front				
2000-1988				
Cam Bolt Kit	K6302	±1-1/8°	Upper; w/Independent Front Suspension	2
C4500 Kodiak				
Front				
2009-2005				
Caster/Camber - Universal Bushing	K80155	±2-1/2°	Ultra Range; Alternative to K80128 Series	1
Caster/Camber Bushing	K80128 to K80136	0° to 2°	K80128 (0), K80129 (1/4), K80130 (1/2), K80131 (3/4), K80132 (1), K80133 (1-1/4), K80134 (1-1/2), K80135 (1-3/4), K80136 (2); Alternative to K80155 Ultra Range Universal Bushing	2

Part Label	Part No.	Align Range	Qualifier	Qty
Camaro				
Front				
2014-2010				
Cam Bolt Kit	K100024	$\pm 1\ 3/4^\circ$	16mm bolts	2
Cam Bolt Kit	K90476	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 16mm bolts	2
1992-1982				
Cam Bolt Kit	K100024	$\pm 1\ 3/4^\circ$	16mm bolts	2
Cam Bolt Kit	K90476	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 16mm bolts	2
1981-1980				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
1979-1974				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1970				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
1969-1967				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
Rear				
2014-2010				
Camber/Toe Cam Bolt Kit	K100141	camber $\pm 1^\circ$; toe $\pm 2^\circ$		2

Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
Caprice				
Front				
2014-2012				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
1996-1980				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
1979-1974				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1971				
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
1970-1966				
Control Arm Shaft Kit	K6104		Upper; provides additional positive camber adjustment	2
Rear				
2014-2012				
Camber/Toe Cam Bolt Kit	K100141	camber ±1°; toe ±2°		2
Captiva Sport				
Front				
2014-2012				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cavalier				
Front				
2005-1995				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1994-1982				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
2005-1982				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2

Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
Celebrity				
Front				
1990-1982				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
1990-1982				
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Chevelle				
Front				
1973-1973				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
1972-1964				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
Chevette				
Front				
1987-1976				
Ball Joint	K5292	±1°	Upper; adjustable	2
Chevy II				
Front				
1968-1968				
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
1967-1962				
Cam Bolt Kit	K8243A	±1-1/8°	Lower Control Arm	2
Citation				
Front				
1983-1980				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2

Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
Citation				
Rear				
1983-1980				
Camber/Toe - Universal Shim	K917	$\pm 1-1/2^{\circ}$	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8" or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4" or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4" or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2" or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4" to 1-1/2"	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Citation II				
Front				
1985-1984				
Cam Bolt Kit	K100024	$\pm 1\ 3/4^{\circ}$	16mm bolts	2
Cam Bolt Kit	K90476	$\pm 1-3/4^{\circ}$	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	$\pm 1-3/4^{\circ}$	"Magna Cam"; 16mm bolts	2
Rear				
1985-1984				
Camber/Toe - Universal Shim	K917	$\pm 1-1/2^{\circ}$	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8" or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4" or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4" or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2" or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4" to 1-1/2"	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Classic				
Front				
2005-2004				
Cam Bolt Kit	K5330	$\pm 1-3/4^{\circ}$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1-3/4^{\circ}$	"Axis Cam"; 14mm bolts	2
Cobalt				
Front				
2010-2005				
Cam Bolt Kit	K90473	$\pm 1-3/4^{\circ}$	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	$\pm 1-3/4^{\circ}$	"Magna Cam"; 12mm bolts	2
Rear				
2010-2005				
Camber/Toe Shim	K6717 Series	1/4" to 1"	Full Contact Shims; K6717-1 (1/4), K6717-2 (1/2), K6717-3 (3/4), K6717-4 (1)	2
Colorado				
Front				
2012-2004				
Caster/Camber Cam	K6721	$\pm 1-1/2^{\circ}$	Upper Control Arm; adjustable	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Commercial Chassis				
Front				
1994-1991				
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2

Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
Corsica				
Front				
1996-1996				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1995-1987				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
1996-1987				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Corvair Truck				
Front				
1964-1961				
Control Arm Shaft Kit	K6104		Upper; provides additional positive camber adjustment	2
Corvette				
Front				
1996-1984				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
1982-1963				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6104		Upper; provides additional positive camber adjustment	2
Rear				
1982-1963				
Cam Bolt Kit	K8243A	±1-1/8°	Upper	2
Cruze				
Front				
2014-2011				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2

Chevrolet



Part Label	Part No.	Align Range	Qualifier	Qty
Cruze				
Rear				
2014-2011				
Camber/Toe Shim	K100102	.010"		1
Camber/Toe Shim	K100103	.015"		1
Camber/Toe Shim	K100104	.020"		1
Camber/Toe Shim	K100105	.030"		1
El Camino				
Front				
1987-1978				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
1977-1974				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1973				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
1972-1964				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
Epica				
Front				
2006-2004				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2

Part Label	Part No.	Align Range	Qualifier	Qty
Equinox				
Front				
2014-2005				
Cam Bolt Kit	K5330	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 14mm bolts	2
Rear				
2014-2005				
Caster/Camber Kit	K100015	toe $\pm 1^\circ$		2
Express 1500				
Front				
2014-2012				
Cam Bolt Kit	K100026	$\pm 1\text{-}1/2^\circ$	Upper Control Arm	4
Caster/Camber Cam	K80277	$\pm 1\text{-}1/2^\circ$	Upper Control Arm; Quick Cam - camber adjustments made easy via the allen wrench slot	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2011-2009				
Cam Bolt Kit	K100026	$\pm 1\text{-}1/2^\circ$	Upper Control Arm	4
Camber Bushing	K6669	$\pm 1\text{-}3/4^\circ$	Upper	2
Caster/Camber Cam	K80277	$\pm 1\text{-}1/2^\circ$	Upper Control Arm; Quick Cam - camber adjustments made easy via the allen wrench slot	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2008-2003				
Ball Joint	K100116	$\pm 3^\circ$	Upper; adjustable	2
Cam Bolt Kit	K100026	$\pm 1\text{-}1/2^\circ$	Upper Control Arm	4
Camber Bushing	K6669	$\pm 1\text{-}3/4^\circ$	Upper	2
Caster/Camber Cam	K80277	$\pm 1\text{-}1/2^\circ$	Upper Control Arm; Quick Cam - camber adjustments made easy via the allen wrench slot	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2002-1996				
Cam Bolt Kit	K6302	$\pm 1\text{-}1/8^\circ$	Upper	2
Express 2500				
Front				
2014-2011				
Cam Bolt Kit	K100026	$\pm 1\text{-}1/2^\circ$	Upper Control Arm	4
Caster/Camber Cam	K80277	$\pm 1\text{-}1/2^\circ$	Upper Control Arm; Quick Cam - camber adjustments made easy via the allen wrench slot	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2010-2006				
Cam Bolt Kit	K100026	$\pm 1\text{-}1/2^\circ$	Upper Control Arm	4
Camber Bushing	K6669	$\pm 1\text{-}3/4^\circ$	Upper	2
Caster/Camber Cam	K80277	$\pm 1\text{-}1/2^\circ$	Upper Control Arm; Quick Cam - camber adjustments made easy via the allen wrench slot	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2005-2003				
Ball Joint	K100116	$\pm 3^\circ$	Upper; w/7300 GVW; adjustable	2
Cam Bolt Kit	K100026	$\pm 1\text{-}1/2^\circ$	Upper Control Arm	4
Camber Bushing	K6669	$\pm 1\text{-}3/4^\circ$	Upper	2
Caster/Camber Cam	K80277	$\pm 1\text{-}1/2^\circ$	Upper Control Arm; Quick Cam - camber adjustments made easy via the allen wrench slot	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2002-1996				
Cam Bolt Kit	K6302	$\pm 1\text{-}1/8^\circ$	Upper	2

Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
Express 3500				
Front				
2014-2011				
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Caster/Camber Cam	K80277	±1 1/2°	Upper Control Arm; Quick Cam - camber adjustments made easy via the allen wrench slot	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2010-2003				
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	Upper	2
Caster/Camber Cam	K80277	±1 1/2°	Upper Control Arm; Quick Cam - camber adjustments made easy via the allen wrench slot	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2002-1998				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
G10 Van				
Front				
1995-1987				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6355		Upper; provides additional positive camber adjustment	2
1986-1973				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6184		Upper; provides additional positive camber adjustment	2

Part Label	Part No.	Align Range	Qualifier	Qty
G20 Van				
Front				
1995-1987				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6355		Upper; provides additional positive camber adjustment	2
1986-1973				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6184		Upper; provides additional positive camber adjustment	2
G30 Van				
Front				
1996-1971				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
HHR				
Front				
2011-2006				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2011-2006				
Camber/Toe Shim	K6717 Series	1/4° to 1°	Full Contact Shims; K6717-1 (1/4), K6717-2 (1/2), K6717-3 (3/4), K6717-4 (1)	2

Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
Impala				
Front				
2014-2000				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1996-1980				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
1979-1974				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1971				
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
1970-1965				
Control Arm Shaft Kit	K6104		Upper; provides additional positive camber adjustment	2
1964-1958				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Rear				
2011-2000				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
K10 Pickup				
Front				
1986-1970				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
K10 Suburban				
Front				
1986-1970				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2

Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
K1500 Pickup				
Front				
1999-1988				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	w/6 Lug; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
K1500 Suburban				
Front				
1999-1992				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	w/6 Lug; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
K20 Pickup				
Front				
1986-1970				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
K20 Suburban				
Front				
1986-1970				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
K2500 Pickup				
Front				
2000-1988				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
K2500 Suburban				
Front				
1999-1992				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
K30 Pickup				
Front				
1986-1977				
Camber Shim	K980 Series	3/8° to 1-1/2°	w/Dana 60 Axle; K980-3 (3/8), K980-4 (1/2), K980-5 (5/8), K980-6 (3/4), K980-7 (7/8), K980-8 (1), K980-9 (1-1/8), K980-10 (1-1/4), K980-12 (1-1/2)	2
King Pin Repair Kit	K6652		Upper; w/Dana 60 Axle; Contains bushing, gasket, and oil seal; Use w/Eccentric Camber Adjusting king pin No. K992	2
King Pin Repair Kit	K8832		Lower; w/Dana 60 Axle	1
Front				
1986-1977				
Camber Kit	K992	1-1/2°	w/Dana 60 Axle; adjustable camber kingpin	2
K3500 Pickup				
Front				
2000-1988				
Cam Bolt Kit	K6302	±1-1/8°	Upper; w/Independent Front Suspension	2

Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
K5 Blazer				
Front				
1986-1985				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
1984-1975				
Camber Shim	K974 Series	3/8° to 1-1/2°	4WD; K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	4WD; K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
Control Arm Shaft Kit	K6184		RWD; Upper; provides additional positive camber adjustment	2
Kingswood				
Front				
1972-1971				
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
LLV				
Front				
1995-1987				
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
Lumina				
Front				
2001-1990				
Camber Shim	K6478 to K6481	1/4° to 1°	K6478 (1/4), K6479 (1/2), K6480 (3/4), K6481 (1)	2
Rear				
2001-1997				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1996-1995				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	w/16mm bolt; "Magna Cam"	2
1994-1990				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K6375	±3/4°		2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Lumina APV				
Front				
1996-1990				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
1996-1990				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2



Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
				LUV
Front				

1982-1980

Caster/Camber Shim	K957 to K960	Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package		1
Caster/Camber Shim	K961 to K963	Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package		1
Caster/Camber Shim	K970 to K972	Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package		1

Chevrolet



Part Label	Part No.	Align Range	Qualifier	Qty
Malibu				
Front				
2014-2013				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
2012-2004				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
2003-1997				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1983-1978				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
1977-1974				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1973				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
1967-1964				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2



Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
				Malibu
Rear				
2012-2004				
Camber/Toe Shim	K6717 Series	1/4° to 1°	Full Contact Shims; K6717-1 (1/4), K6717-2 (1/2), K6717-3 (3/4), K6717-4 (1)	2
2003-1997				
Cam Bolt Kit	K6699	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
				Metro
Front				
2001-1998				
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K8877	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1

Chevrolet



Part Label	Part No.	Align Range	Qualifier	Qty
Monte Carlo				
Front				
2007-2000				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1999-1995				
Camber Shim	K6478 to K6481	1/4° to 1°	K6478 (1/4), K6479 (1/2), K6480 (3/4), K6481 (1)	2
1988-1978				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
1977-1974				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1973				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
1972-1970				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
Rear				
2007-2000				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1999-1995				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2

Part Label	Part No.	Align Range	Qualifier	Qty
Nova				
Front				
1988-1985				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
1979-1975				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1974-1970				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
Rear				
1988-1985				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Optra				
Front				
2007-2004				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2007-2004				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
P10 Van				
Front				
1980-1973				
Control Arm Shaft Kit	K6184		Upper; provides additional positive camber adjustment	2
P20 Van				
Front				
1989-1968				
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
P30 Van				
Front				
1999-1968				
Control Arm Shaft Kit	K6256		Upper; w/Independent Front Suspension; provides additional positive camber adjustment	2

Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
Prizm				
Front				
2002-1998				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2002-1998				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
R10/R1500 Pickup				
Front				
1987-1987				
Control Arm Shaft Kit	K6355		Upper; provides additional positive camber adjustment	2
R10/R1500 Suburban				
Front				
1991-1987				
Control Arm Shaft Kit	K6355		Upper; provides additional positive camber adjustment	2
R20/R2500 Pickup				
Front				
1989-1987				
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
R20/R2500 Suburban				
Front				
1991-1987				
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
R30/R3500 Pickup				
Front				
1991-1987				
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
S10 Blazer				
Front				
1994-1984				
Cam Bolt Kit	K6367	±1-1/8°	4WD; Upper	2
Control Arm Offset Bushing Kit	K7104		4WD; Upper; eccentric bushing kit provides additional camber adjustment	2
Control Arm Shaft Kit	K6218		RWD; Upper; provides additional positive camber adjustment	2
1983-1983				
Cam Bolt Kit	K5266	±1-1/8°	4WD; Upper	2
Control Arm Offset Bushing Kit	K7104		4WD; Upper; eccentric bushing kit provides additional camber adjustment	2
Control Arm Shaft Kit	K6218		RWD; Upper; provides additional positive camber adjustment	2

Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
S10 Pickup				
Front				
2004-2004				
Cam Bolt Kit	K6367	$\pm 1-1/8^{\circ}$	Upper	2
Control Arm Offset Bushing Kit	K7104		4WD; Upper; eccentric bushing kit provides additional camber adjustment	2
2003-1984				
Cam Bolt Kit	K6367	$\pm 1-1/8^{\circ}$	4WD; Upper	2
Control Arm Offset Bushing Kit	K7104		4WD; Upper; eccentric bushing kit provides additional camber adjustment	2
Control Arm Shaft Kit	K6218		RWD; Upper; provides additional positive camber adjustment	2
1983-1983				
Cam Bolt Kit	K5266	$\pm 1-1/8^{\circ}$	4WD; Upper	2
Control Arm Offset Bushing Kit	K7104		4WD; Upper; eccentric bushing kit provides additional camber adjustment	2
Control Arm Shaft Kit	K6218		RWD; Upper; provides additional positive camber adjustment	2
1982-1982				
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
Silverado 1500				
Front				
2014-2008				
Cam Bolt Kit	K100026	$\pm 1-1/2^{\circ}$	Upper Control Arm	4
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2007-2007				
Ball Joint	K100116	$\pm 3^{\circ}$	Upper; Classic Models; adjustable	2
Cam Bolt Kit	K100026	$\pm 1-1/2^{\circ}$	Upper Control Arm	4
Camber Bushing	K6669	$\pm 1\ 3/4^{\circ}$	Upper; Classic Models	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2006-1999				
Ball Joint	K100116	$\pm 3^{\circ}$	Upper; adjustable	2
Cam Bolt Kit	K100026	$\pm 1-1/2^{\circ}$	Upper Control Arm	4
Camber Bushing	K6669	$\pm 1\ 3/4^{\circ}$	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	4WD; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Silverado 1500 HD				
Front				
2007-2001				
Ball Joint	K100108	$\pm 3^{\circ}$	Upper; adjustable	2
Cam Bolt Kit	K100026	$\pm 1-1/2^{\circ}$	Upper Control Arm	4
Camber Bushing	K6670	$\pm 1^{\circ}$	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1

Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
Silverado 2500				
Front				
2004-2001				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6670	±1°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
2000-1999				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	RWD; Upper	2
Camber Bushing	K6670	±1°	4WD; Upper	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Silverado 2500 HD				
Front				
2012-2012				
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2011-2011				
Camber Bushing	K6670	±1°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2010-2001				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6670	±1°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Silverado 3500				
Front				
2009-2008				
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
2007-2001				
Ball Joint	K100108	±3°	Upper; adjustable	2
Camber Bushing	K6670	±1°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Silverado 3500 HD				
Front				
2012-2012				
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2011-2011				
Camber Bushing	K6670	±1°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2010-2007				
Ball Joint	K100108	±3°	Upper; adjustable	2
Camber Bushing	K6670	±1°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1

Part Label	Part No.	Align Range	Qualifier	Qty
				Sonic
Front				
2014-2012				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
				Spark
Front				
2014-2012				
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
				Spectrum
Front				
1988-1985				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1988-1985				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
				Sprint
Front				
1991-1989				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
1988-1985				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
				Suburban 1500
Front				
2014-2007				
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2006-2000				
Ball Joint	K100116	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1

Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
Suburban 2500				
Front				
2013-2012				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2011-2001				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6670	±1°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
2000-2000				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	RWD; Upper	2
Camber Bushing	K6670	±1°	4WD; Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Tahoe				
Front				
2014-2007				
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2006-2001				
Ball Joint	K100116	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
2000-2000				
Ball Joint	K100116	±3°	V8 5.3L; Upper; adjustable	2
Ball Joint	K100116	±3°	V8 4.8L; Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	V8 4.8L; Upper Control Arm	4
Cam Bolt Kit	K100026	±1-1/2°	V8 5.3L; Upper Control Arm	4
Cam Bolt Kit	K6302	±1-1/8°	V8 5.7L; Upper	2
Camber Bushing	K6669	±1 3/4°	V8 4.8L; Upper	2
Camber Bushing	K6669	±1 3/4°	V8 5.3L; Upper	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
1999-1995				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	4WD; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Townsmen				
Front				
1972-1971				
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2

Part Label	Part No.	Align Range	Qualifier	Qty
Tracker				
Front				
2004-1998				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
1991-1989				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Traverse				
Front				
2014-2009				
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
2014-2009				
Cam Bolt Kit	K100142	±1-1/2°		2
Uplander				
Front				
2009-2005				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2009-2005				
Camber/Toe - Universal Shim	K100143	±1-1/2°	FWD; universal full contact dual angle shim	2
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
V10 Suburban				
Front				
1988-1987				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
V10/V1500 Pickup				
Front				
1987-1987				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
V20 Suburban				
Front				
1988-1987				
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2

Chevrolet

Part Label	Part No.	Align Range	Qualifier	Qty
V20/V2500 Pickup				
Front				
1987-1987				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
V30/V3500 Pickup				
Front				
1991-1987				
Camber Shim	K980 Series	3/8° to 1-1/2°	w/Dana 60 Axle; K980-3 (3/8), K980-4 (1/2), K980-5 (5/8), K980-6 (3/4), K980-7 (7/8), K980-8 (1), K980-9 (1-1/8), K980-10 (1-1/4), K980-12 (1-1/2)	2
King Pin Repair Kit	K6652		Upper; Contains bushing, gasket, and oil seal; Use w/Eccentric Camber Adjusting king pin No. K992	2
King Pin Repair Kit	K8832		Lower	1
Front				
1991-1987				
Camber Kit	K992	1-1/2°	w/Dana 60 Axle; adjustable camber kingpin	2
Venture				
Front				
2005-1997				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2005-1997				
Camber/Toe - Universal Shim	K918	±1-1/2°	FWD; universal full contact dual angle shim	2
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	FWD; Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Volt				
Front				
2014-2011				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2

Chrysler

Part Label	Part No.	Align Range	Qualifier	Qty
200				
Rear				
2014-2011				
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4), K6660-4 (1)	2
Lateral Arm	K100119	camber ±4°	Upper; adjustable	2

Part Label	Part No.	Align Range	Qualifier	Qty
				300
Front				
2014-2009				
Ball Joint	K7469	$\pm 3/4^\circ$	RWD; Lower; adjustable	2
Cam Bolt Kit	K100023	$\pm 3/10^\circ$	RWD; Upper Control Arm	1
Control Arm	K100112	camber $\pm 2^\circ$; caster $\pm 1-1/2^\circ$	RWD; Upper; adjustable	2
2008-2005				
Ball Joint	K7469	$\pm 3/4^\circ$	RWD; Lower; adjustable	2
Cam Bolt Kit	K100023	$\pm 3/10^\circ$	RWD; Upper Control Arm	1
Control Arm	K100111	up to 2° Caster / up to $1-1/2^\circ$ Camber	RWD; Upper; adjustable incl. ball joint	2
1971-1965				
Cam Bolt Kit	K7036	$\pm 1-1/8^\circ$	Upper Control Arm; cam bolt and bushing kit	2
Rear				
2013-2005				
Camber Bushing	K100113	camber $\pm 1-1/2^\circ$; caster $\pm 1/2^\circ$	Upper Forward; adjustable	2
				300M
Front				
2004-1999				
Cam Bolt Kit	K90476	$\pm 1-3/4^\circ$	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	$\pm 1-3/4^\circ$	"Magna Cam"; 16mm bolts	2
Rear				
2004-1999				
Lateral Arm	K7331	camber -2° to $+1^\circ$	adjustable	2
				Cirrus
Front				
2000-1995				
Ball Joint	K7451	$\pm 1^\circ$	Upper; adjustable	2
Camber Bushing	K7317	$\pm 1^\circ$	Upper; eccentric bushing kit	2
				Concorde
Front				
2004-1993				
Cam Bolt Kit	K90476	$\pm 1-3/4^\circ$	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	$\pm 1-3/4^\circ$	"Magna Cam"; 16mm bolts	2
Rear				
2004-1998				
Lateral Arm	K7331	camber -2° to $+1^\circ$	adjustable	2
1997-1993				
Lateral Arm	K7318	camber -2° to $+1^\circ$	adjustable	2
				Daytona
Front				
1993-1984				
Cam Bolt Kit	K7151	$\pm 1-1/8^\circ$		2
Rear				
1993-1984				
Camber/Toe - Universal Shim	K915	$\pm 1-1/2^\circ$	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	$3/8^\circ$ or $3/32"$	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	$3/4^\circ$ or $3/16"$	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	$1/4^\circ$ or $1/16"$	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	$1/2^\circ$ or $1/8"$	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	$1/4^\circ$ to $1-1/2^\circ$	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2

Chrysler

Part Label	Part No.	Align Range	Qualifier	Qty
Dynasty				
Front				
1993-1988				
Cam Bolt Kit	K7151	±1-1/8°		2
E Class				
Front				
1984-1983				
Cam Bolt Kit	K7151	±1-1/8°		2
Rear				
1984-1983				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Executive Limousine				
Front				
1985-1985				
Cam Bolt Kit	K7151	±1-1/8°		2
Rear				
1985-1985				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Executive Sedan				
Front				
1984-1983				
Cam Bolt Kit	K7151	±1-1/8°		2
Rear				
1984-1983				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Grand Voyager				
Front				
2000-2000				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2

Part Label	Part No.	Align Range	Qualifier	Qty
Grand Voyager				
Rear				
2000-2000				
Camber Shim	K7444 to K7447	1/4° to 1°	K7444 (1/4), K7445 (1/2), K7446 (3/4), K7447 (1)	2
Camber/Toe Shim	K7264 Series	1/4° to 1°	Full Contact Shims; K7264-1 (1/4), K7264-2 (1/2), K7264-3 (3/4), K7264-4 (1)	2
Toe Shim	K7438 to K7443	.10° to .80°	K7438 (.10 deg.), K7439 (.20 deg.), K7440 (.30 deg.), K7441 (.40 deg.), K7442 (.50 deg.), K7443 (.80 deg.)	2
Imperial				
Front				
1993-1990				
Cam Bolt Kit	K7151	±1-1/8°		2
1966-1959				
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Rear				
1993-1990				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Intrepid				
Front				
2004-1993				
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
2004-1998				
Lateral Arm	K7331	camber -2° to +1°	adjustable	2
1997-1993				
Lateral Arm	K7318	camber -2° to +1°	adjustable	2
Laser				
Front				
1986-1984				
Cam Bolt Kit	K7151	±1-1/8°		2
Rear				
1986-1984				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
LeBaron				
Front				
1995-1982				
Cam Bolt Kit	K7151	±1-1/8°		2

Chrysler

Part Label	Part No.	Align Range	Qualifier	Qty
LeBaron				
Rear				
1995-1982				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
LHS				
Front				
2001-1994				
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
2001-1999				
Lateral Arm	K7331	camber -2° to +1°	adjustable	2
1997-1994				
Lateral Arm	K7318	camber -2° to +1°	adjustable	2
Neon				
Front				
2002-2000				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2002-2000				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Lateral Arm	K100001	camber ±3-1/2°	adjustable	2
New Yorker				
Front				
1996-1994				
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1993-1983				
Cam Bolt Kit	K7151	±1-1/8°		2
1973-1965				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
1964-1959				
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2

Part Label	Part No.	Align Range	Qualifier	Qty
New Yorker				
Rear				
1996-1994				
Lateral Arm	K7318	camber -2° to +1°	adjustable	2
1993-1983				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Newport				
Front				
1973-1965				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
1964-1961				
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Pacifica				
Front				
2008-2004				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2008-2004				
Camber Bushing	K100113	camber ±1-1/2°; caster ±1/2°	Upper Forward; adjustable	2
PT Cruiser				
Front				
2010-2001				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2010-2001				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Saratoga				
Front				
1960-1959				
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2

Chrysler

Part Label	Part No.	Align Range	Qualifier	Qty
Sebring				
Front				
2010-2007				
Ball Joint	K7451	±1°	Upper; adjustable	2
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
2006-2006				
Ball Joint	K7451	±1°	Upper; adjustable	2
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Camber Bushing	K7317	±1°	Upper; eccentric bushing kit	2
2005-2001				
Ball Joint	K7451	±1°	Exc. Coupe; Upper; adjustable	2
Cam Bolt Kit	K7436	±1-3/4°	Coupe; "Magna Cam"; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	Coupe; "Axis Cam"; 16mm bolts	2
Camber Bushing	K7317	±1°	Exc. Coupe; Upper; eccentric bushing kit	2
2000-1996				
Ball Joint	K7451	±1°	Convertible; Upper; adjustable	2
Ball Joint	K7452	±1°	Coupe; Upper; adjustable	2
Camber Adj. Anchor Bolt	K7330	1 1/2°	Coupe; Upper Control Arm; Replaces O.E. non-adjustable anchor bolts; Incl. two adjustable bolts	2
Camber Bushing	K7317	±1°	Convertible; Upper; eccentric bushing kit	2
1995-1995				
Ball Joint	K7452	±1°	Upper; adjustable	2
Camber Adj. Anchor Bolt	K7330	1 1/2°	Upper Control Arm; Replaces O.E. non-adjustable anchor bolts; Incl. two adjustable bolts	2
Rear				
2010-2007				
Camber Shim	K7332	±1-1/4°	Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
Lateral Arm	K100118	camber ±2-1/2°	Upper; adjustable	2
2006-2006				
Camber Shim	K7332	±1-1/4°	Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
Lateral Arm	K100004	camber ±3-1/2°	Rearward; adjustable	2
2005-2004				
Cam Bolt Kit	K100048	-3/4° to +1-1/2°	Coupe; Upper; Incl. bracket	1
Camber Shim	K7332	±1-1/4°	Coupe; Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
Lateral Arm	K100004	camber ±3-1/2°	Rearward; adjustable	2
2003-1996				
Cam Bolt Kit	K100048	-3/4° to +1-1/2°	Coupe; Upper; Incl. bracket	1
Camber Shim	K7332	±1-1/4°	Coupe; Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
1995-1995				
Cam Bolt Kit	K100048	-3/4° to +1-1/2°	Upper; Incl. bracket	1
Camber Shim	K7332	±1-1/4°	Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
TC Maserati				
Front				
1991-1989				
Cam Bolt Kit	K7151	±1-1/8°		2

Part Label	Part No.	Align Range	Qualifier	Qty
TC Maserati				
Rear				
1991-1990				
Camber/Toe - Universal Shim	K915	$\pm 1\text{-}1/2^\circ$	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	$3/8^\circ$ or $3/32"$	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	$3/4^\circ$ or $3/16"$	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	$1/4^\circ$ or $1/16"$	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	$1/2^\circ$ or $1/8"$	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	$1/4^\circ$ to $1\text{-}1/2^\circ$	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Town & Country				
Front				
2014-2009				
Cam Bolt Kit	K90474	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 14mm bolts	2
2014-1996				
Cam Bolt Kit	K7256	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 14mm bolts	2
1995-1990				
Cam Bolt Kit	K7151	$\pm 1\text{-}1/8^\circ$		2
1973-1958				
Cam Bolt Kit	K8243A	$\pm 1\text{-}1/8^\circ$	Upper Control Arm	2
Rear				
2014-2009				
Camber/Toe Shim	K7264 Series	$1/4^\circ$ to 1°	Full Contact Shims; K7264-1 (1/4), K7264-2 (1/2), K7264-3 (3/4), K7264-4 (1)	2
2008-1996				
Camber Shim	K7444 to K7447	$1/4^\circ$ to 1°	K7444 (1/4), K7445 (1/2), K7446 (3/4), K7447 (1)	2
Camber/Toe Shim	K7264 Series	$1/4^\circ$ to 1°	Full Contact Shims; K7264-1 (1/4), K7264-2 (1/2), K7264-3 (3/4), K7264-4 (1)	2
Toe Shim	K7438 to K7443	$.10^\circ$ to $.80^\circ$	K7438 (.10 deg.), K7439 (.20 deg.), K7440 (.30 deg.), K7441 (.40 deg.), K7442 (.50 deg.), K7443 (.80 deg.)	2
1995-1990				
Camber/Toe Shim	K90152	$3/8^\circ$ or $3/32"$	FWD; half shim; 20 shims per package	2
Camber/Toe Shim	K90153	$3/4^\circ$ or $3/16"$	FWD; half shim; 20 shims per package	2
Camber/Toe Shim	K982-1	$1/4^\circ$ or $1/16"$	FWD; half shim; 20 shims per package	2
Camber/Toe Shim	K982-2	$1/2^\circ$ or $1/8"$	FWD; half shim; 20 shims per package	2
Voyager				
Front				
2003-2000				
Cam Bolt Kit	K7256	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 14mm bolts	2
Rear				
2003-2000				
Camber Shim	K7444 to K7447	$1/4^\circ$ to 1°	K7444 (1/4), K7445 (1/2), K7446 (3/4), K7447 (1)	2
Camber/Toe Shim	K7264 Series	$1/4^\circ$ to 1°	Full Contact Shims; K7264-1 (1/4), K7264-2 (1/2), K7264-3 (3/4), K7264-4 (1)	2
Toe Shim	K7438 to K7443	$.10^\circ$ to $.80^\circ$	K7438 (.10 deg.), K7439 (.20 deg.), K7440 (.30 deg.), K7441 (.40 deg.), K7442 (.50 deg.), K7443 (.80 deg.)	2
Windsor				
Front				
1961-1959				
Cam Bolt Kit	K8243A	$\pm 1\text{-}1/8^\circ$	Upper Control Arm	2

Daewoo

Part Label	Part No.	Align Range	Qualifier	Qty
Leganza				
Front				
2002-1999				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2002-1999				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Nubira				
Front				
2002-1999				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2002-1999				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2

Daihatsu

Part Label	Part No.	Align Range	Qualifier	Qty
Charade				
Front				
1992-1989				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
1988-1988				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1992-1989				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
1988-1988				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Rocky				
Front				
1992-1990				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1

Part Label	Part No.	Align Range	Qualifier	Qty
2000 GTX				
Front				
1990-1989				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1990-1990				
Camber Shim	K7332	±1-1/4°	Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
330				
Front				
1964-1963				
Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2
400				
Front				
1983-1982				
Cam Bolt Kit	K7151	±1-1/8°		2
Rear				
1983-1982				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
440				
Front				
1964-1963				
Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2
600				
Front				
1988-1983				
Cam Bolt Kit	K7151	±1-1/8°		2
Rear				
1988-1983				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2

Dodge

Part Label	Part No.	Align Range	Qualifier	
880				
Front				
1964-1963				
Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Aries				
Front				
1989-1981				
Cam Bolt Kit	K7151	±1-1/8°		2
Rear				
1989-1981				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Avenger				
Front				
2000-1995				
Ball Joint	K7452	±1°	Upper; adjustable	2
Camber Adj. Anchor Bolt	K7330	1 1/2°	Upper Control Arm; Replaces O.E. non-adjustable anchor bolts; Incl. two adjustable bolts	2
Rear				
2014-2011				
Lateral Arm	K100119	camber ±4°	Upper; adjustable	2
2010-2009				
Lateral Arm	K100118	camber ±2-1/2°	Upper; adjustable	2
2000-1995				
Cam Bolt Kit	K100048	-3/4° to +1-1/2°	Upper; Incl. bracket	1
Camber Shim	K7332	±1-1/4°	Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
B100 Van				
Front				
1978-1971				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
B200 Van				
Front				
1978-1971				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
B300 Van				
Front				
1978-1971				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Caliber				
Front				
2012-2007				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2

Part Label	Part No.	Align Range	Qualifier	Qty
Caliber				
Rear				
2012-2007				
Lateral Arm	K100089	camber $\pm 2^\circ$	Upper; adjustable; Does not incl. bushings; Pending Supersession to K100114	2
Lateral Arm	K100114	camber $\pm 2^\circ$	Upper; adjustable; Incl. bushings	2
Toe Compensator Link	K100117	toe $\pm 1\text{-}1/2^\circ$	adjustable	2
Caravan				
Front				
2007-1996				
Cam Bolt Kit	K7256	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 14mm bolts	2
1995-1984				
Cam Bolt Kit	K7151	$\pm 1\text{-}1/8^\circ$		2
Rear				
2007-1996				
Camber Shim	K7444 to K7447	$1/4^\circ$ to 1°	K7444 (1/4), K7445 (1/2), K7446 (3/4), K7447 (1)	2
Camber/Toe Shim	K7264 Series	$1/4^\circ$ to 1°	Full Contact Shims; K7264-1 (1/4), K7264-2 (1/2), K7264-3 (3/4), K7264-4 (1)	2
Toe Shim	K7438 to K7443	$.10^\circ$ to $.80^\circ$	K7438 (.10 deg.), K7439 (.20 deg.), K7440 (.30 deg.), K7441 (.40 deg.), K7442 (.50 deg.), K7443 (.80 deg.)	2
1995-1990				
Camber Shim	K7444 to K7447	$1/4^\circ$ to 1°	AWD; Non-ABS; K7444 (1/4), K7445 (1/2), K7446 (3/4), K7447 (1)	2
Camber/Toe Shim	K90152	$3/8^\circ$ or $3/32^\circ$	FWD; half shim; 20 shims per package	2
Camber/Toe Shim	K90153	$3/4^\circ$ or $3/16^\circ$	FWD; half shim; 20 shims per package	2
Camber/Toe Shim	K982-1	$1/4^\circ$ or $1/16^\circ$	FWD; half shim; 20 shims per package	2
Camber/Toe Shim	K982-2	$1/2^\circ$ or $1/8^\circ$	FWD; half shim; 20 shims per package	2
Toe Shim	K7438 to K7443	$.10^\circ$ to $.80^\circ$	AWD; Non-ABS; K7438 (.10 deg.), K7439 (.20 deg.), K7440 (.30 deg.), K7441 (.40 deg.), K7442 (.50 deg.), K7443 (.80 deg.)	2
CB300				
Front				
1978-1974				
Cam Bolt Kit	K7036	$\pm 1\text{-}1/8^\circ$	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	$\pm 1\text{-}1/8^\circ$	Upper Control Arm	2
Challenger				
Front				
2014-2014				
Ball Joint	K7469	$\pm 3/4^\circ$	Lower; adjustable	2
Cam Bolt Kit	K100023	$\pm 3/10^\circ$	Upper Control Arm	1
Control Arm	K100112	camber $\pm 2^\circ$; caster $\pm 1\text{-}1/2^\circ$	Upper; adjustable	2
2013-2009				
Ball Joint	K7469	$\pm 3/4^\circ$	Lower; adjustable	2
Cam Bolt Kit	K100023	$\pm 3/10^\circ$	Upper Control Arm	1
Control Arm	K100111	up to 2° Caster / up to $1\text{-}1/2^\circ$ Camber	Upper; adjustable; incl. ball joint	2
Control Arm	K100112	camber $\pm 2^\circ$; caster $\pm 1\text{-}1/2^\circ$	Upper; adjustable	2
2008-2008				
Cam Bolt Kit	K100023	$\pm 3/10^\circ$	Upper Control Arm	1
Control Arm	K100111	up to 2° Caster / up to $1\text{-}1/2^\circ$ Camber	Upper; adjustable; incl. ball joint	2
1974-1970				
Cam Bolt Kit	K7030	$\pm 1\text{-}1/8^\circ$	Upper Control Arm; cam bolt and bushing kit	2
Control Arm Offset Bushing Kit	K7103		Upper	2

Dodge

Part Label	Part No.	Align Range	Qualifier	Qty
Challenger				
Rear				
2013-2008				
Camber Bushing	K100113	camber $\pm 1\text{-}1/2^\circ$; caster $\pm 1/2^\circ$	Upper Forward; adjustable	2
Charger				
Front				
2014-2009				
Ball Joint	K7469	$\pm 3/4^\circ$	RWD; Lower; adjustable	2
Cam Bolt Kit	K100023	$\pm 3/10^\circ$	RWD; Upper Control Arm	1
Control Arm	K100112	camber $\pm 2^\circ$; caster $\pm 1\text{-}1/2^\circ$	RWD; Upper; adjustable	2
2008-2006				
Ball Joint	K7469	$\pm 3/4^\circ$	Lower; adjustable	2
Cam Bolt Kit	K100023	$\pm 3/10^\circ$	Upper Control Arm	1
Control Arm	K100111	up to 2° Caster / up to $1\text{-}1/2^\circ$ Camber	RWD; Upper; adjustable incl. ball joint	2
1987-1983				
Cam Bolt Kit	K7120	$\pm 1\text{-}1/8^\circ$		2
1972-1966				
Cam Bolt Kit	K7030	$\pm 1\text{-}1/8^\circ$	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	$\pm 1\text{-}1/8^\circ$	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2
Rear				
2013-2006				
Camber Bushing	K100113	camber $\pm 1\text{-}1/2^\circ$; caster $\pm 1/2^\circ$	Upper Forward; adjustable	2
1987-1983				
Camber/Toe - Universal Shim	K915	$\pm 1\text{-}1/2^\circ$	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	$3/8^\circ$ or $3/32"$	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	$3/4^\circ$ or $3/16"$	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	$1/4^\circ$ or $1/16"$	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	$1/2^\circ$ or $1/8"$	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	$1/4^\circ$ to $1\text{-}1/2^\circ$	Full Contact Shims; K993-1 ($1/4$), K993-2 ($1/2$), K993-3 ($3/4$), K993-4 (1), K993-5 ($1\text{-}1/4$), K993-6 ($1\text{-}1/2$)	2
Colt				
Front				
1994-1979				
Cam Bolt Kit	K90473	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	$\pm 2^\circ$	FWD; adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Coronet				
Front				
1972-1966				
Cam Bolt Kit	K7030	$\pm 1\text{-}1/8^\circ$	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	$\pm 1\text{-}1/8^\circ$	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2
1965-1965				
Cam Bolt Kit	K8243A	$\pm 1\text{-}1/8^\circ$	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2
1959-1959				
Cam Bolt Kit	K8243A	$\pm 1\text{-}1/8^\circ$	Upper Control Arm	2

Part Label	Part No.	Align Range	Qualifier	Qty
Custom				
Front				
1965-1965				
Control Arm Offset Bushing Kit	K7103		Upper	2
1964-1962				
Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2
1959-1959				
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
D100 Pickup				
Front				
1989-1986				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
1979-1972				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
D150 Pickup				
Front				
1993-1977				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
D200 Pickup				
Front				
1980-1972				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
D250 Pickup				
Front				
1993-1981				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
D300 Pickup				
Front				
1980-1972				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
D350 Pickup				
Front				
1993-1981				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
D400 Pickup				
Front				
1981-1978				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2

Dodge

Part Label	Part No.	Align Range	Qualifier	Qty
D450 Pickup				
Front				
1981-1978				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Dart				
Front				
1976-1962				
Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2
1961-1960				
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Daytona				
Front				
1993-1984				
Cam Bolt Kit	K7151	±1-1/8°		2
Rear				
1993-1984				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Durango				
Front				
2014-2011				
Ball Joint	K100107	±1°	Upper; adjustable	2
Camber Kit	K100130	±1-1/2°	contains steel guide and cam assemblies	2
Caster Kit	K100131	±1°		2
Dynasty				
Front				
1993-1988				
Cam Bolt Kit	K7151	±1-1/8°		2
Rear				
1993-1988				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Grand Caravan				
Front				
2014-1996				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1995-1990				
Cam Bolt Kit	K7151	±1-1/8°		2

Part Label	Part No.	Align Range	Qualifier	Qty
Grand Caravan				
Rear				
2014-1996				
Camber/Toe Shim	K7264 Series	1/4° to 1°	Full Contact Shims; K7264-1 (1/4), K7264-2 (1/2), K7264-3 (3/4), K7264-4 (1)	2
2008-1996				
Camber Shim	K7444 to K7447	1/4° to 1°	K7444 (1/4), K7445 (1/2), K7446 (3/4), K7447 (1)	2
Toe Shim	K7438 to K7443	.10° to .80°	K7438 (.10 deg.), K7439 (.20 deg.), K7440 (.30 deg.), K7441 (.40 deg.), K7442 (.50 deg.), K7443 (.80 deg.)	2
1995-1990				
Camber Shim	K7444 to K7447	1/4° to 1°	AWD; Non-ABS; K7444 (1/4), K7445 (1/2), K7446 (3/4), K7447 (1)	2
Camber/Toe Shim	K90152	3/8° or 3/32"	FWD; half shim; 20 shims per package	2
Camber/Toe Shim	K90153	3/4° or 3/16"	FWD; half shim; 20 shims per package	2
Camber/Toe Shim	K982-1	1/4° or 1/16"	FWD; half shim; 20 shims per package	2
Camber/Toe Shim	K982-2	1/2° or 1/8"	FWD; half shim; 20 shims per package	2
Toe Shim	K7438 to K7443	.10° to .80°	AWD; Non-ABS; K7438 (.10 deg.), K7439 (.20 deg.), K7440 (.30 deg.), K7441 (.40 deg.), K7442 (.50 deg.), K7443 (.80 deg.)	2
Intrepid				
Front				
2004-1993				
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
2004-1998				
Lateral Arm	K7331	camber -2° to +1°	adjustable	2
1997-1993				
Lateral Arm	K7318	camber -2° to +1°	adjustable	2
Journey				
Front				
2014-2009				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Rear				
2014-2011				
Lateral Arm	K100119	camber ±4°	Upper; adjustable	2
2010-2009				
Lateral Arm	K100118	camber ±2-1/2°	Upper; adjustable	2
Lancer				
Front				
1989-1985				
Cam Bolt Kit	K7151	±1-1/8°		2
1962-1962				
Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2
1961-1961				
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2

Dodge

Part Label	Part No.	Align Range	Qualifier	Qty
Lancer				
Rear				
1989-1985				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Magnum				
Front				
2008-2005				
Ball Joint	K7469	±3/4°	RWD; Lower; adjustable	2
Cam Bolt Kit	K100023	±3/10°	RWD; Upper Control Arm	1
Control Arm	K100111	up to 2° Caster / up to 1-1/2° Camber	RWD; Upper; adjustable incl. ball joint	1
Rear				
2008-2005				
Camber Bushing	K100113	camber ±1-1/2°; caster ±1/2°	Upper Forward; adjustable	2
Mini Ram				
Front				
1988-1984				
Cam Bolt Kit	K7151	±1-1/8°		2
Monaco				
Front				
1992-1990				
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Camber Wedge Kit	K90073	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
1978-1974				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
1973-1970				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
1969-1965				
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Rear				
1992-1990				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Neon				
Front				
2005-1995				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2

Part Label	Part No.	Align Range	Qualifier	Qty
Neon				
Rear				
2005-1995				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Lateral Arm	K100001	camber ±3-1/2°	adjustable	2
Omni				
Front				
1990-1978				
Cam Bolt Kit	K7120	±1-1/8°		2
Rear				
1990-1978				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
P100				
Front				
1964-1962				
King Pin Repair Kit	K6652		Upper; w/Dana 60 Axle; Contains bushing, gasket, and oil seal; Use w/Eccentric Camber Adjusting king pin No. K992	2
Front				
1964-1962				
Camber Kit	K992	1-1/2°	w/Dana 60 Axle; adjustable camber kingpin	2
P200				
Front				
1964-1961				
King Pin Repair Kit	K6652		Upper; w/Dana 60 Axle; Contains bushing, gasket, and oil seal; Use w/Eccentric Camber Adjusting king pin No. K992	2
Front				
1964-1961				
Camber Kit	K992	1-1/2°	w/Dana 60 Axle; adjustable camber kingpin	2
P300				
Front				
1966-1961				
King Pin Repair Kit	K6652		Upper; w/Dana 60 Axle; Contains bushing, gasket, and oil seal; Use w/Eccentric Camber Adjusting king pin No. K992	2
Front				
1966-1961				
Camber Kit	K992	1-1/2°	w/Dana 60 Axle; adjustable camber kingpin	2

Dodge

Part Label	Part No.	Align Range	Qualifier	Qty
Polara				
Front				
1973-1965				
Cam Bolt Kit	K7036	$\pm 1\text{-}1/8^\circ$	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	$\pm 1\text{-}1/8^\circ$	Upper Control Arm	2
1964-1962				
Cam Bolt Kit	K7030	$\pm 1\text{-}1/8^\circ$	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	$\pm 1\text{-}1/8^\circ$	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2
1961-1960				
Cam Bolt Kit	K8243A	$\pm 1\text{-}1/8^\circ$	Upper Control Arm	2
Ram 1500				
Front				
2010-2006				
Ball Joint	K100115	$\pm 3^\circ$	Standard Cab; Upper; adjustable	2
Ball Joint	K100115	$\pm 3^\circ$	Crew Cab; Upper; adjustable	2
2005-2004				
Cam Bolt Kit	K100055	$\pm 1^\circ$ $\pm 1\text{-}1/2^\circ$	4WD; Upper Control Arm	2
Caster/Camber Kit	K7398	camber $\pm 1^\circ$; caster $\pm 1\text{-}1/2^\circ$	Upper; bolt and plate kit	2
Torsion Bar Key	K100013	1/2" to 1-1/2"	4WD; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
2003-2002				
Caster/Camber Kit	K7398	camber $\pm 1^\circ$; caster $\pm 1\text{-}1/2^\circ$	Upper; bolt and plate kit	2
Torsion Bar Key	K100013	1/2" to 1-1/2"	4WD; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
2001-2000				
Ball Joint	K7407	1°	4WD; Lower; adjustable ball joint	2
1999-1994				
Ball Joint	K100056	$\pm 1/2^\circ$	4WD; Upper; adjustable	2
Ball Joint	K7405	$\pm 1\text{-}3/4^\circ$	4WD; Lower; adjustable	2
1998-1994				
Cam Bolt Kit	K100047	$\pm 3^\circ$	Lower Control Arm; w/Solid Front Axle; w/36mm cams; adjustable; caster/pinion angle	2

Part Label	Part No.	Align Range	Qualifier	Qty
Ram 2500				
Front				
2010-2003				
Ball Joint	K100057	$\pm 1/2^\circ$	4WD; Upper; adjustable	2
Ball Joint	K7448	camber $\pm 1^\circ$	4WD; Upper; w/4500 lb. Dana 60 Axle; adjustable	2
Cam Bolt Kit	K100132	$\pm 1^\circ$ to $\pm 1\ 1/2^\circ$	4WD; adjustable; caster/pinion angle	2
2002-2002				
Ball Joint	K100054	$\pm 1/2^\circ$	4WD; Upper; adjustable	2
Ball Joint	K7396	$\pm 1^\circ$	4WD; Upper; adjustable	2
Cam Bolt Kit	K100132	$\pm 1^\circ$ to $\pm 1\ 1/2^\circ$	4WD; adjustable; caster/pinion angle	2
2001-2000				
Ball Joint	K100054	$\pm 1/2^\circ$	4WD; Upper; adjustable	2
Ball Joint	K7396	$\pm 1^\circ$	4WD; Upper; adjustable	2
Ball Joint	K7407	1°	4WD; Lower; w/3500 lb. Axle; adjustable ball joint	2
Cam Bolt Kit	K100132	$\pm 1^\circ$ to $\pm 1\ 1/2^\circ$	4WD; adjustable; caster/pinion angle	2
1999-1994				
Ball Joint	K100056	$\pm 1/2^\circ$	4WD; Upper; w/3850 lb. Axle; adjustable	2
Ball Joint	K7405	$\pm 1\text{-}3/4^\circ$	4WD; Lower; w/3500 lb. Axle; adjustable	2
Cam Bolt Kit	K100047	$\pm 3^\circ$	Lower Control Arm; w/Solid Front Axle; w/36mm cams; adjustable; caster/pinion angle	2
Caster/Camber - Universal Bushing	K80108	$\pm 3\ 1/4^\circ$	4WD; w/Solid Front Axle; Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	$\pm 3/4^\circ$ to $\pm 2\ 3/4^\circ$	4WD; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100059 to K100065	$1/4^\circ$ to 2°	4WD; Upper; K100059 (1/4), K100060 (1/2), K100061 (3/4), K100062 (1), K100063 (1-1/4), K100064 (1-1/2), K100065 (2); Alternative to K8709 Universal Bushing	2
Caster/Camber Bushing	K8958 to K8969	0° to $2\text{-}3/4^\circ$	4WD; K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2

Dodge

Part Label	Part No.	Align Range	Qualifier	Qty
Ram 3500				
Front				
2010-2003				
Ball Joint	K100057	±1/2°	4WD; Upper; adjustable	2
Ball Joint	K7448	camber ±1°	4WD; Upper; adjustable	2
Cam Bolt Kit	K100132	±1° to ±1 1/2°	4WD; adjustable; caster/pinion angle	2
2002-2000				
Ball Joint	K100054	±1/2°	4WD; Upper; adjustable	2
Ball Joint	K7396	±1°	4WD; Upper; adjustable	2
Cam Bolt Kit	K100132	±1° to ±1 1/2°	4WD; adjustable; caster/pinion angle	2
Caster/Camber - Universal Bushing	K80108	±3 1/4°	RWD; w/Solid Axle; Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	RWD; w/Solid Axle; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
1999-1994				
Caster/Camber - Universal Bushing	K80108	±3 1/4°	RWD; w/Solid Axle; Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	4WD; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	RWD; w/Solid Axle; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100059 to K100065	1/4° to 2°	4WD; Upper; K100059 (1/4), K100060 (1/2), K100061 (3/4), K100062 (1), K100063 (1-1/4), K100064 (1-1/2), K100065 (2); Alternative to K8709 Universal Bushing	2
Caster/Camber Bushing	K100059 to K100065	1/4° to 2°	RWD; Upper; w/Solid Axle; K100059 (1/4), K100060 (1/2), K100061 (3/4), K100062 (1), K100063 (1-1/4), K100064 (1-1/2), K100065 (2); Alternative to K8709 Universal Bushing	2
Caster/Camber Bushing	K8958 to K8969	0° to 2-3/4°	RWD; w/Solid Axle; K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8958 to K8969	0° to 2-3/4°	4WD; K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2
1998-1994				
Cam Bolt Kit	K100047	±3°	Lower Control Arm; w/Solid Front Axle; w/36mm cams; adjustable; caster/pinion angle	2
Ramcharger				
Front				
1993-1974				
Cam Bolt Kit	K7036	±1-1/8°	RWD; Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	RWD; Upper Control Arm	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	4WD; K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
Rampage				
Front				
1984-1982				
Cam Bolt Kit	K7120	±1-1/8°		2
Rear				
1984-1982				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2

Part Label	Part No.	Align Range	Qualifier	Qty
Shadow				
Front				
1994-1987				
Cam Bolt Kit	K7151	$\pm 1-1/8^\circ$		2
Rear				
1994-1987				
Camber/Toe - Universal Shim	K915	$\pm 1-1/2^\circ$	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8" or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4" or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4" or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2" or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4" to 1-1/2"	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Sierra				
Front				
1959-1959				
Cam Bolt Kit	K8243A	$\pm 1-1/8^\circ$	Upper Control Arm	2
Spirit				
Front				
1995-1989				
Cam Bolt Kit	K7151	$\pm 1-1/8^\circ$		2
Rear				
1995-1989				
Camber/Toe - Universal Shim	K915	$\pm 1-1/2^\circ$	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8" or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4" or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4" or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2" or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4" to 1-1/2"	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Sprinter 2500				
Front				
2009-2007				
Cam Bolt Kit	K100137	$\pm 3^\circ$		2
Cam Bolt Kit	K90474	$\pm 1-3/4^\circ$	"Axis Cam"; 14mm bolts	2
2006-2003				
Camber Shim	K80757	1°	each kit contains two bolts and two shims	2
Camber Shim	K80758	2°	each kit contains two bolts and two shims	2
Sprinter 3500				
Front				
2009-2007				
Cam Bolt Kit	K100137	$\pm 3^\circ$		2
Cam Bolt Kit	K90474	$\pm 1-3/4^\circ$	"Axis Cam"; 14mm bolts	2
2006-2003				
Camber Shim	K80757	1°	each kit contains two bolts and two shims	2
Camber Shim	K80758	2°	each kit contains two bolts and two shims	2

Dodge

Part Label	Part No.	Align Range	Qualifier	Qty
Stratus				
Front				
2006-2006				
Ball Joint	K7451	±1°	Upper; adjustable	2
Camber Bushing	K7317	±1°	Upper; eccentric bushing kit	2
2005-2001				
Ball Joint	K7451	±1°	Sedan; Upper; adjustable	2
Cam Bolt Kit	K7436	±1-3/4°	Coupe; "Magna Cam"; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	Coupe; "Axis Cam"; 16mm bolts	2
Camber Bushing	K7317	±1°	Sedan; Upper; eccentric bushing kit	2
2000-1995				
Ball Joint	K7451	±1°	Upper; adjustable	2
Camber Bushing	K7317	±1°	Upper; eccentric bushing kit	2
Rear				
2006-2006				
Lateral Arm	K100004	camber ±3-1/2°	Rearward; adjustable	2
2005-2004				
Camber Shim	K7332	±1-1/4°	Coupe; Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
Lateral Arm	K100004	camber ±3-1/2°	Sedan; Rearward; adjustable	2
2003-2001				
Camber Shim	K7332	±1-1/4°	Coupe; Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
SX 2.0				
Front				
2005-2003				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2005-2003				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Lateral Arm	K100001	camber ±3-1/2°	adjustable	2
W100 Pickup				
Front				
1989-1986				
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4). K934 (1), K935 (1-1/4), K936 (1-1/2)	2
1977-1972				
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4). K934 (1), K935 (1-1/4), K936 (1-1/2)	2
W150 Pickup				
Front				
1993-1977				
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4). K934 (1), K935 (1-1/4), K936 (1-1/2)	2

Part Label	Part No.	Align Range	Qualifier	Qty
W200 Pickup				
Front				
1980-1972				
Camber Shim	K974 Series	3/8° to 1-1/2°	w/Dana 44 Axle; K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Camber Shim	K980 Series	3/8° to 1-1/2°	w/Dana 60 Axle; K980-3 (3/8), K980-4 (1/2), K980-5 (5/8), K980-6 (3/4), K980-7 (7/8), K980-8 (1), K980-9 (1-1/8), K980-10 (1-1/4), K980-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	w/Dana 44 Axle; K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
King Pin Repair Kit	K8832		Lower; w/4500 lb. Dana 60 Axle	1
1971-1969				
Camber Shim	K980 Series	3/8° to 1-1/2°	w/Dana 60 Axle; K980-3 (3/8), K980-4 (1/2), K980-5 (5/8), K980-6 (3/4), K980-7 (7/8), K980-8 (1), K980-9 (1-1/8), K980-10 (1-1/4), K980-12 (1-1/2)	2
King Pin Repair Kit	K8832		Lower; w/4500 lb. Dana 60 Axle	1
Front				
1980-1972				
Camber Kit	K992	1-1/2°	w/Dana 60 Axle; adjustable camber kingpin	2
1971-1969				
Camber Kit	K992	1-1/2°	w/Dana 60 Axle; adjustable camber kingpin	2
W250 Pickup				
Front				
1993-1990				
Camber Shim	K974 Series	3/8° to 1-1/2°	w/Dana 44 Axle; K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Camber Shim	K980 Series	3/8° to 1-1/2°	w/Dana 60 Axle; K980-3 (3/8), K980-4 (1/2), K980-5 (5/8), K980-6 (3/4), K980-7 (7/8), K980-8 (1), K980-9 (1-1/8), K980-10 (1-1/4), K980-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	w/Dana 44 Axle; K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
King Pin Repair Kit	K6652		Upper; w/Dana 60 Axle; Contains bushing, gasket, and oil seal; Use w/Eccentric Camber Adjusting king pin No. K992	2
King Pin Repair Kit	K8832		Lower; w/4500 lb. Dana 60 Axle	1
1989-1981				
Camber Shim	K974 Series	3/8° to 1-1/2°	w/Dana 44 Axle; K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Camber Shim	K980 Series	3/8° to 1-1/2°	w/Dana 60 Axle; K980-3 (3/8), K980-4 (1/2), K980-5 (5/8), K980-6 (3/4), K980-7 (7/8), K980-8 (1), K980-9 (1-1/8), K980-10 (1-1/4), K980-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	w/Dana 44 Axle; K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
King Pin Repair Kit	K6652		Upper; w/Dana 60 Axle; Contains bushing, gasket, and oil seal; Use w/Eccentric Camber Adjusting king pin No. K992	2
King Pin Repair Kit	K8832		Lower; w/4500 lb. Dana 60 Axle	1
Front				
1993-1990				
Camber Kit	K992	1-1/2°	w/Dana 60 Axle; adjustable camber kingpin	2

Dodge

Part Label	Part No.	Align Range	Qualifier	Qty
W300 Pickup				
Front				
1980-1972				
Camber Shim	K974 Series	3/8° to 1-1/2°	w/Dana 44 Axle; K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Camber Shim	K980 Series	3/8° to 1-1/2°	w/Dana 60 Axle; K980-3 (3/8), K980-4 (1/2), K980-5 (5/8), K980-6 (3/4), K980-7 (7/8), K980-8 (1), K980-9 (1-1/8), K980-10 (1-1/4), K980-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	w/Dana 44 Axle; K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
King Pin Repair Kit	K6652		Upper; w/Dana 60 Axle; Contains bushing, gasket, and oil seal; Use w/Eccentric Camber Adjusting king pin No. K992	2
King Pin Repair Kit	K8832		Lower; w/4500 lb. Dana 60 Axle	1
Front				
1980-1972				
Camber Kit	K992	1-1/2°	w/Dana 60 Axle; adjustable camber kingpin	2
W350 Pickup				
Front				
1993-1981				
Camber Shim	K974 Series	3/8° to 1-1/2°	w/Dana 44 Axle; K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Camber Shim	K980 Series	3/8° to 1-1/2°	w/Dana 60 Axle; K980-3 (3/8), K980-4 (1/2), K980-5 (5/8), K980-6 (3/4), K980-7 (7/8), K980-8 (1), K980-9 (1-1/8), K980-10 (1-1/4), K980-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	w/Dana 44 Axle; K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
King Pin Repair Kit	K6652		Upper; w/Dana 60 Axle; Contains bushing, gasket, and oil seal; Use w/Eccentric Camber Adjusting king pin No. K992	2
King Pin Repair Kit	K8832		Lower; w/4500 lb. Dana 60 Axle	1
Front				
1993-1981				
Camber Kit	K992	1-1/2°	w/Dana 60 Axle; adjustable camber kingpin	2
Eagle				
Part Label	Part No.	Align Range	Qualifier	Qty
2000 GTX				
Front				
1993-1991				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1993-1991				
Camber Shim	K7332	±1-1/4°	Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
Medallion				
Front				
1989-1988				
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Camber Wedge Kit	K90073	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
Rear				
1989-1988				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2

Part Label	Part No.	Align Range	Qualifier	Qty
Premier				
Front				

1992-1988

Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Camber Wedge Kit	K90073	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1

Rear				
-------------	--	--	--	--

1992-1988

Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2

Summit				
---------------	--	--	--	--

Front				
--------------	--	--	--	--

1996-1989

Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2

Talon				
--------------	--	--	--	--

Front				
--------------	--	--	--	--

1998-1995

Ball Joint	K7452	±1°	Upper; adjustable	2
Camber Adj. Anchor Bolt	K7330	1 1/2°	Upper Control Arm; Replaces O.E. non-adjustable anchor bolts; Incl. two adjustable bolts	2

1994-1990

Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Rear				
-------------	--	--	--	--

1998-1995

Cam Bolt Kit	K100048	-3/4° to +1-1/2°	Upper; Incl. bracket	1
Camber Shim	K7332	±1-1/4°	Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2

Vision				
---------------	--	--	--	--

Front				
--------------	--	--	--	--

1997-1993

Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2

Rear				
-------------	--	--	--	--

1997-1993

Lateral Arm	K7318	camber -2° to +1°	adjustable	2
-------------	--------------	-------------------	------------	---

Vista				
--------------	--	--	--	--

Front				
--------------	--	--	--	--

1991-1989

Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	Wagon; adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Part Label	Part No.	Align Range	Qualifier	Qty
128				
Front				

1979-1971

Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Fiat

Part Label	Part No.	Align Range	Qualifier	Qty
131				
Front				
1978-1975				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
500				
Front				
2014-2012				
Cam Bolt Kit	K100156	±1-3/4°	"Axis Cam"; 10mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2014-2012				
Camber/Toe Shim	K100147		shim thickness .010"; 12 shims per package	1
Camber/Toe Shim	K100148		shim thickness .015"; 12 shims per package	1
Camber/Toe Shim	K100149		shim thickness .020"; 12 shims per package	1
Camber/Toe Shim	K100150		shim thickness .030"; 12 shims per package	1
500L				
Front				
2014-2014				
Cam Bolt Kit	K100156	±1-3/4°	"Axis Cam"; 10mm bolts	2
Rear				
2014-2014				
Camber/Toe Shim	K100147		shim thickness .010"; 12 shims per package	1
Camber/Toe Shim	K100148		shim thickness .015"; 12 shims per package	1
Camber/Toe Shim	K100149		shim thickness .020"; 12 shims per package	1
Camber/Toe Shim	K100150		shim thickness .030"; 12 shims per package	1
Brava				
Front				
1981-1978				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Strada				
Front				
1982-1979				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
X-1/9				
Front				
1983-1974				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1983-1974				
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Part Label	Part No.	Align Range	Qualifier	Qty
Aerostar				
Front				
1996-1990				
Caster/Camber - Universal Bushing	K8709	$\pm 3/4^{\circ}$ to $\pm 2\ 3/4^{\circ}$	4WD; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8958 to K8969	0° to $2\ 3/4^{\circ}$	4WD; K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
1989-1986				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Aspire				
Front				
1997-1994				
Cam Bolt Kit	K90473	$\pm 1\ 3/4^{\circ}$	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	$\pm 1\ 3/4^{\circ}$	"Magna Cam"; 12mm bolts	2
Rear				
1997-1994				
Camber/Toe - Universal Shim	K915	$\pm 1\ 1/2^{\circ}$	universal full contact dual angle shim	2
Camber/Toe Shim	K993 Series	$1/4^{\circ}$ to $1\ 1/2^{\circ}$	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2

Ford

Part Label	Part No.	Align Range	Qualifier	Qty
Bronco				
Front				
1996-1987				
Camber Bushing	K8280 Series	1/4° to 2°	K8280 (1/4), K8281 (1/2), K8284 (3/4), K8285 (1), K8286 (1-1/4), K8287 (1-1/2), K8859 (2); Alternative to K8958 Series, K8709 Universal or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K80108	±3 1/4°	Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing Kit	K8746	±1°	Radius Arm To Frame; adjustable	2
1986-1981				
Camber Bushing	K8280 Series	1/4° to 2°	K8280 (1/4), K8281 (1/2), K8284 (3/4), K8285 (1), K8286 (1-1/4), K8287 (1-1/2), K8859 (2); Alternative to K8958 Series, K8709 Universal or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K80108	±3 1/4°	Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Radius Arm Bushing Kit	K8745	±1°	From 11/1/80; adjustable eccentric	2
1980-1980				
Camber Bushing	K8280 Series	1/4° to 2°	K8280 (1/4), K8281 (1/2), K8284 (3/4), K8285 (1), K8286 (1-1/4), K8287 (1-1/2), K8859 (2); Alternative to K8958 Series, K8709 Universal or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K80108	±3 1/4°	Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
1979-1966				
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2

Part Label	Part No.	Align Range	Qualifier	Qty
Bronco II				
Front				
1990-1990				
Caster/Camber - Universal Bushing	K80109	±4°	Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3°	4WD; K8970 (0), K8971 (3/16), K8972 (3/8), K8973 (5/8), K8974 (3/4), K8975 (7/8), K8976 (1), K8977 (1-3/16), K8978 (1-3/8), K8979 (1-3/4), K8980 (2), K8981 (2-1/4), K8982 (2-1/2), K8983 (2-3/4), K8984 (3)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
Caster/Camber Bushing Kit	K8746	±1°	4WD; Radius Arm To Frame; adjustable	2
1989-1989				
Caster/Camber - Universal Bushing	K80109	±4°	RWD; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K80153	±3-1/4°	4WD; Ultra Range; Alternative to K8566 Series or K8736 Universal Bushing	2
Caster/Camber - Universal Bushing	K8736	±2-3/4°	4WD; minimum adjustment 1 deg.; Alternative to K8566 Series or K80153 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	RWD; minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8566 to K8573	0 to 2°	4WD; K8530 (0), K8566 (1/4), K8567 (1/2), K8568 (3/4), K8569 (1), K8570 (1-1/4), K8571 (1-1/2), K8572 (1-3/4), K8573 (2); Alternative to K8736 or K80153 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3°	4WD; K8970 (0), K8971 (3/16), K8972 (3/8), K8973 (5/8), K8974 (3/4), K8975 (7/8), K8976 (1), K8977 (1-3/16), K8978 (1-3/8), K8979 (1-3/4), K8980 (2), K8981 (2-1/4), K8982 (2-1/2), K8983 (2-3/4), K8984 (3)	2
Caster/Camber Bushing Kit	K8746	±1°	4WD; Radius Arm To Frame; adjustable	2
1988-1984				
Caster/Camber - Universal Bushing	K80153	±3-1/4°	4WD; Ultra Range; Alternative to K8566 Series or K8736 Universal Bushing	2
Caster/Camber - Universal Bushing	K8668	±2-1/4°	RWD; Alternative to K8364 Series	2
Caster/Camber - Universal Bushing	K8736	±2-3/4°	4WD; minimum adjustment 1 deg.; Alternative to K8566 Series or K80153 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8364 to K8371	1/4° to 2°	RWD; K8364 (1/4), K8365 (1/2), K8366 (3/4), K8367 (1), K8368 (1-1/4), K8369 (1-1/2), K8370 (1-3/4), K8371 (2); Alternative to K8668 Universal Bushing	2
Caster/Camber Bushing	K8566 to K8573	0 to 2°	4WD; K8530 (0), K8566 (1/4), K8567 (1/2), K8568 (3/4), K8569 (1), K8570 (1-1/4), K8571 (1-1/2), K8572 (1-3/4), K8573 (2); Alternative to K8736 or K80153 Ultra Range Universal Bushing	2
Caster/Camber Bushing Kit	K8746	±1°	4WD; Radius Arm To Frame; adjustable	2
Contour				
Front				
2000-1995				
Strut Mount	K80113	±1°		2
Crown Victoria				
Front				
2011-2003				
Cam Bolt Kit	K100094	±1-1/2°	Lower Control Arm	1

Ford

Part Label	Part No.	Align Range	Qualifier	Qty
E-150 Series Van				
Front				
2013-1992				
Caster/Camber - Universal Bushing	K80109	±4°	Not designed for Commercial vehicles applications, Recreational vehicles, or vehicles with Modified Chassis.; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
E-250 Series Van				
Front				
2009-1992				
Caster/Camber - Universal Bushing	K80109	±4°	Not designed for Commercial vehicles applications, Recreational vehicles, or vehicles with Modified Chassis.; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
E-250 Super Duty				
Front				
2005-2004				
Caster/Camber - Universal Bushing	K80109	±4°	Not designed for Commercial vehicles applications, Recreational vehicles, or vehicles with Modified Chassis.; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
E-350 Series Van				
Front				
2005-1992				
Caster/Camber - Universal Bushing	K80109	±4°	Not designed for Commercial vehicles applications, Recreational vehicles, or vehicles with Modified Chassis.; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2

Part Label	Part No.	Align Range	Qualifier	Qty
E-350 Super Duty				
Front				
2014-2004				
Caster/Camber - Universal Bushing	K80109	±4°	Not designed for Commercial vehicles applications, Recreational vehicles, or vehicles with Modified Chassis.; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
E-450 Super Duty Series				
Front				
2009-2000				
Caster/Camber - Universal Bushing	K80109	±4°	Not designed for Commercial vehicles applications, Recreational vehicles, or vehicles with Modified Chassis.; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
E-550 Super Duty				
Front				
2003-2003				
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Econoline Super Duty				
Front				
1999-1996				
Caster/Camber - Universal Bushing	K80109	±4°	Not designed for Commercial vehicles applications, Recreational vehicles, or vehicles with Modified Chassis.; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
Edge				
Front				
2014-2007				
Cam Bolt Kit	K7436	±1-3/4°	"Magna Cam"; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2

Ford

Part Label	Part No.	Align Range	Qualifier	Qty
Escape				
Front				
2012-2001				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K80060	1-1/2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
2012-2001				
Control Arm	K100072	camber ±2°	Upper; adjustable; w/12mm Bushing Sleeve; Incl. Ball Joint	2
Escort				
Front				
2003-1997				
Cam Bolt Kit	K80110	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Camber Wedge Kit	K8877	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
1996-1991				
Cam Bolt Kit	K80110	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Camber Wedge Kit	K8358		Incl. 2 wedges, 4 bolts and nuts	1
1990-1986				
Strut Mount	K8574	±1-1/4°		2
1985-1985				
Strut Mount	K8574	±1-1/4°	From 3/1/85	2
Rear				
2003-2003				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Toe Adjusting Kit	K8585	2°	replaces OE non adjustable bushing on left rear stabilizer arm	1
2002-1997				
Camber Wedge Kit	K8877	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
1996-1995				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K8358		Incl. 2 wedges, 4 bolts and nuts	1
Toe Adjusting Kit	K8585	2°	replaces OE non adjustable bushing on left rear stabilizer arm	1
1994-1991				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K8358		Incl. 2 wedges, 4 bolts and nuts	1
Control Arm	K100050	toe -1° to +1-1/2°	Lower; adjustable	2
Toe Adjusting Kit	K8585	2°	replaces OE non adjustable bushing on left rear stabilizer arm	1
1990-1981				
Camber Wedge Kit	K8358		Incl. 2 wedges, 4 bolts and nuts	1

Part Label	Part No.	Align Range	Qualifier	Qty
Excursion				
Front				
2005-2000				
Caster/Camber - Universal Bushing	K80108	±3 1/4°	4WD; Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K80109	±4°	RWD; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	4WD; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	RWD; minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	RWD; Upper; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K100059 to K100065	1/4° to 2°	4WD; Upper; K100059 (1/4), K100060 (1/2), K100061 (3/4), K100062 (1), K100063 (1-1/4), K100064 (1-1/2), K100065 (2); Alternative to K8709 Universal Bushing	2
Caster/Camber Bushing	K8958 to K8969	0° to 2-3/4°	4WD; K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3°	4WD; K8970 (0), K8971 (3/16), K8972 (3/8), K8973 (5/8), K8974 (3/4), K8975 (7/8), K8976 (1), K8977 (1-3/16), K8978 (1-3/8), K8979 (1-3/4), K8980 (2), K8981 (2-1/4), K8982 (2-1/2), K8983 (2-3/4), K8984 (3)	2
EXP				
Front				
1988-1986				
Strut Mount	K8574	±1-1/4°		2
Rear				
1988-1982				
Camber Wedge Kit	K8358		Incl. 2 wedges, 4 bolts and nuts	1

Ford

Part Label	Part No.	Align Range	Qualifier	Qty
Expedition				
Front				
2012-2007				
Cam Bolt Kit	K100010	camber $\pm 1\text{-}1/2^\circ$; caster $\pm 2^\circ$	Lower Control Arm	1
Caster/Camber Kit	K100025	camber $\pm 1^\circ$; caster $\pm 1\text{-}1/2^\circ$	Lower; Cam Nut	2
Caster/Camber Kit	K100070	camber $\pm 1^\circ$; caster $\pm 1\text{-}1/2^\circ$	Lower	2
2006-2004				
Camber Caster Plate	K80069	camber $\pm 2^\circ$; caster $\pm 1\text{-}1/2^\circ$	Lower; adjustable	1
2003-2003				
Cam Bolt Kit	K8740	$\pm 1\text{-}1/4^\circ$	Upper Control Arm; For models w/factory provided cam bolts; Incl. cams and bolts	2
Camber Caster Plate	K80069	camber $\pm 2^\circ$; caster $\pm 1\text{-}1/2^\circ$	Lower; adjustable	1
2002-1999				
Cam Bolt Kit	K8740	$\pm 1\text{-}1/4^\circ$	Upper Control Arm; For models w/factory provided cam bolts; Incl. cams and bolts	2
Torsion Bar Key	K100014	1/2" to 1-1/2"	4WD; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
1998-1997				
Cam Bolt Kit	K8740	$\pm 1\text{-}1/4^\circ$	Upper Control Arm; 2nd design; For models w/factory provided cam bolts; Incl. cams and bolts	2
Caster/Camber Cam	K8701	$\pm 2\text{-}1/2^\circ$	Upper Control Arm; 1st design; For models w/factory locking plate; Cam only	2
Torsion Bar Key	K100014	1/2" to 1-1/2"	4WD; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Rear				
2006-2003				
Cam Bolt Kit	K80064	$\pm 2\text{-}3/4^\circ$	Upper; adjustable	2

Part Label	Part No.	Align Range	Qualifier	Qty
Explorer				
Front				
2014-2011				
Cam Bolt Kit	K7436	±1-3/4°	"Magna Cam"; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
2010-2006				
Caster/Camber Washers	K80056	Camber ±3/4°/ Caster ±1 1/4°	4WD; Upper; Heavy Duty washer kit; designed to replace OEM locking plate	2
2005-2004				
Caster/Camber Kit	K80111	±3/4°		2
Caster/Camber Washers	K80056	Camber ±3/4°/ Caster ±1 1/4°	Upper; Heavy Duty washer kit; designed to replace OEM locking plate	2
2003-2002				
Caster/Camber Kit	K80111	±3/4°	4 Door	2
Caster/Camber Washers	K80056	Camber ±3/4°/ Caster ±1 1/4°	Upper; 4 Door; Heavy Duty washer kit; designed to replace OEM locking plate	2
2001-1995				
Camber Kit	K80065	±1-5/8°	Upper	2
Caster/Camber Kit	K8674	±1-1/4°	Upper; Incl. 2 Cams	2
1994-1991				
Caster/Camber - Universal Bushing	K80109	±4°	Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3°	4WD; K8970 (0), K8971 (3/16), K8972 (3/8), K8973 (5/8), K8974 (3/4), K8975 (7/8), K8976 (1), K8977 (1-3/16), K8978 (1-3/8), K8979 (1-3/4), K8980 (2), K8981 (2-1/4), K8982 (2-1/2), K8983 (2-3/4), K8984 (3)	2
Caster/Camber Bushing Kit	K8746	±1°	Radius Arm To Frame; adjustable	2
Rear				
2006-2004				
Caster/Camber Kit	K80112	±1/2°		2
Caster/Camber Washers	K80056	Camber ±1/2°	Lower; Heavy Duty washer kit; designed to replace OEM locking plate	2
2003-2002				
Caster/Camber Kit	K80112	±1/2°	4 Door	2
Caster/Camber Washers	K80056	Camber ±1/2°	4 Door; Lower; Heavy Duty washer kit; designed to replace OEM locking plate	2
Explorer Sport Trac				
Front				
2004-2001				
Camber Kit	K80065	±1-5/8°	Upper	2
Caster/Camber Kit	K8674	±1-1/4°	Upper; Incl. 2 Cams	2

Ford

Part Label	Part No.	Align Range	Qualifier	Qty
F-100 Pickup				
Front				
1983-1980				
Caster/Camber - Universal Bushing	K8668	±2-1/4°	Alternative to K8364 Series	2
Caster/Camber Bushing	K8364 to K8371	1/4° to 2°	K8364 (1/4), K8365 (1/2), K8366 (3/4), K8367 (1), K8368 (1-1/4), K8369 (1-1/2), K8370 (1-3/4), K8371 (2); Alternative to K8668 Universal Bushing	2
Radius Arm Bushing Kit	K8745	±1°	From 11/1/80; adjustable eccentric	2
1976-1970				
Camber Shim	K974 Series	3/8° to 1-1/2°	4WD; K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	4WD; K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
F-150 Heritage				
Front				
2004-2004				
Cam Bolt Kit	K8740	±1-1/4°	Upper Control Arm; For models w/factory provided cam bolts; Incl. cams and bolts	2
Caster/Camber Kit	K100070	camber ±1°; caster ±1-1/2°	Lower; Naturally Aspirated	2
Torsion Bar Key	K100014	1/2" to 1-1/2"	4WD; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1

Part Label	Part No.	Align Range	Qualifier	Qty
F-150 Pickup				
Front				
2014-2009				
Cam Bolt Kit	K100010	camber $\pm 1\text{-}1/2^\circ$; caster $\pm 2^\circ$	Lower Control Arm	1
Caster/Camber Kit	K100025	camber $\pm 1^\circ$; caster $\pm 1\text{-}1/2^\circ$	Lower; Cam Nut	2
Caster/Camber Kit	K100070	camber $\pm 1^\circ$; caster $\pm 1\text{-}1/2^\circ$	Lower	2
2008-2004				
Cam Bolt Kit	K80087	$\pm 2^\circ \pm 1\text{-}1/2^\circ$	Lower; Incl. 2 cams, bolts, guides and hardware	2
Caster/Camber Kit	K100025	camber $\pm 1^\circ$; caster $\pm 1\text{-}1/2^\circ$	Lower; Cam Nut	2
Caster/Camber Kit	K100070	camber $\pm 1^\circ$; caster $\pm 1\text{-}1/2^\circ$	Lower	2
2003-2000				
Cam Bolt Kit	K8740	$\pm 1\text{-}1/4^\circ$	Upper Control Arm; For models w/factory provided cam bolts; Incl. cams and bolts	2
Torsion Bar Key	K100014	1/2" to 1-1/2"	4WD; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
1999-1997				
Cam Bolt Kit	K8740	$\pm 1\text{-}1/4^\circ$	Upper Control Arm; 2nd design; For models w/factory provided cam bolts; Incl. cams and bolts	2
Caster/Camber Cam	K8701	$\pm 2\text{-}1/2^\circ$	Upper Control Arm; 1st design; For models w/factory locking plate; Cam only	2
Torsion Bar Key	K100014	1/2" to 1-1/2"	4WD; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
1996-1987				
Camber Bushing	K8280 Series	1/4° to 2°	4WD; K8280 (1/4), K8281 (1/2), K8284 (3/4), K8285 (1), K8286 (1-1/4), K8287 (1-1/2), K8859 (2); Alternative to K8958 Series, K8709 Universal or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K80108	$\pm 3\text{-}1/4^\circ$	4WD; Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K80109	$\pm 4^\circ$	RWD; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	$\pm 3/4^\circ$ to $\pm 2\text{-}3/4^\circ$	4WD; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	$\pm 2\text{-}1/4^\circ$	RWD; minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8958 to K8969	0° to 2-3/4°	4WD; K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3°	4WD; K8970 (0), K8971 (3/16), K8972 (3/8), K8973 (5/8), K8974 (3/4), K8975 (7/8), K8976 (1), K8977 (1-3/16), K8978 (1-3/8), K8979 (1-3/4), K8980 (2), K8981 (2-1/4), K8982 (2-1/2), K8983 (2-3/4), K8984 (3)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
Caster/Camber Bushing Kit	K8746	$\pm 1^\circ$	Radius Arm To Frame; adjustable	2
1986-1980				
Camber Bushing	K8280 Series	1/4° to 2°	4WD; K8280 (1/4), K8281 (1/2), K8284 (3/4), K8285 (1), K8286 (1-1/4), K8287 (1-1/2), K8859 (2); Alternative to K8958 Series, K8709 Universal or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K80108	$\pm 3\text{-}1/4^\circ$	4WD; Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K8668	$\pm 2\text{-}1/4^\circ$	RWD; Alternative to K8364 Series	2
Caster/Camber - Universal Bushing	K8709	$\pm 3/4^\circ$ to $\pm 2\text{-}3/4^\circ$	4WD; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2

Ford

Part Label	Part No.	Align Range	Qualifier	Qty
F-150 Pickup				
Front				
1986-1980				
Caster/Camber Bushing	K8364 to K8371	1/4° to 2°	RWD: K8364 (1/4), K8365 (1/2), K8366 (3/4), K8367 (1), K8368 (1-1/4), K8369 (1-1/2), K8370 (1-3/4), K8371 (2); Alternative to K8668 Universal Bushing	2
Caster/Camber Bushing	K8958 to K8969	0° to 2-3/4°	4WD: K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2
Radius Arm Bushing Kit	K8745	±1°	From 11/1/80; adjustable eccentric	2
1979-1976				
Camber Shim	K974 Series	3/8° to 1-1/2°	4WD: K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	4WD: K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2

Part Label	Part No.	Align Range	Qualifier	Qty
F-250 Pickup				
Front				
1999-1998				
Cam Bolt Kit	K8740	±1-1/4°	Upper Control Arm; 2nd design; For models w/factory provided cam bolts; Incl. cams and bolts	2
Caster/Camber - Universal Bushing	K80109	±4°	RWD; H/D; w/Twin I-Beam Axle; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	RWD; Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3°	4WD; K8970 (0), K8971 (3/16), K8972 (3/8), K8973 (5/8), K8974 (3/4), K8975 (7/8), K8976 (1), K8977 (1-3/16), K8978 (1-3/8), K8979 (1-3/4), K8980 (2), K8981 (2-1/4), K8982 (2-1/2), K8983 (2-3/4), K8984 (3)	2
Torsion Bar Key	K100014	1/2" to 1-1/2"	4WD; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
1997-1997				
Cam Bolt Kit	K8740	±1-1/4°	Upper Control Arm; w/Independent Front Suspension; 2nd design; For models w/factory provided cam bolts; Incl. cams and bolts	2
Camber Bushing	K8280 Series	1/4° to 2°	4WD; K8280 (1/4), K8281 (1/2), K8284 (3/4), K8285 (1), K8286 (1-1/4), K8287 (1-1/2), K8859 (2); Alternative to K8958 Series, K8709 Universal or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K80108	±3 1/4°	4WD; Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K80109	±4°	RWD; H/D; w/Twin I-Beam Axle; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	4WD; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	RWD; H/D; w/Twin I-Beam Axle; minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	RWD; Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K100059 to K100065	1/4° to 2°	4WD; Upper; H/D; w/Twin I-Beam Axle; K100059 (1/4), K100060 (1/2), K100061 (3/4), K100062 (1), K100063 (1-1/4), K100064 (1-1/2), K100065 (2); Alternative to K8709 Universal Bushing	2
Caster/Camber Bushing	K8958 to K8969	0° to 2-3/4°	4WD; K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3°	4WD; K8970 (0), K8971 (3/16), K8972 (3/8), K8973 (5/8), K8974 (3/4), K8975 (7/8), K8976 (1), K8977 (1-3/16), K8978 (1-3/8), K8979 (1-3/4), K8980 (2), K8981 (2-1/4), K8982 (2-1/2), K8983 (2-3/4), K8984 (3)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
Caster/Camber Bushing Kit	K8746	±1°	RWD; Radius Arm To Frame; w/Twin I-Beam susp.	2
Caster/Camber Cam	K8701	±2 1/2°	Upper Control Arm; 1st design; w/Independent Front Suspension; For models w/factory locking plate; Cam only; adjustment range from 3/4 to 2-3/4 deg.	2
Torsion Bar Key	K100014	1/2" to 1-1/2"	4WD; w/Independent Front Suspension; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
1996-1987				
Camber Bushing	K8280 Series	1/4° to 2°	4WD; K8280 (1/4), K8281 (1/2), K8284 (3/4), K8285 (1), K8286 (1-1/4), K8287 (1-1/2), K8859 (2); Alternative to K8958 Series, K8709 Universal or K80108 Ultra Range Universal Bushing	2

Ford

Part Label	Part No.	Align Range	Qualifier	Qty
F-250 Pickup				
Front				
1996-1987				
Caster/Camber - Universal Bushing	K80108	±3 1/4°	4WD; Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K80109	±4°	RWD; w/Twin I-Beam Axle; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	4WD; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	RWD; w/Twin I-Beam Axle; minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K8958 to K8969	0° to 2-3/4°	4WD; K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3°	4WD; K8970 (0), K8971 (3/16), K8972 (3/8), K8973 (5/8), K8974 (3/4), K8975 (7/8), K8976 (1), K8977 (1-3/16), K8978 (1-3/8), K8979 (1-3/4), K8980 (2), K8981 (2-1/4), K8982 (2-1/2), K8983 (2-3/4), K8984 (3)	2
Caster/Camber Bushing Kit	K8746	±1°	RWD; adius Arm To Frame; adjustable	2
1986-1980				
Camber Bushing	K8280 Series	1/4° to 2°	4WD; K8280 (1/4), K8281 (1/2), K8284 (3/4), K8285 (1), K8286 (1-1/4), K8287 (1-1/2), K8859 (2); Alternative to K8958 Series, K8709 Universal or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K80108	±3 1/4°	4WD; Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K8668	±2-1/4°	RWD; Alternative to K8364 Series	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	4WD; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8364 to K8371	1/4° to 2°	RWD; K8364 (1/4), K8365 (1/2), K8366 (3/4), K8367 (1), K8368 (1-1/4), K8369 (1-1/2), K8370 (1-3/4), K8371 (2); Alternative to K8668 Universal Bushing	2
Caster/Camber Bushing	K8958 to K8969	0° to 2-3/4°	4WD; K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2
Radius Arm Bushing Kit	K8745	±1°	RWD; From 11/1/80; adjustable eccentric	2
1979-1972				
Camber Shim	K974 Series	3/8° to 1-1/2°	4WD; K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	4WD; K931 (1/4), K932 (1/2), K933 (3/4). K934 (1), K935 (1-1/4), K936 (1-1/2)	2
1971-1970				
Camber Shim	K974 Series	3/8° to 1-1/2°	4WD; K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	4WD; K931 (1/4), K932 (1/2), K933 (3/4). K934 (1), K935 (1-1/4), K936 (1-1/2)	2
Front				
1979-1972				
Camber Kit	K992	1-1/2°	4WD; w/Dana 60 Axle; adjustable camber kingpin	2

Part Label	Part No.	Align Range	Qualifier	Qty
F-250 Super Duty Pickup				
Front				
2014-2005				
Caster/Camber - Universal Bushing	K80109	±4°	RWD; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K80154	±2-1/2°	4WD; Ultra Range; Alternative to K80116 Series	1
Caster/Camber - Universal Bushing	K8986	±2-1/4°	RWD; minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	RWD; Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K80116 to K80126	0° to 2-1/2°	4WD; Full Contact Shims; K80116 (0), K80117 (1/4), K80118 (1/2), K80119 (3/4), K80120 (1), K80121 (1-1/4), K80122 (1-1/2), K80123 (1-3/4), K80124 (2), K80125 (2-1/4), K80126 (2-1/2); Alternative to K80154 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
2004-1999				
Caster/Camber - Universal Bushing	K80108	±3 1/4°	4WD; Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K80109	±4°	RWD; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	4WD; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	RWD; minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	RWD; Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K100059 to K100065	1/4° to 2°	4WD; Upper; K100059 (1/4), K100060 (1/2), K100061 (3/4), K100062 (1), K100063 (1-1/4), K100064 (1-1/2), K100065 (2); Alternative to K8709 Universal Bushing	2
Caster/Camber Bushing	K8958 to K8969	0° to 2-3/4°	4WD; K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2

Ford

Part Label	Part No.	Align Range	Qualifier	Qty
F-350 Pickup				
Front				
1997-1992				
Camber Bushing	K8280 Series	1/4° to 2°	4WD; K8280 (1/4), K8281 (1/2), K8284 (3/4), K8285 (1), K8286 (1-1/4), K8287 (1-1/2), K8859 (2); Alternative to K8958 Series, K8709 Universal or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K80108	±3 1/4°	4WD; Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K80109	±4°	RWD; w/Twin I-Beam Axle; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	4WD; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	RWD; w/Twin I-Beam Axle; minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	RWD; Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K100059 to K100065	1/4° to 2°	4WD; Crew Cab; Upper; K100059 (1/4), K100060 (1/2), K100061 (3/4), K100062 (1), K100063 (1-1/4), K100064 (1-1/2), K100065 (2); Alternative to K8709 Universal Bushing	2
Caster/Camber Bushing	K8958 to K8969	0° to 2-3/4°	4WD; K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3°	4WD; K8970 (0), K8971 (3/16), K8972 (3/8), K8973 (5/8), K8974 (3/4), K8975 (7/8), K8976 (1), K8977 (1-3/16), K8978 (1-3/8), K8979 (1-3/4), K8980 (2), K8981 (2-1/4), K8982 (2-1/2), K8983 (2-3/4), K8984 (3)	2
Caster/Camber Bushing Kit	K8746	±1°	RWD; Radius Arm To Frame; adjustable	2
1991-1987				
Camber Bushing	K8280 Series	1/4° to 2°	4WD; K8280 (1/4), K8281 (1/2), K8284 (3/4), K8285 (1), K8286 (1-1/4), K8287 (1-1/2), K8859 (2); Alternative to K8958 Series, K8709 Universal or K80108 Ultra Range Universal Bushing	2
Camber Shim	K980 Series	3/8° to 1-1/2°	4WD; w/Dana 60 Axle; K980-3 (3/8), K980-4 (1/2), K980-5 (5/8), K980-6 (3/4), K980-7 (7/8), K980-8 (1), K980-9 (1-1/8), K980-10 (1-1/4), K980-12 (1-1/2)	2
Caster/Camber - Universal Bushing	K80108	±3 1/4°	4WD; Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K80109	±4°	RWD; w/Twin I-Beam Axle; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	4WD; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	RWD; w/Twin I-Beam Axle; minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K8958 to K8969	0° to 2-3/4°	4WD; K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3°	4WD; K8970 (0), K8971 (3/16), K8972 (3/8), K8973 (5/8), K8974 (3/4), K8975 (7/8), K8976 (1), K8977 (1-3/16), K8978 (1-3/8), K8979 (1-3/4), K8980 (2), K8981 (2-1/4), K8982 (2-1/2), K8983 (2-3/4), K8984 (3)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2

Part Label	Part No.	Align Range	Qualifier	Qty
F-350 Pickup				
Front				
1991-1987				
Caster/Camber Bushing Kit	K8746	±1°	RWD; Radius Arm To Frame; adjustable	2
King Pin Repair Kit	K6652		4WD; Upper; w/Dana 60 Axle; Contains bushing, gasket, and oil seal; Use w/Eccentric Camber Adjusting king pin No. K992	2
King Pin Repair Kit	K8833		4WD; Lower; w/Dana 60 Axle; Incl. bearings, race, seals, and caps	2
1986-1985				
Camber Bushing	K8280 Series	1/4° to 2°	4WD; K8280 (1/4), K8281 (1/2), K8284 (3/4), K8285 (1), K8286 (1-1/4), K8287 (1-1/2), K8859 (2); Alternative to K8958 Series, K8709 Universal or K80108 Ultra Range Universal Bushing	2
Camber Shim	K980 Series	3/8° to 1-1/2°	4WD; From 2/1/85; w/Dana 60 Axle; K980-3 (3/8), K980-4 (1/2), K980-5 (5/8), K980-6 (3/4), K980-7 (7/8), K980-8 (1), K980-9 (1-1/8), K980-10 (1-1/4), K980-12 (1-1/2)	2
Caster/Camber - Universal Bushing	K80108	±3 1/4°	4WD; Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K8668	±2-1/4°	RWD; Alternative to K8364 Series	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	4WD; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8364 to K8371	1/4° to 2°	RWD; K8364 (1/4), K8365 (1/2), K8366 (3/4), K8367 (1), K8368 (1-1/4), K8369 (1-1/2), K8370 (1-3/4), K8371 (2); Alternative to K8668 Universal Bushing	2
Caster/Camber Bushing	K8958 to K8969	0° to 2-3/4°	4WD; K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2
King Pin Repair Kit	K6652		4WD; Upper; w/Dana 60 Axle; Contains bushing, gasket, and oil seal; Use w/Eccentric Camber Adjusting king pin No. K992	2
King Pin Repair Kit	K8833		4WD; Lower; From 2/1/85; w/Dana 60 Axle; Incl. bearings, race, seals, and caps	2
Radius Arm Bushing Kit	K8745	±1°	RWD; adjustable	2
1984-1980				
Camber Bushing	K8280 Series	1/4° to 2°	4WD; K8280 (1/4), K8281 (1/2), K8284 (3/4), K8285 (1), K8286 (1-1/4), K8287 (1-1/2), K8859 (2); Alternative to K8958 Series, K8709 Universal or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K80108	±3 1/4°	4WD; Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K8668	±2-1/4°	RWD; Alternative to K8364 Series	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	4WD; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8364 to K8371	1/4° to 2°	RWD; K8364 (1/4), K8365 (1/2), K8366 (3/4), K8367 (1), K8368 (1-1/4), K8369 (1-1/2), K8370 (1-3/4), K8371 (2); Alternative to K8668 Universal Bushing	2
Caster/Camber Bushing	K8958 to K8969	0° to 2-3/4°	4WD; K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2
King Pin Repair Kit	K6652		4WD; Upper; w/Dana 60 Axle; Contains bushing, gasket, and oil seal; Use w/Eccentric Camber Adjusting king pin No. K992	2
Radius Arm Bushing Kit	K8745	±1°	RWD; adjustable	2
1979-1979				
Camber Shim	K980 Series	3/8° to 1-1/2°	4WD; w/Dana 60 Axle; K980-3 (3/8), K980-4 (1/2), K980-5 (5/8), K980-6 (3/4), K980-7 (7/8), K980-8 (1), K980-9 (1-1/8), K980-10 (1-1/4), K980-12 (1-1/2)	2
King Pin Repair Kit	K6652		4WD; Upper; w/Dana 60 Axle; Contains bushing, gasket, and oil seal; Use w/Eccentric Camber Adjusting king pin No. K992	2
King Pin Repair Kit	K8832		Lower; Dana 60 Axle	1

Ford

Part Label	Part No.	Align Range	Qualifier	Qty
F-350 Pickup				
Front				
1991-1987				
Camber Kit	K992	1-1/2°	4WD; w/Dana 60 Axle; adjustable camber kingpin	2
1986-1985				
Camber Kit	K992	1-1/2°	4WD; w/Dana 60 Axle; adjustable camber kingpin	2
1984-1980				
Camber Kit	K992	1-1/2°	4WD; w/Dana 60 Axle; adjustable camber kingpin	2
1979-1979				
Camber Kit	K992	1-1/2°	4WD; w/Dana 60 Axle; adjustable camber kingpin	2
F-350 Super Duty Pickup				
Front				
2014-2005				
Caster/Camber - Universal Bushing	K80109	±4°	RWD; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K80154	±2-1/2°	4WD; Ultra Range; Alternative to K80116 Series	1
Caster/Camber - Universal Bushing	K8986	±2-1/4°	RWD; minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K80116 to K80126	0° to 2-1/2°	4WD; Full Contact Shims; K80116 (0), K80117 (1/4), K80118 (1/2), K80119 (3/4), K80120 (1), K80121 (1-1/4), K80122 (1-1/2), K80123 (1-3/4), K80124 (2), K80125 (2-1/4), K80126 (2-1/2); Alternative to K80154 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
2004-1999				
Caster/Camber - Universal Bushing	K80108	±3 1/4°	4WD; Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K80109	±4°	RWD; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	4WD; Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	RWD; minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	RWD; Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K100059 to K100065	1/4° to 2°	4WD; Upper; K100059 (1/4), K100060 (1/2), K100061 (3/4), K100062 (1), K100063 (1-1/4), K100064 (1-1/2), K100065 (2); Alternative to K8709 Universal Bushing	2
Caster/Camber Bushing	K8958 to K8969	0° to 2-3/4°	4WD; K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2

Part Label	Part No.	Align Range	Qualifier	Qty
F-450 Super Duty Pickup				
Front				
2014-2005				
Caster/Camber - Universal Bushing	K80155	±2-1/2°	Ultra Range; Alternative to K80128 Series	1
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K80128 to K80136	0° to 2°	K80128 (0), K80129 (1/4), K80130 (1/2), K80131 (3/4), K80132 (1), K80133 (1-1/4), K80134 (1-1/2), K80135 (1-3/4), K80136 (2); Alternative to K80155 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
2004-1999				
Caster/Camber - Universal Bushing	K80108	±3 1/4°	Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K100059 to K100065	1/4° to 2°	Upper; K100059 (1/4), K100060 (1/2), K100061 (3/4), K100062 (1), K100063 (1-1/4), K100064 (1-1/2), K100065 (2); Alternative to K8709 Universal Bushing	2
Caster/Camber Bushing	K8958 to K8969	0° to 2-3/4°	K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2
F-550 Super Duty Pickup				
Front				
2014-2005				
Caster/Camber - Universal Bushing	K80155	±2-1/2°	Ultra Range; Alternative to K80128 Series	1
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K80128 to K80136	0° to 2°	K80128 (0), K80129 (1/4), K80130 (1/2), K80131 (3/4), K80132 (1), K80133 (1-1/4), K80134 (1-1/2), K80135 (1-3/4), K80136 (2); Alternative to K80155 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
2004-1999				
Caster/Camber - Universal Bushing	K80108	±3 1/4°	Ultra Range; Alternative to K8958 Series or K8709 Universal Bushing	2
Caster/Camber - Universal Bushing	K8709	±3/4° to ±2 3/4°	Alternative to K8958 Series or K80108 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; Designed for commercial, recreational, or vehicles with modified chassis.; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K100059 to K100065	1/4° to 2°	Upper; K100059 (1/4), K100060 (1/2), K100061 (3/4), K100062 (1), K100063 (1-1/4), K100064 (1-1/2), K100065 (2); Alternative to K8709 Universal Bushing	2
Caster/Camber Bushing	K8958 to K8969	0° to 2-3/4°	K8958 (0), K8959 (1/4), K8960 (1/2), K8961 (3/4), K8962 (1), K8963 (1-1/4), K8964 (1-1/2), K8965 (1-3/4), K8966 (2), K8967 (2-1/4), K8968 (2-1/2), K8969 (2-3/4); Alternative to K8709 or K80108 Ultra Range Universal Bushing	2

Ford

Part Label	Part No.	Align Range	Qualifier	Qty
Fairlane				
Front				
1970-1966				
Cam Bolt Kit	K8243A	±1-1/8°	Lower Control Arm	2
Control Arm Shaft Kit	K8233		Upper; {K8131} Threaded Type Shaft Kit Cannot Be Installed If {K8233} Was Previously Installed; rubber bushing type	2
Fairmont				
Front				
1983-1978				
Camber Wedge Kit	K8825	2°	adjustable; Incl. 2 wedges	1
Falcon				
Front				
1970-1966				
Cam Bolt Kit	K8243A	±1-1/8°	Lower Control Arm	2
Control Arm Shaft Kit	K8233		Upper; {K8131} Threaded Type Shaft Kit Cannot Be Installed If {K8233} Was Previously Installed; rubber bushing type	2
Festiva				
Front				
1993-1988				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
1993-1988				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Fiesta				
Front				
2014-2011				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
1980-1978				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Five Hundred				
Rear				
2007-2005				
Camber Bushing	K100087	±1 1/2°	FWD; Upper; adjustable	2
Focus				
Front				
2014-2006				
Camber Caster Plate	K80001	±1°	Upper Strut; adjust in 1/4 deg. Increments	1
2005-2000				
Camber Caster Plate	K80001	±1°	Upper Strut; adjust in 1/4 deg. Increments	1
Strut Mount	K100058	±1°	adjustable	2

Part Label	Part No.	Align Range	Qualifier	Qty
Focus				
Rear				
2014-2014				
Cam Bolt Kit	K100009	±1°	Upper	2
Camber Shim	K100126	±1°		1
Camber Shim	K100135	±1/2°		1
2013-2012				
Cam Bolt Kit	K100009	±1°	Upper	2
Cam Bolt Kit	K80002	-1/2° to 1°		1
Camber Shim	K100126	±1°		1
Camber Shim	K100135	±1/2°		1
2011-2003				
Cam Bolt Kit	K100009	±1°	Upper	2
Cam Bolt Kit	K80002	-1/2° to 1°		1
Camber Shim	K100126	±1°		1
Camber Shim	K100135	±1/2°		1
Control Arm	K100002	camber -1-1/2° to +5°	Upper; adjustable	2
2002-2000				
Cam Bolt Kit	K100009	±1°	Upper	2
Camber Shim	K100126	±1°		1
Camber Shim	K100135	±1/2°		1
Control Arm	K100002	camber -1-1/2° to +5°	Upper; adjustable	2
Freestar				
Front				
2007-2004				
Camber Caster Plate	K8991	±1 1/4°	Upper Strut; 1 plate per package	1
Freestyle				
Rear				
2007-2005				
Camber Bushing	K100087	±1 1/2°	FWD; Upper; adjustable	2
Fusion				
Front				
2012-2006				
Ball Joint	K500013	±1°	Upper; adjustable	2
Granada				
Front				
1982-1981				
Camber Wedge Kit	K8825	2°	adjustable; Incl. 2 wedges	1
1980-1975				
Cam Bolt Kit	K8243A	±1-1/8°	Lower Control Arm	2
LTD				
Front				
1986-1983				
Camber Wedge Kit	K8825	2°	Base Models; Brougham; adjustable; Incl. 2 wedges	1
Maverick				
Front				
1977-1970				
Cam Bolt Kit	K8243A	±1-1/8°	Lower Control Arm	2
Control Arm Shaft Kit	K8233		Upper; {K8131} Threaded Type Shaft Kit Cannot Be Installed If {K8233} Was Previously Installed; rubber bushing type	2

Ford

Part Label	Part No.	Align Range	Qualifier	Qty
Mustang				
Front				
2014-2005				
Cam Bolt Kit	K90350	±1-3/4°	Pending Supersession to K90473	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Camber Wedge Kit	K100084	camber ±1-1/2°; caster ±1/2°	adjustable	1
Caster/Camber Kit	K100139	camber ±1-1/2°; caster ±1/2°		2
2004-1979				
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Camber Wedge Kit	K80059	+1 1/2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1973-1967				
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Cam Bolt Kit	K8243A	±1-1/8°	Lower Control Arm	2
Control Arm Shaft Kit	K8233		Upper; {K8131} Threaded Type Shaft Kit Cannot Be Installed If {K8233} Was Previously Installed; rubber bushing type	2
Probe				
Front				
1997-1989				
Cam Bolt Kit	K80110	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1997-1989				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Ranchero				
Front				
1971-1966				
Cam Bolt Kit	K8243A	±1-1/8°	Lower Control Arm	2
Control Arm Shaft Kit	K8233		Upper; {K8131} Threaded Type Shaft Kit Cannot Be Installed If {K8233} Was Previously Installed; rubber bushing type	2

Part Label	Part No.	Align Range	Qualifier	Qty
Ranger				
Front				
2012-1998				
Camber Kit	K80065	±1-5/8°	Upper	2
Caster/Camber Kit	K8674	±1-1/4°	Upper; Incl. 2 Cams	2
1997-1990				
Caster/Camber - Universal Bushing	K80109	±4°	Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
Caster/Camber Bushing Kit	K8746	±1°	Radius Arm To Frame; adjustable	2
1989-1989				
Caster/Camber - Universal Bushing	K80109	±4°	RWD; Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K80153	±3-1/4°	4WD; Ultra Range; Alternative to K8566 Series or K8736 Universal Bushing	2
Caster/Camber - Universal Bushing	K8736	±2-3/4°	4WD; minimum adjustment 1 deg.; Alternative to K8566 Series or K80153 Ultra Range Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	RWD; minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8566 to K8573	0 to 2°	4WD; K8530 (0), K8566 (1/4), K8567 (1/2), K8568 (3/4), K8569 (1), K8570 (1-1/4), K8571 (1-1/2), K8572 (1-3/4), K8573 (2); Alternative to K8736 or K80153 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
Caster/Camber Bushing Kit	K8746	±1°	Radius Arm To Frame; adjustable	2
1988-1983				
Caster/Camber - Universal Bushing	K80153	±3-1/4°	4WD; Ultra Range; Alternative to K8566 Series or K8736 Universal Bushing	2
Caster/Camber - Universal Bushing	K8668	±2-1/4°	RWD; Alternative to K8364 Series	2
Caster/Camber - Universal Bushing	K8736	±2-3/4°	4WD; minimum adjustment 1 deg.; Alternative to K8566 Series or K80153 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8364 to K8371	1/4° to 2°	RWD; K8364 (1/4), K8365 (1/2), K8366 (3/4), K8367 (1), K8368 (1-1/4), K8369 (1-1/2), K8370 (1-3/4), K8371 (2); Alternative to K8668 Universal Bushing	2
Caster/Camber Bushing	K8566 to K8573	0 to 2°	4WD; K8530 (0), K8566 (1/4), K8567 (1/2), K8568 (3/4), K8569 (1), K8570 (1-1/4), K8571 (1-1/2), K8572 (1-3/4), K8573 (2); Alternative to K8736 or K80153 Ultra Range Universal Bushing	2
Caster/Camber Bushing Kit	K8746	±1°	Radius Arm To Frame; adjustable	2
Taurus				
Front				
2007-1996				
Camber Caster Plate	K8990	±1 1/4°	Upper Strut; 1 plate per package	2
1995-1991				
Strut Mount	K8822	±1-1/4°	Adjustable Plate Kit	2
1990-1986				
Strut Mount	K8821	±1-1/4°	Adjustable Plate Kit	2

Ford

Part Label	Part No.	Align Range	Qualifier	Qty
Taurus				
Rear				
2010-2008				
Camber Bushing	K100087	±1 1/2°	FWD; Upper; adjustable	2
2007-2006				
Camber Toe Bushing	K8627	camber ±2°; toe ±3/4°	Upper at Crossmember	2
Camber/Toe Cam Bolt Kit	K8985	±1°	Upper at Crossmember; Incl. plate, two cam bolt assemblies and hardware	1
2005-1996				
Cam Bolt Kit	K8460	±1-1/4°	Wagon; To Lower Control Arm	1
Camber Toe Bushing	K8627	camber ±2°; toe ±3/4°	Sedan; Upper at Crossmember	2
Camber/Toe Cam Bolt Kit	K8985	±1°	Sedan; Upper at Crossmember; Incl. plate, two cam bolt assemblies and hardware	1
1995-1986				
Cam Bolt Kit	K100085	+2-1/4°	Sedan; Upper; adjustable	2
Cam Bolt Kit	K8460	±1-1/4°	Wagon; To Lower Control Arm	1
Camber Toe Bushing	K8627	camber ±2°; toe ±3/4°	Sedan; Upper at Crossmember	2
Toe Adjusting Kit	K8823	±1-1/4°	Wagon	2
Taurus X				
Rear				
2009-2008				
Camber Bushing	K100087	±1 1/2°	FWD; Upper; adjustable	2
Tempo				
Front				
1994-1984				
Strut Mount	K8574	±1-1/4°		2
Rear				
1994-1984				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Toe Bushing	K8824	±2° Camber adjustment, ±2° Toe adjustment	Lower	2
Camber Wedge Kit	K8358		Incl. 2 wedges, 4 bolts and nuts	1
Thunderbird				
Front				
2005-2002				
Cam Bolt Kit	K80061	± 1.5°/± 2°	Lower Control Arm	2
1997-1989				
Cam Bolt Kit	K8521	±1-1/8°	Lower To Frame	2
1988-1980				
Camber Wedge Kit	K8825	2°	adjustable; Incl. 2 wedges	1
1973-1967				
Cam Bolt Kit	K8243A	±1-1/8°	Lower Control Arm	2
Rear				
1996-1989				
Toe Compensator Link	K8594			2
Torino				
Front				
1971-1968				
Cam Bolt Kit	K8243A	±1-1/8°	Lower Control Arm; Exc. Cobra	2
Control Arm Shaft Kit	K8233		Upper; {K8131} Threaded Type Shaft Kit Cannot Be Installed If {K8233} Was Previously Installed; rubber bushing type	2

Ford

Part Label	Part No.	Align Range	Qualifier	Qty
Transit Connect				
Front				

2014-2010

Camber Caster Plate	K80001	±1°	Upper Strut; adjust in 1/4 deg. Increments	1
---------------------	---------------	-----	--	---

Windstar

Front				
--------------	--	--	--	--

2003-1995

Camber Caster Plate	K8991	±1 1/4°	Upper Strut; 1 plate per package	1
---------------------	--------------	---------	----------------------------------	---

Freightliner

Part Label	Part No.	Align Range	Qualifier	Qty
Sprinter 2500				
Front				

2009-2007

Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
--------------	---------------	---------	------------------------	---

2006-2002

Camber Shim	K80757	1°	each kit contains two bolts and two shims	2
Camber Shim	K80758	2°	each kit contains two bolts and two shims	2

Sprinter 3500

Front				
--------------	--	--	--	--

2009-2007

Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
--------------	---------------	---------	------------------------	---

2006-2002

Camber Shim	K80757	1°	each kit contains two bolts and two shims	2
Camber Shim	K80758	2°	each kit contains two bolts and two shims	2

Geo

Part Label	Part No.	Align Range	Qualifier	Qty
Metro				
Front				

1997-1989

Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K8877	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1

Prizm

Front				
--------------	--	--	--	--

1997-1989

Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2

Rear

1997-1989

Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2

Spectrum

Front				
--------------	--	--	--	--

1989-1989

Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Geo

Part Label	Part No.	Align Range	Qualifier	Qty
Spectrum				
Rear				
1989-1989				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2

Storm

Front				
1993-1990				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1993-1990				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Tracker

Front				
1997-1989				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

GMC

Part Label	Part No.	Align Range	Qualifier	Qty
Acadia				
Front				
2014-2007				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
2014-2007				
Cam Bolt Kit	K100142	±1-1/2°		2

Part Label	Part No.	Align Range	Qualifier	Qty
C15/C1500 Pickup				
Front				
1978-1973				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6184		Upper; provides additional positive camber adjustment	2
1972-1967				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
C15/C1500 Suburban				
Front				
1978-1973				
Control Arm Shaft Kit	K6184		Upper; provides additional positive camber adjustment	2
C1500 Pickup				
Front				
1999-1988				
Cam Bolt Kit	K6302	$\pm 1-1/8^\circ$	Upper	2
1986-1979				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6184		Upper; provides additional positive camber adjustment	2
C1500 Suburban				
Front				
1999-1992				
Cam Bolt Kit	K6302	$\pm 1-1/8^\circ$	Upper	2
1986-1979				
Control Arm Shaft Kit	K6184		Upper; provides additional positive camber adjustment	2

Part Label	Part No.	Align Range	Qualifier	Qty
C25/C2500 Pickup				
Front				
1978-1967				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
C25/C2500 Suburban				
Front				
1978-1968				
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
C2500 Pickup				
Front				
2000-1988				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
1986-1979				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
C2500 Suburban				
Front				
1999-1992				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
1986-1979				
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
C35/C3500 Pickup				
Front				
1978-1967				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2

Part Label	Part No.	Align Range	Qualifier	Qty
C3500 Pickup				
Front				
2000-1988				
Cam Bolt Kit	K6302	±1-1/8°	Upper; w/Independent Front Suspension	2
1986-1979				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
C4500 Topkick				
Front				
2009-2005				
Caster/Camber - Universal Bushing	K80155	±2-1/2°	Ultra Range; Alternative to K80128 Series	1
Caster/Camber Bushing	K80128 to K80136	0° to 2°	K80128 (0), K80129 (1/4), K80130 (1/2), K80131 (3/4), K80132 (1), K80133 (1-1/4), K80134 (1-1/2), K80135 (1-3/4), K80136 (2); Alternative to K80155 Ultra Range Universal Bushing	2
Caballero				
Front				
1987-1978				
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
Canyon				
Front				
2012-2004				
Caster/Camber Cam	K6721	±1-1/2°	4WD; Upper Control Arm	2
Guide Pin	K6716		Upper Control Arm; Torsion Bar Front Spring; w/Off Road susp.; replaces broken OEM pins	2
G15/G1500 Van				
Front				
1978-1973				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6184		Upper; provides additional positive camber adjustment	2
1972-1971				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1

GMC

Part Label	Part No.	Align Range	Qualifier	Qty
G1500 Van				
Front				
1995-1987				
Control Arm Shaft Kit	K6355		Upper; provides additional positive camber adjustment	2
1986-1979				
Control Arm Shaft Kit	K6184		Upper; provides additional positive camber adjustment	2
G25/G2500 Van				
Front				
1978-1975				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6184		Upper; provides additional positive camber adjustment	2
1974-1973				
Control Arm Shaft Kit	K6184		Upper; provides additional positive camber adjustment	2
G2500 Van				
Front				
1995-1987				
Control Arm Shaft Kit	K6355		Upper; provides additional positive camber adjustment	2
1986-1979				
Control Arm Shaft Kit	K6184		Upper; provides additional positive camber adjustment	2
G35/G3500 Van				
Front				
1978-1971				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
G3500 Van				
Front				
1996-1979				
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2

Part Label	Part No.	Align Range	Qualifier	Qty
Jimmy				
Front				
2005-2005				
Cam Bolt Kit	K6367	±1-1/8°	Upper	2
Control Arm Offset Bushing Kit	K7104		4WD; Upper; eccentric bushing kit provides additional camber adjustment	2
2004-1992				
Cam Bolt Kit	K6367	±1-1/8°	4WD; Upper	2
Control Arm Offset Bushing Kit	K7104		4WD; Upper; eccentric bushing kit provides additional camber adjustment	2
Control Arm Shaft Kit	K6218		RWD; Upper; provides additional positive camber adjustment	2
1991-1970				
Camber Shim	K974 Series	3/8° to 1-1/2°	4WD; K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	4WD; K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
1982-1973				
Control Arm Shaft Kit	K6184		RWD; Upper; provides additional positive camber adjustment	2
K15/K1500 Pickup				
Front				
1999-1988				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
1986-1970				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
K15/K1500 Suburban				
Front				
1978-1970				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
K1500 Suburban				
Front				
1999-1992				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
1986-1979				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2

GMC



Part Label	Part No.	Align Range	Qualifier	Qty
K25/K2500 Pickup				
Front				
2000-1988				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
1986-1970				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
K25/K2500 Suburban				
Front				
1978-1970				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
K2500 Suburban				
Front				
1999-1992				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
1986-1979				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
K35/K3500 Pickup				
Front				
2000-1988				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
1986-1979				
Camber Shim	K980 Series	3/8° to 1-1/2°	w/Dana 60 Axle; K980-3 (3/8), K980-4 (1/2), K980-5 (5/8), K980-6 (3/4), K980-7 (7/8), K980-8 (1), K980-9 (1-1/8), K980-10 (1-1/4), K980-12 (1-1/2)	2
King Pin Repair Kit	K6652		Upper; w/Dana 60 Axle; Contains bushing, gasket, and oil seal; Use w/Eccentric Camber Adjusting king pin No. K992	2
1978-1977				
Camber Shim	K980 Series	3/8° to 1-1/2°	w/Dana 60 Axle; K980-3 (3/8), K980-4 (1/2), K980-5 (5/8), K980-6 (3/4), K980-7 (7/8), K980-8 (1), K980-9 (1-1/8), K980-10 (1-1/4), K980-12 (1-1/2)	2
King Pin Repair Kit	K6652		Upper; w/Dana 60 Axle; Contains bushing, gasket, and oil seal; Use w/Eccentric Camber Adjusting king pin No. K992	2
King Pin Repair Kit	K8832		Lower; w/Dana 60 Axle	1
1974-1967				
Camber Shim	K980 Series	3/8° to 1-1/2°	w/Dana 60 Axle; K980-3 (3/8), K980-4 (1/2), K980-5 (5/8), K980-6 (3/4), K980-7 (7/8), K980-8 (1), K980-9 (1-1/8), K980-10 (1-1/4), K980-12 (1-1/2)	2
Front				
1986-1979				
Camber Kit	K992	1-1/2°	w/Dana 60 Axle; adjustable camber kingpin	2
1978-1977				
Camber Kit	K992	1-1/2°	w/Dana 60 Axle; adjustable camber kingpin	2
P15/P1500 Van				
Front				
1980-1973				
Control Arm Shaft Kit	K6184		Upper; provides additional positive camber adjustment	2

Part Label	Part No.	Align Range	Qualifier	Qty
P25/P2500 Van				
Front				
1989-1968				
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
P35/P3500 Van				
Front				
1999-1968				
Control Arm Shaft Kit	K6256		Upper; w/Independent Front Suspension; provides additional positive camber adjustment	2
R1500 Pickup				
Front				
1987-1987				
Control Arm Shaft Kit	K6355		Upper; provides additional positive camber adjustment	2
R1500 Suburban				
Front				
1991-1987				
Control Arm Shaft Kit	K6355		Upper; provides additional positive camber adjustment	2
R2500 Pickup				
Front				
1989-1987				
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
R2500 Suburban				
Front				
1991-1987				
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
R3500 Pickup				
Front				
1991-1987				
Control Arm Shaft Kit	K6256		Upper; provides additional positive camber adjustment	2
S15 Jimmy				
Front				
1991-1984				
Cam Bolt Kit	K6367	$\pm 1-1/8^\circ$	4WD; Upper	2
Control Arm Offset Bushing Kit	K7104		4WD; Upper; eccentric bushing kit provides additional camber adjustment	2
Control Arm Shaft Kit	K6218		RWD; Upper; provides additional positive camber adjustment	2
1983-1983				
Cam Bolt Kit	K5266	$\pm 1-1/8^\circ$	4WD; Upper	2
Control Arm Offset Bushing Kit	K7104		4WD; Upper; eccentric bushing kit provides additional camber adjustment	2
Control Arm Shaft Kit	K6218		RWD; Upper; provides additional positive camber adjustment	2

Part Label	Part No.	Align Range	Qualifier	Qty
S15 Pickup				
Front				
1990-1984				
Cam Bolt Kit	K6367	±1-1/8°	4WD; Upper	2
Control Arm Offset Bushing Kit	K7104		4WD; Upper; eccentric bushing kit provides additional camber adjustment	2
Control Arm Shaft Kit	K6218		RWD; Upper; provides additional positive camber adjustment	2
1983-1983				
Cam Bolt Kit	K5266	±1-1/8°	4WD; Upper	2
Control Arm Offset Bushing Kit	K7104		4WD; Upper; eccentric bushing kit provides additional camber adjustment	2
Control Arm Shaft Kit	K6218		RWD; Upper; provides additional positive camber adjustment	2
1982-1982				
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
Safari				
Front				
2005-1990				
Cam Bolt Kit	K6302	±1-1/8°	AWD; Upper	2
Caster/Camber Shim	K957 to K960		RWD; Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		RWD; Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		RWD; Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6449		RWD; Upper; provides additional positive camber adjustment	2
1989-1985				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2

Part Label	Part No.	Align Range	Qualifier	Qty
				Savana 1500
Front				
2014-2012				
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Caster/Camber Cam	K80277	±1 1/2°	Upper Control Arm; Quick Cam - camber adjustments made easy via the allen wrench slot	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2011-2011				
Camber Bushing	K6669	±1 3/4°	Upper	2
2010-2009				
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	Upper	2
Caster/Camber Cam	K80277	±1 1/2°	Upper Control Arm; Quick Cam - camber adjustments made easy via the allen wrench slot	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2008-2003				
Ball Joint	K100116	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	Upper	2
Camber Bushing	K6669	±1 3/4°	Upper	2
Caster/Camber Cam	K80277	±1 1/2°	Upper Control Arm; Quick Cam - camber adjustments made easy via the allen wrench slot	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2002-1996				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
				Savana 2500
Front				
2013-2011				
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2010-2010				
Camber Bushing	K6669	±1 3/4°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2009-2006				
Caster/Camber Cam	K80277	±1 1/2°	Upper Control Arm; Quick Cam - camber adjustments made easy via the allen wrench slot	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2005-2003				
Ball Joint	K100116	±3°	Upper; w/7300 GVW; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	Upper	2
2002-1996				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2

GMC



Part Label	Part No.	Align Range	Qualifier	Qty
Savana 3500				
Front				
2014-2014				
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
2013-2011				
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2010-2010				
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2009-2003				
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	Upper	2
Caster/Camber Cam	K80277	±1 1/2°	Upper Control Arm; Quick Cam - camber adjustments made easy via the allen wrench slot	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2002-1997				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
Sierra 1500				
Front				
2012-2011				
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2010-2010				
Ball Joint	K100108	±3°	Upper; adjustable	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2009-2008				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2007-2007				
Ball Joint	K100108	±3°	Upper; adjustable	2
Ball Joint	K100116	±3°	Upper; Classic Models; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	Upper; Classic Models	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2006-1999				
Ball Joint	K100116	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Sierra 1500 HD				
Front				
2007-2001				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6670	±1°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1

Part Label	Part No.	Align Range	Qualifier	Qty
Sierra 2500				
Front				
2004-2001				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6670	±1°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
2000-2000				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	RWD; Upper	2
Camber Bushing	K6670	±1°	4WD; Upper	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
1999-1999				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	RWD; Upper	2
Camber Bushing	K6670	±1°	4WD; Upper	2
Sierra 2500 HD				
Front				
2012-2012				
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2011-2011				
Camber Bushing	K6670	±1°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2010-2010				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6670	±1°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
2009-2009				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
2008-2001				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6670	±1°	Upper	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Sierra 3500				
Front				
2007-2001				
Ball Joint	K100108	±3°	Upper; adjustable	2
Camber Bushing	K6670	±1°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1

GMC



Part Label	Part No.	Align Range	Qualifier	Qty
Sierra 3500 HD				
Front				
2012-2012				
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2011-2011				
Camber Bushing	K6670	±1°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2010-2007				
Ball Joint	K100108	±3°	Upper; adjustable	2
Camber Bushing	K6670	±1°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Sierra C3				
Front				
2001-2001				
Camber Bushing	K6669	±1 3/4°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Sonoma				
Front				
2004-2004				
Cam Bolt Kit	K6367	±1-1/8°	Upper	2
Control Arm Offset Bushing Kit	K7104		Upper; eccentric bushing kit provides additional camber adjustment	2
2003-1991				
Cam Bolt Kit	K6367	±1-1/8°	4WD; Upper	2
Control Arm Offset Bushing Kit	K7104		4WD; Upper; eccentric bushing kit provides additional camber adjustment	2
Control Arm Shaft Kit	K6218		RWD; Upper; provides additional positive camber adjustment	2
Sprint				
Front				
1977-1974				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1973				
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
1972-1971				
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
Suburban				
Front				
1967-1967				
Control Arm Shaft Kit	K6256		RWD; Upper; C2500 Model; provides additional positive camber adjustment	2
Syclone				
Front				
1991-1991				
Cam Bolt Kit	K6367	±1-1/8°	Upper	2
Control Arm Offset Bushing Kit	K7104		Upper; eccentric bushing kit provides additional camber adjustment	2
Terrain				
Front				
2014-2010				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2

Part Label	Part No.	Align Range	Qualifier	Qty
Tracker				
Front				
1991-1989				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Typhoon				
Front				
1993-1992				
Cam Bolt Kit	K6367	±1-1/8°	Upper	2
Control Arm Offset Bushing Kit	K7104		Upper; eccentric bushing kit provides additional camber adjustment	2
V1500 Pickup				
Front				
1987-1987				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
V1500 Suburban				
Front				
1991-1987				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
V2500 Pickup				
Front				
1987-1987				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
V2500 Suburban				
Front				
1991-1987				
Camber Shim	K974 Series	3/8° to 1-1/2°	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
V3500 Pickup				
Front				
1991-1987				
Camber Shim	K980 Series	3/8° to 1-1/2°	w/Dana 60 Axle; K980-3 (3/8), K980-4 (1/2), K980-5 (5/8), K980-6 (3/4), K980-7 (7/8), K980-8 (1), K980-9 (1-1/8), K980-10 (1-1/4), K980-12 (1-1/2)	2
King Pin Repair Kit	K6652		Upper; w/Dana 60 Axle; Contains bushing, gasket, and oil seal; Use w/Eccentric Camber Adjusting king pin No. K992	2
King Pin Repair Kit	K8832		Lower; w/Dana 60 Axle	1
Front				
1991-1987				
Camber Kit	K992	1-1/2°	w/Dana 60 Axle; adjustable camber kingpin	2

Part Label	Part No.	Align Range	Qualifier	Qty
Yukon				
Front				
2014-2007				
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2006-2001				
Ball Joint	K100116	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
2000-2000				
Ball Joint	K100116	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Cam Bolt Kit	K6302	±1-1/8°	Upper; V8 5.7L	2
Camber Bushing	K6669	±1 3/4°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
1999-1992				
Cam Bolt Kit	K6302	±1-1/8°	Upper	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	4WD; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Yukon XL 1500				
Front				
2014-2007				
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2006-2000				
Ball Joint	K100116	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100011	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1

Part Label	Part No.	Align Range	Qualifier	Qty
Yukon XL 2500				
Front				
2013-2012				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2011-2010				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6670	±1°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
2009-2001				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6670	±1°	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
2000-2000				
Ball Joint	K100108	±3°	Upper; adjustable	2
Cam Bolt Kit	K100026	±1-1/2°	Upper Control Arm	4
Camber Bushing	K6669	±1 3/4°	RWD; Upper	2
Camber Bushing	K6670	±1°	4WD; Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	1/2" to 1-1/2"	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1

Honda

Part Label	Part No.	Align Range	Qualifier	Qty
Accord				
Front				
2012-2008				
Ball Joint	K90492	±1°	Upper; adjustable	2
2007-1998				
Ball Joint	K90492	±1°	Upper; adjustable	2
Caster Shim	K90211		1/8" thick; 12 shims per package	2
1997-1990				
Ball Joint	K90490	±1°	Upper; adjustable	2
Camber Adj. Anchor Bolt	K90143	1 3/4°	Upper Control Arm	2
Camber Kit	K100066	3/4°	Upper; Includes 2 bushings, 2 cams, and lube pouch	2
Caster Shim	K90211		1/8" thick; 12 shims per package	2
1989-1986				
Camber Cam Stud	K90141	1°	mounting studs	2
Camber Cam Stud	K90142	1°	mounting studs	2
Camber Cam Stud	K90205	1/2°		2
Camber Cam Stud	K90206	3/4°		1
Camber Cam Stud	K90207	1-1/2°		2
Camber Cam Stud Assort.	K90139	1/4°	replaces OE forward upper control arm mounting stud; assortment contains 1 each .25 deg, .5 deg, .75 deg, 1.0 deg, 1.25 deg, 1.5 deg.	2

Honda

Part Label	Part No.	Align Range	Qualifier	Qty
Accord				
Rear				
2014-2008				
Control Arm	K100110	±1°	Lower Rearward; adjustable	2
2007-2003				
Control Arm	K100106	camber -2° to +4°	Upper; adjustable; Incl. Ball Joint	2
Lateral Arm	K90706	camber -1-1/2° to +3°	Lower; adjustable; repl. OEM non adj. susp. Arms	2
2002-1998				
Control Arm	K100067	camber -2° to +4°	Upper; adjustable; Incl. Ball Joint	2
Lateral Arm	K90204	camber -1-1/2° to +3°	Upper; adjustable; Incl. 2 complete adjustable arms and hardware	2
1997-1976				
Camber Shim	K90210	±1 1/4 °	Incl. 4 shims and 2 bolts	2
Accord Crosstour				
Front				
2011-2010				
Ball Joint	K90492	±1°	Upper; adjustable	2
Rear				
2011-2010				
Control Arm	K100110	±1°	Lower Rearward; adjustable	2
Civic				
Front				
2014-2014				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
2013-2013				
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
2012-2012				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
2011-2006				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
2005-2003				
Cam Bolt Kit	K7436	±1-3/4°	"Magna Cam"; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
2002-2002				
Cam Bolt Kit	K7436	±1-3/4°	"Magna Cam"; 16mm bolts	2
Cam Bolt Kit	K90350	±1-3/4°	Pending Supersession to K90473	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
2001-2001				
Cam Bolt Kit	K90350	±1-3/4°	Pending Supersession to K90473	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
2000-1996				
Ball Joint	K90492	±1°	Upper; adjustable	2
1995-1992				
Ball Joint	K90492	±1°	Upper; adjustable	2
Camber Adj. Anchor Bolt	K90143	1 3/4°	Upper Control Arm	2
1991-1988				
Camber Adj. Anchor Bolt	K90143	1 3/4°	FWD; Upper Control Arm	2

Part Label	Part No.	Align Range	Qualifier	Qty
Civic				
Rear				
2010-2006				
Control Arm	K100049	camber $\pm 3^{\circ}$	Upper; adjustable	2
2005-2001				
Lateral Arm	K90351	camber -2° to $+3^{\circ}$	adjustable	2
2000-1999				
Camber Shim	K90210	$\pm 1 \frac{1}{4}^{\circ}$	Incl. 4 shims and 2 bolts	2
Control Arm	K100068	camber -2° to $+5^{\circ}$	Upper; adjustable	2
1998-1996				
Camber Shim	K90210	$\pm 1 \frac{1}{4}^{\circ}$	Incl. 4 shims and 2 bolts	2
Control Arm	K100068	camber -2° to $+5^{\circ}$	Upper; Exc. Si; adjustable	2
1995-1988				
Camber Shim	K90210	$\pm 1 \frac{1}{4}^{\circ}$	Incl. 4 shims and 2 bolts	2
Control Arm	K100068	camber -2° to $+5^{\circ}$	Upper; adjustable	2
1987-1980				
Camber/Toe - Universal Shim	K917	$\pm 1-1/2^{\circ}$	universal full contact dual angle shim	2
Camber/Toe Shim	K995 Series	$1/4^{\circ}$ to $1-1/2^{\circ}$	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Civic del Sol				
Front				
1997-1993				
Ball Joint	K90492	$\pm 1^{\circ}$	Upper; adjustable	2
Camber Adj. Anchor Bolt	K90143	$1 \frac{3}{4}^{\circ}$	Upper Control Arm	2
Rear				
1997-1993				
Camber Shim	K90210	$\pm 1 \frac{1}{4}^{\circ}$	Incl. 4 shims and 2 bolts	2
Control Arm	K100068	camber -2° to $+5^{\circ}$	Upper; adjustable	2
CR-V				
Front				
2014-2002				
Cam Bolt Kit	K7436	$\pm 1-3/4^{\circ}$	"Magna Cam"; 16mm bolts	2
Cam Bolt Kit	K90476	$\pm 1-3/4^{\circ}$	"Axis Cam"; 16mm bolts	2
2001-1997				
Ball Joint	K90492	$\pm 1^{\circ}$	Upper; adjustable	2
Rear				
2014-2007				
Control Arm	K100046	camber -2 to $+4^{\circ}$	Upper; adjustable	2
2006-2002				
Control Arm	K100088	camber $\pm 1-1/2^{\circ}$	Upper; adjustable	2
Control Arm	K90489	camber -2° to $+4^{\circ}$	Upper; adjustable	2
2001-1997				
Camber Shim	K90210	$\pm 1 \frac{1}{4}^{\circ}$	Incl. 4 shims and 2 bolts	2
Control Arm	K100068	camber -2° to $+5^{\circ}$	Upper; adjustable	2
CRX				
Front				
1991-1988				
Ball Joint	K90492	$\pm 1^{\circ}$	Upper; adjustable	2
Camber Adj. Anchor Bolt	K90143	$1 \frac{3}{4}^{\circ}$	Upper Control Arm	2
Rear				
1991-1988				
Camber Shim	K90210	$\pm 1 \frac{1}{4}^{\circ}$	Incl. 4 shims and 2 bolts	2
Control Arm	K100068	camber -2° to $+5^{\circ}$	Upper; adjustable	2

Honda

Part Label	Part No.	Align Range	Qualifier	Qty
Element				
Front				
2011-2003				
Cam Bolt Kit	K7436	±1-3/4°	"Magna Cam"; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Rear				
2011-2003				
Control Arm	K100088	camber ±1-1/2°	Upper; adjustable	2
Control Arm	K90489	camber -2° to +4°	Upper; adjustable	2
Fit				
Front				
2008-2007				
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2014-2007				
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4), K6660-4 (1)	2
Insight				
Front				
2014-2010				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
2006-2000				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Odyssey				
Front				
2014-1999				
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1998-1995				
Ball Joint	K90490	±1°	Upper; adjustable	2
Camber Adj. Anchor Bolt	K90143	1 3/4°	Upper Control Arm	2
Camber Kit	K100066	3/4°	Upper; Includes 2 bushings, 2 cams, and lube pouch	2
Caster Shim	K90211		1/8" thick; 12 shims per package	2
Rear				
2013-2005				
Lateral Arm	K100153	camber -2° to +4°	Upper; Touring; adjustable	2
2004-1999				
Control Arm	K100106	camber -2° to +4°	Upper; adjustable; Incl. Ball Joint	2
Passport				
Front				
2002-1994				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1

Honda

Part Label	Part No.	Align Range	Qualifier	Qty
Pilot				
Rear				
2014-2009				
Control Arm	K100122	camber $\pm 2^{\circ}$	Upper; adjustable	2
2008-2003				
Control Arm	K100106	camber -2° to $+4^{\circ}$	Upper; adjustable; Incl. Ball Joint	2
Prelude				
Front				
2001-1997				
Ball Joint	K90490	$\pm 1^{\circ}$	Upper; Type SH; adjustable	2
Ball Joint	K90492	$\pm 1^{\circ}$	Upper; Exc. Type SH; adjustable	2
1996-1992				
Ball Joint	K90490	$\pm 1^{\circ}$	Upper; adjustable	2
Camber Adj. Anchor Bolt	K90143	$1\ 3/4^{\circ}$	Upper Control Arm	2
Camber Kit	K100066	$3/4^{\circ}$	Upper; Includes 2 bushings, 2 cams, and lube pouch	2
Rear				
2001-1992				
Ball Joint	K90490	$\pm 1^{\circ}$	Upper; Type SH; adjustable	2
Ball Joint	K90492	$\pm 1^{\circ}$	Upper; Exc. Type SH; adjustable	2
Camber Adj. Anchor Bolt	K90143	$1\ 3/4^{\circ}$	Upper Control Arm; Exc. Type SH	2
Camber Kit	K100066	$3/4^{\circ}$	Upper; Includes 2 bushings, 2 cams, and lube pouch	2
1982-1979				
Camber/Toe - Universal Shim	K916	$\pm 1-1/2^{\circ}$	universal full contact dual angle shim	2
Camber/Toe Shim	K994 Series	$1/4^{\circ}$ to $1-1/2^{\circ}$	Full Contact Shims; K994-1 (1/4), K994-2 (1/2), K994-3 (3/4), K994-4 (1), K994-5 (1-1/4), K994-6 (1-1/2)	2

Ridgeline

Front				
2007-2006				
Cam Bolt Kit	K90476	$\pm 1-3/4^{\circ}$	"Axis Cam"; 16mm bolts	2

Hummer

Part Label	Part No.	Align Range	Qualifier	Qty
H2				
Front				
2009-2003				
Ball Joint	K100108	$\pm 3^{\circ}$	Upper; adjustable	2
Cam Bolt Kit	K100026	$\pm 1-1/2^{\circ}$	Upper Control Arm	4
Camber Bushing	K6670	$\pm 1^{\circ}$	Upper	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
Torsion Bar Key	K100012	$1/2"$ to $1-1/2"$	Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1

H3

Front				
2010-2006				
Caster/Camber Cam	K6721	$\pm 1-1/2^{\circ}$	Upper Control Arm; Problem Solver; adjustable	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2

H3T

Front				
2009-2009				
Caster/Camber Cam	K6721	$\pm 1-1/2^{\circ}$	Upper Control Arm; Problem Solver; adjustable	2

Hyundai

Part Label	Part No.	Align Range	Qualifier	Qty
Accent				
Front				
2014-1995				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2014-2012				
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4). K6660-4 (1)	2
2011-2007				
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4). K6660-4 (1)	2
2006-2006				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4). K6660-4 (1)	2
2005-1995				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Elantra				
Front				
2013-2009				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
2008-2007				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
2006-1992				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
2013-2008				
Control Arm	K100120	±2°; toe ±2°	Lower Rearward; adjustable	2
2007-2007				
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Control Arm	K100120	±2°; toe ±2°	Lower Rearward; adjustable	2
2006-1997				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Excel				
Front				
1994-1986				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Genesis Coupe				
Front				
2013-2010				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2

Part Label	Part No.	Align Range	Qualifier	Qty
Santa Fe				
Front				
2012-2001				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Scoupe				
Front				
1995-1991				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Sonata				
Front				
2014-2012				
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
2011-2011				
Cam Bolt Kit	K5330	±1-3/4°	Built Before 5/2011; "Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	Built After 5/2011; "Magna Cam"; 16mm bolts	2
2010-1999				
Ball Joint	K7452	±1°	Upper; adjustable	2
1998-1998				
Ball Joint	K7452	±1°	Upper; adjustable	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K90073	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
1997-1989				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K90073	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
Tiburon				
Front				
2008-2003				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
2001-1997				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2008-2003				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
2001-1997				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Tucson				
Front				
2014-2005				
Cam Bolt Kit	K5330	±1-3/4°	4WD/AWD; "Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	4WD/AWD; "Axis Cam"; 14mm bolts	2
Rear				
2014-2005				
Cam Bolt Kit	K5330	±1-3/4°	4WD/AWD; "Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	4WD/AWD; "Axis Cam"; 14mm bolts	2

Hyundai

Part Label	Part No.	Align Range	Qualifier	Qty
Veloster				
Front				
2014-2012				
Cam Bolt Kit	K5330	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 14mm bolts	2
Rear				
2013-2012				
Camber/Toe Shim	K6660 Series	$\pm 1^\circ$	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4), K6660-4 (1)	2
XG300				
Front				
2001-2001				
Ball Joint	K7452	$\pm 1^\circ$	Upper; adjustable	2
XG350				
Front				
2005-2002				
Ball Joint	K7452	$\pm 1^\circ$	Upper; adjustable	2
Infiniti				
Part Label	Part No.	Align Range	Qualifier	Qty
FX35				
Front				
2008-2003				
Cam Bolt Kit	K5330	$\pm 1\text{-}3/4^\circ$	AWD; "Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1\text{-}3/4^\circ$	AWD; "Axis Cam"; 14mm bolts	2
FX45				
Front				
2008-2003				
Cam Bolt Kit	K5330	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 14mm bolts	2
G20				
Rear				
1996-1991				
Cam Bolt Kit	K90473	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 12mm bolts	2
G25				
Rear				
2012-2011				
Control Arm	K100090	camber $\pm 3^\circ$; toe $\pm 2^\circ$	Lower Forward; adjustable	2
G35				
Rear				
2008-2008				
Control Arm	K100090	camber $\pm 3^\circ$; toe $\pm 2^\circ$	Lower Forward; w/Rear Active Steer	2
2008-2006				
Camber/Toe Cam Bolt Kit	K100152	$\pm 3^\circ$		2
2007-2007				
Control Arm	K100090	camber $\pm 3^\circ$; toe $\pm 2^\circ$	Sedan; Lower Forward w/Rear Active Steer	2
G37				
Rear				
2014-2008				
Camber/Toe Cam Bolt Kit	K100152	$\pm 3^\circ$		2

Infiniti

Part Label	Part No.	Align Range	Qualifier	Qty
				130
Front				
2001-1996				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
				135
Front				
2004-2002				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
				QX4
Front				
2003-1997				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2

International

Part Label	Part No.	Align Range	Qualifier	Qty
				Scout II
Front				
1980-1971				
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2

Isuzu

Part Label	Part No.	Align Range	Qualifier	Qty
				Amigo
Front				
2000-1998				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
1994-1990				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1

Ascender

Front				
2007-2005				
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2007-2005				
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2

Isuzu

Part Label	Part No.	Align Range	Qualifier	Qty
Axiom				
Front				
2004-2002				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Hombre				
Front				
2000-1998				
Cam Bolt Kit	K6367	±1-1/8°	Upper	2
Control Arm Offset Bushing Kit	K7104		4WD; Upper; eccentric bushing kit provides additional camber adjustment	2
Control Arm Shaft Kit	K6218		RWD; Upper; provides additional positive camber adjustment	2
1997-1996				
Cam Bolt Kit	K6367	±1-1/8°	Upper	2
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
i-280				
Front				
2006-2006				
Caster/Camber Cam	K6721	±1-1/2°	Upper Control Arm; Problem Solver; adjustable	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
i-290				
Front				
2008-2007				
Caster/Camber Cam	K6721	±1-1/2°	Upper Control Arm; Problem Solver; adjustable	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
i-350				
Front				
2006-2006				
Caster/Camber Cam	K6721	±1-1/2°	Upper Control Arm; Problem Solver; adjustable	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
i-370				
Front				
2008-2007				
Caster/Camber Cam	K6721	±1-1/2°	Upper Control Arm; Problem Solver; adjustable	2
Guide Pin	K6716		Upper Control Arm; replaces broken OEM pins	2
I-Mark				
Front				
1989-1986				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1985-1985				
Ball Joint	K5292	±1°	RWD; Upper; To 2/1/85; adjustable	2
Cam Bolt Kit	K90473	±1-3/4°	FWD; "Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	FWD; "Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	FWD; adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1984-1981				
Ball Joint	K5292	±1°	Upper; adjustable	2

Isuzu

Part Label	Part No.	Align Range	Qualifier	Qty
I-Mark				
Rear				
1989-1986				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Impulse				
Front				
1992-1990				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1989-1983				
Ball Joint	K5292	±1°	Upper; adjustable	2
Rear				
1992-1990				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Oasis				
Front				
1999-1996				
Ball Joint	K90490	±1°	Upper; adjustable	2
Camber Adj. Anchor Bolt	K90143	1 3/4°	Upper Control Arm	2
Caster Shim	K90211		1/8" thick; 12 shims per package	2
Rear				
1999-1996				
Camber Shim	K90210	±1 1/4 °	Incl. 4 shims and 2 bolts	2
Pickup				
Front				
1995-1981				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Rodeo				
Front				
2003-1991				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1

Isuzu

Part Label	Part No.	Align Range	Qualifier	Qty
Rodeo Sport				
Front				
2003-2001				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1

Stylus

Front				
1993-1991				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1993-1991				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Trooper

Front				
2002-1984				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1

VehiCROSS

Front				
2001-2000				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1

Jaguar

Part Label	Part No.	Align Range	Qualifier	Qty
S-Type				
Front				
2008-2000				
Cam Bolt Kit	K80061	± 1.5°/± 2°	Lower Control Arm	2

Part Label	Part No.	Align Range	Qualifier	Qty
Cherokee				
Front				
2001-1990				
Ball Joint	K100056	$\pm 1/2^\circ$	Upper; adjustable	2
Ball Joint	K7403	$\pm 1-3/4^\circ$	Lower; adjustable	2
1989-1984				
Ball Joint	K100056	$\pm 1/2^\circ$	Upper; adjustable	2
Ball Joint	K7403	$\pm 1-3/4^\circ$	Lower; adjustable	2
Caster/Camber Bushing	K3154 to K3159	$1/4^\circ$ to $1-1/2^\circ$	K3154 (1/4), K3155 (1/2), K3156 (3/4), K3157 (1), K3158 (1-1/4), K3159 (1-1/2)	2
1983-1974				
Caster/Camber Bushing	K931 to K936	$1/4^\circ$ to $1-1/2^\circ$	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
CJ5				
Front				
1983-1972				
Camber Shim	K974 Series	$3/8^\circ$ to $1-1/2^\circ$	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	$1/4^\circ$ to $1-1/2^\circ$	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
CJ6				
Front				
1975-1972				
Camber Shim	K974 Series	$3/8^\circ$ to $1-1/2^\circ$	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	$1/4^\circ$ to $1-1/2^\circ$	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
CJ7				
Front				
1986-1976				
Camber Shim	K974 Series	$3/8^\circ$ to $1-1/2^\circ$	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	$1/4^\circ$ to $1-1/2^\circ$	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
Comanche				
Front				
1992-1990				
Ball Joint	K100056	$\pm 1/2^\circ$	Upper; adjustable	2
Ball Joint	K7403	$\pm 1-3/4^\circ$	Lower; adjustable	2
1989-1986				
Ball Joint	K100056	$\pm 1/2^\circ$	Upper; adjustable	2
Ball Joint	K7403	$\pm 1-3/4^\circ$	Lower; adjustable	2
Caster/Camber Bushing	K3154 to K3159	$1/4^\circ$ to $1-1/2^\circ$	K3154 (1/4), K3155 (1/2), K3156 (3/4), K3157 (1), K3158 (1-1/4), K3159 (1-1/2)	2
Commander				
Front				
2010-2006				
Ball Joint	K100071	$\pm 1^\circ$	Upper; adjustable	2
Compass				
Front				
2014-2007				
Cam Bolt Kit	K5330	$\pm 1-3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1-3/4^\circ$	"Axis Cam"; 14mm bolts	2

Jeep

Part Label	Part No.	Align Range	Qualifier	Qty
Compass				
Rear				
2014-2007				
Lateral Arm	K100089	camber $\pm 2^\circ$	Upper; adjustable; Does not incl. bushings; Pending Supersession to K100114	2
Lateral Arm	K100114	camber $\pm 2^\circ$	Upper; adjustable; Incl. bushings	2
Grand Cherokee				
Front				
2014-2011				
Ball Joint	K100107	$\pm 1^\circ$	Upper; adjustable	2
Camber Kit	K100130	$\pm 1-1/2^\circ$	contains steel guide and cam assemblies	2
Caster Kit	K100131	$\pm 1^\circ$		2
2010-2005				
Ball Joint	K100071	$\pm 1^\circ$	Upper; adjustable	2
2004-1999				
Ball Joint	K100056	$\pm 1/2^\circ$	Upper; adjustable	2
Ball Joint	K7429	$\pm 1-3/4^\circ$	Lower; adjustable	2
1998-1993				
Ball Joint	K100056	$\pm 1/2^\circ$	Upper; adjustable	2
Ball Joint	K7403	$\pm 1-3/4^\circ$	Lower; adjustable	2
Cam Bolt Kit	K100047	$\pm 3^\circ$	Lower Control Arm; adjustable; caster/pinion angle	2
Grand Wagoneer				
Front				
1993-1993				
Ball Joint	K7403	$\pm 1-3/4^\circ$	Lower; adjustable	2
1991-1984				
Caster/Camber Bushing	K931 to K936	$1/4^\circ$ to $1-1/2^\circ$	K931 (1/4), K932 (1/2), K933 (3/4). K934 (1), K935 (1-1/4), K936 (1-1/2)	2
J10				
Front				
1988-1987				
Camber Shim	K974 Series	$3/8^\circ$ to $1-1/2^\circ$	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
1986-1974				
Camber Shim	K974 Series	$3/8^\circ$ to $1-1/2^\circ$	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	$1/4^\circ$ to $1-1/2^\circ$	K931 (1/4), K932 (1/2), K933 (3/4). K934 (1), K935 (1-1/4), K936 (1-1/2)	2
J20				
Front				
1988-1987				
Camber Shim	K974 Series	$3/8^\circ$ to $1-1/2^\circ$	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
1986-1974				
Camber Shim	K974 Series	$3/8^\circ$ to $1-1/2^\circ$	K974-3 (3/8), K974-4 (1/2), K974-5 (5/8), K974-6 (3/4), K974-7 (7/8), K974-8 (1), K974-9 (1-1/8), K974-10 (1-1/4), K974-11 (1-3/8), K974-12 (1-1/2)	2
Caster/Camber Bushing	K931 to K936	$1/4^\circ$ to $1-1/2^\circ$	K931 (1/4), K932 (1/2), K933 (3/4). K934 (1), K935 (1-1/4), K936 (1-1/2)	2
Jeepster				
Front				
1973-1972				
Caster/Camber Bushing	K931 to K936	$1/4^\circ$ to $1-1/2^\circ$	K931 (1/4), K932 (1/2), K933 (3/4). K934 (1), K935 (1-1/4), K936 (1-1/2)	2

Part Label	Part No.	Align Range	Qualifier	Qty
Patriot				
Front				
2014-2007				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2014-2007				
Lateral Arm	K100089	camber ±2°	Upper; adjustable; Does not incl. bushings; Pending Supersession to K100114	2
Lateral Arm	K100114	camber ±2°	Upper; adjustable; Incl. bushings	2
Toe Compensator Link	K100117	toe ±1-1/2°	adjustable	2
Scrambler				
Front				
1985-1981				
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
TJ				
Front				
2006-1997				
Ball Joint	K100056	±1/2°	Upper; adjustable	2
Ball Joint	K7403	±1-3/4°	Lower; adjustable	2
Cam Bolt Kit	K100047	±3°	Lower Control Arm; adjustable; caster/pinion angle	2
Wagoneer				
Front				
1990-1990				
Ball Joint	K100056	±1/2°	Upper; adjustable	2
Ball Joint	K7403	±1-3/4°	Lower; adjustable	2
1989-1984				
Ball Joint	K100056	±1/2°	Upper; adjustable	2
Ball Joint	K7403	±1-3/4°	Lower; adjustable	2
Caster/Camber Bushing	K3154 to K3159	1/4° to 1-1/2°	K3154 (1/4), K3155 (1/2), K3156 (3/4), K3157 (1), K3158 (1-1/4), K3159 (1-1/2)	2
1982-1974				
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2

Jeep

Part Label	Part No.	Align Range	Qualifier	Qty
Wrangler				
Front				
2014-2013				
Ball Joint	K7403	$\pm 1\text{-}3/4^\circ$	Lower; adjustable	2
Cam Bolt Kit	K100086	$\pm 3^\circ$	Lower Control Arm; adjustable; caster/pinion angle	2
2012-2007				
Ball Joint	K100056	$\pm 1/2^\circ$	Upper; adjustable	2
Ball Joint	K7403	$\pm 1\text{-}3/4^\circ$	Lower; adjustable	2
Cam Bolt Kit	K100086	$\pm 3^\circ$	Lower Control Arm; adjustable; caster/pinion angle	2
2006-1997				
Ball Joint	K100056	$\pm 1/2^\circ$	Upper; adjustable	2
Ball Joint	K7403	$\pm 1\text{-}3/4^\circ$	Lower; adjustable	2
Cam Bolt Kit	K100047	$\pm 3^\circ$	Lower Control Arm; adjustable; caster/pinion angle	2
1995-1990				
Ball Joint	K100056	$\pm 1/2^\circ$	Upper; adjustable	2
Ball Joint	K7403	$\pm 1\text{-}3/4^\circ$	Lower; adjustable	2
1989-1987				
Ball Joint	K100056	$\pm 1/2^\circ$	Upper; adjustable	2
Ball Joint	K7403	$\pm 1\text{-}3/4^\circ$	Lower; adjustable	2
Caster/Camber Bushing	K3154 to K3159	$1/4^\circ$ to $1\text{-}1/2^\circ$	K3154 (1/4), K3155 (1/2), K3156 (3/4), K3157 (1), K3158 (1-1/4), K3159 (1-1/2)	2

Rear

2010-2007				
Cam Bolt Kit	K100086	$\pm 3^\circ$	To Lower Control Arm; adjustable; caster/pinion angle	2
2006-1998				
Cam Bolt Kit	K100109	$\pm 2^\circ$	Upper	1

Kia

Part Label	Part No.	Align Range	Qualifier	Qty
Amanti				
Front				
2009-2004				
Ball Joint	K7452	$\pm 1^\circ$	Upper; adjustable	2
Forte				
Front				
2014-2010				
Cam Bolt Kit	K5330	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 14mm bolts	2
Rear				
2014-2010				
Camber/Toe - Universal Shim	K918	$\pm 1\text{-}1/2^\circ$	universal full contact dual angle shim	2
Camber/Toe Shim	K996 Series	$1/4^\circ$ to $1\text{-}1/2^\circ$	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2

Magentis

Front				
2010-2001				
Ball Joint	K7452	$\pm 1^\circ$	Upper; adjustable	2
Rear				
2010-2007				
Control Arm	K100120	camber $\pm 2^\circ$; toe $\pm 2^\circ$	Lower Rearward; adjustable	2

Optima

Front				
2010-2001				
Ball Joint	K7452	$\pm 1^\circ$	Upper; adjustable	2

Part Label	Part No.	Align Range	Qualifier	Qty
Optima				
Rear				
2010-2007				
Control Arm	K100120	camber $\pm 2^\circ$; toe $\pm 2^\circ$	Lower Rearward; adjustable	2
Rio				
Front				
2014-2012				
Cam Bolt Kit	K5330	$\pm 1-3/4^\circ$	"Magna Cam"; 14mm bolts	2
2011-2001				
Cam Bolt Kit	K90473	$\pm 1-3/4^\circ$	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	$\pm 1-3/4^\circ$	"Magna Cam"; 12mm bolts	2
Rear				
2011-2001				
Camber/Toe - Universal Shim	K918	$\pm 1-1/2^\circ$	universal full contact dual angle shim	2
Camber/Toe Shim	K996 Series	$1/4^\circ$ to $1-1/2^\circ$	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Rio5				
Front				
2011-2006				
Cam Bolt Kit	K90473	$\pm 1-3/4^\circ$	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	$\pm 1-3/4^\circ$	"Magna Cam"; 12mm bolts	2
Rear				
2011-2006				
Camber/Toe - Universal Shim	K918	$\pm 1-1/2^\circ$	universal full contact dual angle shim	2
Camber/Toe Shim	K996 Series	$1/4^\circ$ to $1-1/2^\circ$	FWD; Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Rondo				
Front				
2010-2007				
Cam Bolt Kit	K7256	$\pm 1-3/4^\circ$	"Magna Cam"; 14mm bolts	2
Rear				
2010-2007				
Control Arm	K100120	camber $\pm 2^\circ$; toe $\pm 2^\circ$	Lower Rearward; adjustable	2
Sedona				
Front				
2012-2002				
Cam Bolt Kit	K5330	$\pm 1-3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1-3/4^\circ$	"Axis Cam"; 14mm bolts	2
Sepia				
Front				
2001-1994				
Cam Bolt Kit	K90473	$\pm 1-3/4^\circ$	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	$\pm 1-3/4^\circ$	"Magna Cam"; 12mm bolts	2
Soul				
Front				
2014-2010				
Cam Bolt Kit	K5330	$\pm 1-3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1-3/4^\circ$	"Axis Cam"; 14mm bolts	2

Kia

Part Label	Part No.	Align Range	Qualifier	Qty
Soul				
Rear				
2014-2014				
Camber/Toe Shim	K6660 Series	$\pm 1^\circ$	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4), K6660-4 (1)	2
2013-2010				
Camber/Toe - Universal Shim	K100143	$\pm 1-1/2^\circ$	universal full contact dual angle shim	2
Camber/Toe Shim	K6660 Series	$\pm 1^\circ$	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4), K6660-4 (1)	2

Spectra				
Front				
2009-2000				
Cam Bolt Kit	K90473	$\pm 1-3/4^\circ$	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	$\pm 1-3/4^\circ$	"Magna Cam"; 12mm bolts	2
Rear				
2009-2000				
Cam Bolt Kit	K90473	$\pm 1-3/4^\circ$	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	$\pm 1-3/4^\circ$	"Magna Cam"; 12mm bolts	2

Sportage				
Front				
2014-2012				
Cam Bolt Kit	K5330	$\pm 1-3/4^\circ$	"Magna Cam"; 14mm bolts	2
2011-2005				
Cam Bolt Kit	K5330	$\pm 1-3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1-3/4^\circ$	AWD; "Axis Cam"; 14mm bolts	2
Rear				
2011-2005				
Cam Bolt Kit	K90474	$\pm 1-3/4^\circ$	AWD; "Axis Cam"; 14mm bolts	2

Land Rover

Part Label	Part No.	Align Range	Qualifier	Qty
Freelander				
Front				
2005-2002				
Cam Bolt Kit	K5330	$\pm 1-3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1-3/4^\circ$	"Axis Cam"; 14mm bolts	2

Lexus

Part Label	Part No.	Align Range	Qualifier	Qty
ES250				
Front				
1991-1990				
Cam Bolt Kit	K90476	$\pm 1-3/4^\circ$	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	$\pm 1-3/4^\circ$	"Magna Cam"; 16mm bolts	2
Rear				
1991-1990				
Cam Bolt Kit	K90476	$\pm 1-3/4^\circ$	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	$\pm 1-3/4^\circ$	"Magna Cam"; 16mm bolts	2
ES300				
Front				
2003-1992				
Cam Bolt Kit	K90477	$\pm 1-3/4^\circ$	"Axis Cam"; 17mm bolts	2
Cam Bolt Kit	K929	$\pm 1-3/4^\circ$	"Magna Cam"; 17mm bolts	2

Part Label	Part No.	Align Range	Qualifier	Qty
				ES300
Rear				
2003-1992				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
				ES330
Front				
2006-2004				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
Rear				
2006-2004				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
				ES350
Front				
2014-2007				
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
Rear				
2012-2007				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
				GS300
Rear				
2006-2006				
Control Arm	K100138	camber ±1-1/2°	Upper; adjustable; Incl. Ball Joint	2
				GS350
Rear				
2011-2007				
Control Arm	K100138	camber ±1-1/2°	Upper; adjustable; Incl. Ball Joint	2
				GX460
Front				
2014-2010				
Caster/Camber Kit	K100129	±1-1/2°		2
				GX470
Front				
2009-2003				
Caster/Camber Kit	K100128	±1-1/2°		2
				IS250
Rear				
2014-2006				
Control Arm	K100138	camber ±1-1/2°	Upper; adjustable; Incl. Ball Joint	2
				IS350
Rear				
2014-2006				
Control Arm	K100138	camber ±1-1/2°	Upper; adjustable; Incl. Ball Joint	2
				RX300
Front				
2003-1999				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
Rear				
2003-1999				
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2

Lexus

Part Label	Part No.	Align Range	Qualifier	Qty
RX330				
Front				
2006-2004				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
Rear				
2006-2004				
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
RX350				
Front				
2014-2014				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
2013-2007				
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
Rear				
2013-2007				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2

Lincoln

Part Label	Part No.	Align Range	Qualifier	Qty
Aviator				
Front				
2005-2003				
Caster/Camber Kit	K80111	±3/4°		2
Caster/Camber Washers	K80056	Camber ±3/4°/ Caster ±1 1/4°	Lower; Heavy Duty washer kit; designed to replace OEM locking plate	2
Rear				
2005-2003				
Caster/Camber Kit	K80112	±1/2°		2
Caster/Camber Washers	K80056	Camber ±1/2°	Lower; Heavy Duty washer kit; designed to replace OEM locking plate	2
Blackwood				
Front				
2002-2002				
Cam Bolt Kit	K8740	±1-1/4°	Upper Control Arm; For models w/factory provided cam bolts; Incl. cams and bolts	2
Continental				
Front				
1987-1982				
Camber Wedge Kit	K8825	2°	adjustable; Incl. 2 wedges	1
Rear				
1994-1988				
Cam Bolt Kit	K100085	+2-1/4°	Upper; adjustable	2
Camber Toe Bushing	K8627	camber ±2°; toe ±3/4°	Upper at Crossmember	2
LS				
Front				
2006-2000				
Cam Bolt Kit	K80061	± 1.5°/± 2°	Lower Control Arm	2

Part Label	Part No.	Align Range	Qualifier	Qty
Mark LT				
Front				
2008-2007				
Cam Bolt Kit	K80087	$\pm 2^\circ / \pm 1 \frac{1}{2}^\circ$	Lower; Incl. 2 cams, bolts, guides and hardware	2
Caster/Camber Kit	K100025	camber $\pm 1^\circ$; caster $\pm 1 \frac{1}{2}^\circ$	Lower; Cam Nut	2
Caster/Camber Kit	K100070	camber $\pm 1^\circ$; caster $\pm 1 \frac{1}{2}^\circ$	Lower	2
2006-2006				
Cam Bolt Kit	K80087	$\pm 2^\circ / \pm 1 \frac{1}{2}^\circ$	Lower; Incl. 2 cams, bolts, guides and hardware	2
Caster/Camber Kit	K100025	camber $\pm 1^\circ$; caster $\pm 1 \frac{1}{2}^\circ$	Lower; Cam Nut	2
Mark VII				
Front				
1992-1984				
Camber Wedge Kit	K8825	2°	adjustable; Incl. 2 wedges	1
Mark VIII				
Front				
1998-1993				
Cam Bolt Kit	K8521	$\pm 1 \frac{1}{8}^\circ$	Lower To Frame	2
Rear				
1998-1993				
Toe Compensator Link	K8594			2
MKX				
Front				
2014-2007				
Cam Bolt Kit	K7436	$\pm 1 \frac{3}{4}^\circ$	"Magna Cam"; 16mm bolts	2
Cam Bolt Kit	K90476	$\pm 1 \frac{3}{4}^\circ$	"Axis Cam"; 16mm bolts	2
MKZ				
Front				
2012-2007				
Ball Joint	K500013	$\pm 1^\circ$	Upper; adjustable	2

Lincoln

Part Label	Part No.	Align Range	Qualifier	Qty
Navigator				
Front				
2014-2007				
Cam Bolt Kit	K100010	camber $\pm 1\text{-}1/2^\circ$; caster $\pm 2^\circ$	Lower Control Arm	1
Caster/Camber Kit	K100025	camber $\pm 1^\circ$; caster $\pm 1\text{-}1/2^\circ$	Lower; Cam Nut	2
Caster/Camber Kit	K100070	camber $\pm 1^\circ$; caster $\pm 1\text{-}1/2^\circ$	Lower	2
2006-2004				
Camber Caster Plate	K80069	camber $\pm 2^\circ$; caster $\pm 1\text{-}1/2^\circ$	Lower; adjustable	1
2003-2003				
Cam Bolt Kit	K8740	$\pm 1\text{-}1/4^\circ$	Upper Control Arm; For models w/factory provided cam bolts; Incl. cams and bolts	2
Camber Caster Plate	K80069	camber $\pm 2^\circ$; caster $\pm 1\text{-}1/2^\circ$	Lower; adjustable	1
2002-1999				
Cam Bolt Kit	K8740	$\pm 1\text{-}1/4^\circ$	Upper Control Arm; For models w/factory provided cam bolts; Incl. cams and bolts	2
Torsion Bar Key	K100014	1/2" to 1-1/2"	4WD; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
1998-1998				
Cam Bolt Kit	K8740	$\pm 1\text{-}1/4^\circ$	Upper Control Arm; 2nd design; For models w/factory provided cam bolts; Incl. cams and bolts	2
Caster/Camber Cam	K8701	$\pm 2\text{-}1/2^\circ$	Upper Control Arm; 1st design; For models w/factory locking plate; Cam only	2
Torsion Bar Key	K100014	1/2" to 1-1/2"	4WD; Restores ride height to be within O.E. specifications for vehicles with fatigued Torsion Bar	1
Rear				
2006-2003				
Cam Bolt Kit	K80064	$\pm 2\text{-}3/4^\circ$	Upper; adjustable	2
Town Car				
Front				
2011-2003				
Cam Bolt Kit	K100094	$\pm 1\text{-}1/2^\circ$	Lower Control Arm	1
Versailles				
Front				
1980-1977				
Cam Bolt Kit	K8243A	$\pm 1\text{-}1/8^\circ$	Lower Control Arm	2
Zephyr				
Front				
2006-2006				
Ball Joint	K500013	$\pm 1^\circ$	Upper; adjustable	2
Mazda				
Part Label	Part No.	Align Range	Qualifier	Qty
3				
Rear				
2014-2004				
Control Arm	K100002	camber -1-1/2° to +5°	Upper; adjustable	2

Part Label	Part No.	Align Range	Qualifier	Qty
				323
Front				
1995-1995				
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1994-1986				
Cam Bolt Kit	K80110	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1995-1995				
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1994-1990				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Control Arm	K100050	toe -1° to +1-1/2°	Lower; adjustable	2
1989-1986				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
				5
Rear				
2012-2006				
Control Arm	K100002	camber -1-1/2° to +5°	Upper; adjustable	2
				6
Front				
2014-2003				
Ball Joint	K500013	±1°	Upper; Naturally Aspirated; adjustable	2
				626
Front				
2002-1993				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1992-1988				
Cam Bolt Kit	K80110	±1-3/4°	w/4WS; "Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	w/2WS; "Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1987-1983				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
1982-1979				
Cam Bolt Kit	K80110	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Rear				
2002-1993				
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1992-1988				
Cam Bolt Kit	K9757	±1-3/4°	w/4WS; "Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1987-1983				
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Mazda

Part Label	Part No.	Align Range	Qualifier	Qty
929				
Front				
1991-1988				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
B2300				
Front				
2010-2001				
Camber Kit	K80065	±1-5/8°	Upper	2
Caster/Camber Kit	K8674	±1-1/4°	Incl. 2 Cams	2
1997-1994				
Caster/Camber - Universal Bushing	K80109	±4°	Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3°	4WD; K8970 (0), K8971 (3/16), K8972 (3/8), K8973 (5/8), K8974 (3/4), K8975 (7/8), K8976 (1), K8977 (1-3/16), K8978 (1-3/8), K8979 (1-3/4), K8980 (2), K8981 (2-1/4), K8982 (2-1/2), K8983 (2-3/4), K8984 (3)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
Caster/Camber Bushing Kit	K8746	±1°	Radius Arm To Frame; adjustable	2
B2500				
Front				
2001-2000				
Camber Kit	K80065	±1-5/8°	Upper	2
Caster/Camber Kit	K8674	±1-1/4°	Incl. 2 Cams	2
1999-1998				
Camber Kit	K80065	±1-5/8°	Upper	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Kit	K8674	±1-1/4°	Incl. 2 Cams	2

Part Label	Part No.	Align Range	Qualifier	Qty
				B3000
Front				
2008-1998				
Camber Kit	K80065	±1-5/8°	Upper	2
Caster/Camber Kit	K8674	±1-1/4°	Incl. 2 Cams	2
1999-1997				
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
1996-1994				
Caster/Camber - Universal Bushing	K80109	±4°	Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3°	4WD; K8970 (0), K8971 (3/16), K8972 (3/8), K8973 (5/8), K8974 (3/4), K8975 (7/8), K8976 (1), K8977 (1-3/16), K8978 (1-3/8), K8979 (1-3/4), K8980 (2), K8981 (2-1/4), K8982 (2-1/2), K8983 (2-3/4), K8984 (3)	2
Caster/Camber Bushing Kit	K8746	±1°	Radius Arm To Frame; adjustable	2
				B4000
Front				
2008-2000				
Camber Kit	K80065	±1-5/8°	Upper	2
Caster/Camber Kit	K8674	±1-1/4°	Incl. 2 Cams	2
1999-1998				
Camber Kit	K80065	±1-5/8°	Upper	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Kit	K8674	±1-1/4°	Incl. 2 Cams	2
1997-1994				
Caster/Camber - Universal Bushing	K80109	±4°	Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K100016 to K100022	0° to 3°	Upper; K100016 (0), K100017 (1/2), K100018 (1), K100019 (1-1/2), K100020 (2), K100021 (2-1/2), K100022 (3)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3°	4WD; K8970 (0), K8971 (3/16), K8972 (3/8), K8973 (5/8), K8974 (3/4), K8975 (7/8), K8976 (1), K8977 (1-3/16), K8978 (1-3/8), K8979 (1-3/4), K8980 (2), K8981 (2-1/4), K8982 (2-1/2), K8983 (2-3/4), K8984 (3)	2
Caster/Camber Bushing Kit	K8746	±1°	Radius Arm To Frame; adjustable	2
				CX-9
Front				
2014-2007				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2

Mazda

Part Label	Part No.	Align Range	Qualifier	Qty
GLC				
Front				
1985-1983				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1982-1981				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
1985-1983				
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
MPV				
Front				
2006-1989				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
MX-3				
Front				
1996-1992				
Cam Bolt Kit	K80110	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1996-1992				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
MX-6				
Front				
1997-1988				
Cam Bolt Kit	K80110	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1997-1988				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Part Label	Part No.	Align Range	Qualifier	Qty
Navajo				
Front				
1994-1992				
Caster/Camber - Universal Bushing	K80109	±4°	Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3-1/2°	RWD; K8970 (0), K8971 (1/4), K8972 (1/2), K8973 (3/4), K8974 (1), K8975 (1-1/4), K8976 (1-1/2), K8977 (1-3/4), K8978 (2), K8979 (2-1/4), K8980 (2-1/2), K8981 (2-3/4), K8982 (3), K8983 (3-1/4), K8984 (3-1/2)	2
Caster/Camber Bushing	K8970 to K8984	0° to 3°	4WD; K8970 (0), K8971 (3/16), K8972 (3/8), K8973 (5/8), K8974 (3/4), K8975 (7/8), K8976 (1), K8977 (1-3/16), K8978 (1-3/8), K8979 (1-3/4), K8980 (2), K8981 (2-1/4), K8982 (2-1/2), K8983 (2-3/4), K8984 (3)	2
Caster/Camber Bushing Kit	K8746	±1°	Radius Arm To Frame; adjustable	2
1991-1991				
Caster/Camber - Universal Bushing	K80109	±4°	Ultra Range; Alternative to K8970 Series or K8986 Universal Bushing	2
Caster/Camber - Universal Bushing	K8986	±2-1/4°	minimum adjustment 1/2 deg.; Alternative to K8970 Series or K80109 Ultra Range Universal Bushing	2
Caster/Camber Bushing	K8970 to K8984	0° to 3°	4WD; K8970 (0), K8971 (3/16), K8972 (3/8), K8973 (5/8), K8974 (3/4), K8975 (7/8), K8976 (1), K8977 (1-3/16), K8978 (1-3/8), K8979 (1-3/4), K8980 (2), K8981 (2-1/4), K8982 (2-1/2), K8983 (2-3/4), K8984 (3)	2
Caster/Camber Bushing Kit	K8746	±1°	Radius Arm To Frame; adjustable	2
Protege				
Front				
2003-1990				
Cam Bolt Kit	K80110	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
2003-1990				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Protege5				
Front				
2003-2002				
Cam Bolt Kit	K80110	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
2003-2002				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Mazda

Part Label	Part No.	Align Range	Qualifier	Qty
RX-7				
Front				
1995-1993				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
1991-1979				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1982-1979				
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Tribute				
Front				
2011-2009				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
2008-2008				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K80060	1-1/2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
2006-2001				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K80060	1-1/2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
2011-2001				
Control Arm	K100072	camber ±2°	Upper; adjustable; w/12mm Bushing Sleeve; Incl. Ball Joint	2

Mercedes-Benz

Part Label	Part No.	Align Range	Qualifier	Qty
C200				
Front				
2012-2010				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
2004-2001				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
E200				
Front				
2014-2012				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
E250				
Front				
2014-2011				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
E300				
Front				
2010-2010				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2

Part Label	Part No.	Align Range	Qualifier	Qty
Capri				
Front				
1994-1991				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1986-1979				
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Rear				
1994-1991				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Toe Adjusting Kit	K8585	2°	replaces OE non adjustable bushing on left rear stabilizer arm	1
1986-1981				
Toe Adjusting Kit	K8585	2°	replaces OE non adjustable bushing on left rear stabilizer arm	1
Comet				
Front				
1977-1971				
Cam Bolt Kit	K8243A	±1-1/8°	Lower Control Arm	2
Control Arm Shaft Kit	K8233		Upper; {K8131} Threaded Type Shaft Kit Cannot Be Installed If {K8233} Was Previously Installed; rubber bushing type	2
1969-1966				
Cam Bolt Kit	K8243A	±1-1/8°	Lower Control Arm	2
Control Arm Shaft Kit	K8233		Upper; {K8131} Threaded Type Shaft Kit Cannot Be Installed If {K8233} Was Previously Installed; rubber bushing type	2
Cougar				
Front				
2002-1999				
Strut Mount	K80113	±1°		2
1997-1989				
Cam Bolt Kit	K8521	±1-1/8°	Lower To Frame	2
1988-1980				
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Camber Wedge Kit	K8825	2°	adjustable; Incl. 2 wedges	1
1973-1967				
Cam Bolt Kit	K8243A	±1-1/8°	Lower Control Arm	2
Control Arm Shaft Kit	K8233		Upper; {K8131} Threaded Type Shaft Kit Cannot Be Installed If {K8233} Was Previously Installed; rubber bushing type	2
Rear				
1996-1989				
Toe Compensator Link	K8594			2
Grand Marquis				
Front				
2011-2003				
Cam Bolt Kit	K100094	±1-1/2°	Lower Control Arm	1
LN7				
Rear				
1983-1982				
Camber Wedge Kit	K8358		Incl. 2 wedges, 4 bolts and nuts	1

Mercury

Part Label	Part No.	Align Range	Qualifier	Qty
Lynx				
Front				
1987-1986				
Strut Mount	K8574	±1-1/4°		2
1985-1985				
Strut Mount	K8574	±1-1/4°	From 3/1/85	2
Rear				
1987-1981				
Camber Wedge Kit	K8358		Incl. 2 wedges, 4 bolts and nuts	1
Marauder				
Front				
2004-2003				
Cam Bolt Kit	K100094	±1-1/2°	Lower Control Arm	1
Mariner				
Front				
2011-2006				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
2005-2005				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K80060	1-1/2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
2011-2005				
Control Arm	K100072	camber ±2°	Upper; adjustable; w/12mm Bushing Sleeve; Incl. Ball Joint	2
Marquis				
Front				
1986-1983				
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Camber Wedge Kit	K8825	2°	adjustable; Incl. 2 wedges	1
Milan				
Front				
2010-2006				
Ball Joint	K500013	±1°	Upper; adjustable	2
Monarch				
Front				
1980-1975				
Cam Bolt Kit	K8243A	±1-1/8°	Lower Control Arm	2
Montego				
Front				
1971-1968				
Cam Bolt Kit	K8243A	±1-1/8°	Lower Control Arm	2
Control Arm Shaft Kit	K8233		Upper; {K8131} Threaded Type Shaft Kit Cannot Be Installed If {K8233} Was Previously Installed; rubber bushing type	2
Rear				
2007-2005				
Camber Bushing	K100087	±1 1/2°	FWD; Upper adjustable	2
Monterey				
Front				
2007-2004				
Camber Caster Plate	K8991	±1 1/4°	Upper Strut; 1 plate per package	1

Mercury

Part Label	Part No.	Align Range	Qualifier	Qty
Mountaineer				
Front				
2005-2002				
Caster/Camber Kit	K80111	$\pm 3/4^\circ$		2
Caster/Camber Washers	K80056	Camber $\pm 3/4^\circ$ / Caster $\pm 1/4^\circ$	Upper; Heavy Duty washer kit; designed to replace OEM locking plate	2
2001-1997				
Camber Kit	K80065	$\pm 1-5/8^\circ$	Upper	2
Caster/Camber Kit	K8674	$\pm 1-1/4^\circ$	Upper; Incl. 2 Cams	2
Rear				
2005-2002				
Caster/Camber Kit	K80112	$\pm 1/2^\circ$		2
Caster/Camber Washers	K80056	Camber $\pm 1/2^\circ$	Lower; Heavy Duty washer kit; designed to replace OEM locking plate	2
Mystique				
Front				
2000-1995				
Strut Mount	K80113	$\pm 1^\circ$		2
Sable				
Front				
2005-1996				
Camber Caster Plate	K8990	$\pm 1\ 1/4^\circ$	Upper Strut; 1 plate per package	2
1995-1991				
Strut Mount	K8822	$\pm 1-1/4^\circ$	Adjustable Plate Kit	2
1990-1986				
Strut Mount	K8821	$\pm 1-1/4^\circ$	Adjustable Plate Kit	2
Rear				
2009-2008				
Camber Bushing	K100087	$\pm 1\ 1/2^\circ$	FWD; Upper adjustable	2
2005-1996				
Cam Bolt Kit	K8460	$\pm 1-1/4^\circ$	Wagon; To Lower Control Arm	1
Camber Toe Bushing	K8627	camber $\pm 2^\circ$; toe $\pm 3/4^\circ$	Sedan; Upper at Crossmember	2
Camber/Toe Cam Bolt Kit	K8985	$\pm 1^\circ$	Sedan; Upper at Crossmember; Incl. plate, two cam bolt assemblies and hardware	1
1995-1986				
Cam Bolt Kit	K100085	$+2-1/4^\circ$	Sedan; Upper; adjustable	2
Cam Bolt Kit	K8460	$\pm 1-1/4^\circ$	Wagon; To Lower Control Arm	1
Camber Toe Bushing	K8627	camber $\pm 2^\circ$; toe $\pm 3/4^\circ$	Sedan; Upper at Crossmember	2
Toe Adjusting Kit	K8823	$\pm 1-1/4^\circ$	Wagon	2
Topaz				
Front				
1994-1984				
Strut Mount	K8574	$\pm 1-1/4^\circ$		2
Rear				
1994-1984				
Cam Bolt Kit	K90473	$\pm 1-3/4^\circ$	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	$\pm 1-3/4^\circ$	"Magna Cam"; 12mm bolts	2
Camber Toe Bushing	K8824	$\pm 2^\circ$ Camber adjustment, $\pm 2^\circ$ Toe adjustment	Lower	2
Camber Wedge Kit	K8358		Incl. 2 wedges, 4 bolts and nuts	1

Mercury

Part Label	Part No.	Align Range	Qualifier	Qty
Tracer				
Front				
1999-1997				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
1996-1987				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1999-1995				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Toe Adjusting Kit	K8585	2°	replaces OE non adjustable bushing on left rear stabilizer arm	1
1994-1991				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Control Arm	K100050	toe -1° to +1-1/2°	Lower; adjustable	2
Toe Adjusting Kit	K8585	2°	replaces OE non adjustable bushing on left rear stabilizer arm	1
1989-1987				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Toe Adjusting Kit	K8585	2°	replaces OE non adjustable bushing on left rear stabilizer arm	1

Villager

Front				
2002-1993				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2002-1993				
Camber/Toe - Universal Shim	K916	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K994 Series	1/4° to 1-1/2°	Full Contact Shims; K994-1 (1/4), K994-2 (1/2), K994-3 (3/4), K994-4 (1), K994-5 (1-1/4), K994-6 (1-1/2)	2

Zephyr

Front				
1983-1978				
Cam Bolt Kit	K7151	±1-1/8°		2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2

Mini

Part Label	Part No.	Align Range	Qualifier	Qty
Cooper				
Rear				
2011-2002				
Control Arm	K100003	camber ±4°	Lower; adjustable	1

Part Label	Part No.	Align Range	Qualifier	Qty
				3000GT
Front				
1999-1991				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
				Cordia
Front				
1988-1983				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
				Diamante
Front				
2004-1997				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
1996-1992				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K8877	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
Rear				
2004-1997				
Cam Bolt Kit	K100048	-3/4° to +1-1/2°	Upper; Incl. bracket	1
Camber Shim	K7332	±1-1/4°	Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
				Eclipse
Front				
2012-2000				
Cam Bolt Kit	K7436	±1-3/4°	"Magna Cam"; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
1999-1995				
Ball Joint	K7452	±1°	Upper; adjustable	2
Camber Adj. Anchor Bolt	K7330	1 1/2°	Upper Control Arm; Replaces O.E. non-adjustable anchor bolts; Incl. two adjustable bolts	2
1994-1990				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
2012-2008				
Camber Shim	K7332	±1-1/4°	Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
2007-2006				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Shim	K7332	±1-1/4°	Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
2005-1995				
Cam Bolt Kit	K100048	-3/4° to +1-1/2°	Upper; Incl. bracket	1
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Shim	K7332	±1-1/4°	Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
1994-1990				
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Mitsubishi

Part Label	Part No.	Align Range	Qualifier	Qty
Endeavor				
Front				
2006-2004				
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Expo				
Front				
1995-1992				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Galant				
Front				
2012-1999				
Cam Bolt Kit	K7436	±1-3/4°	"Magna Cam"; 16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
1998-1994				
Ball Joint	K7452	±1°	Upper; adjustable	2
Camber Adj. Anchor Bolt	K7330	1 1/2°	Upper Control Arm; Replaces O.E. non-adjustable anchor bolts; Incl. two adjustable bolts	2
1993-1985				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
2012-2004				
Camber Shim	K7332	±1-1/4°	Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
2003-1994				
Cam Bolt Kit	K100048	-3/4° to +1-1/2°	Upper; Incl. bracket	1
Camber Shim	K7332	±1-1/4°	Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
1993-1990				
Camber Shim	K7332	±1-1/4°	Upper at Upper Control Arm; Incl. 8 shims and 4 bolts	2
Lancer				
Front				
2011-2002				
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Mirage				
Front				
2002-1993				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
1992-1985				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Montero				
Front				
2006-2001				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1

Mitsubishi

Part Label	Part No.	Align Range	Qualifier	Qty
Outlander				
Front				
2006-2003				
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Precis				
Front				
1993-1987				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Sigma				
Front				
1990-1989				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Tredia				
Front				
1988-1983				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Nissan

Part Label	Part No.	Align Range	Qualifier	Qty
200SX				
Front				
1998-1995				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
240SX				
Front				
1998-1989				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
370Z				
Rear				
2014-2013				
Camber/Toe Cam Bolt Kit	K100152	±3°		2
2012-2009				
Camber/Toe Cam Bolt Kit	K100152	±3°		2
Control Arm	K100090	camber ±3°; toe ±2°	Lower Forward; adjustable	2
Altima				
Front				
2014-2002				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
2001-1993				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2

Nissan

Part Label	Part No.	Align Range	Qualifier	Qty
Altima				
Rear				
2001-1993				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Armada				
Front				
2014-2005				
Cam Bolt Kit	K80276	±2°		2
Axxess				
Front				
1995-1990				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cube				
Front				
2014-2010				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Rear				
2014-2010				
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4), K6660-4 (1)	2
2009-2009				
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
Frontier				
Front				
2014-2005				
Cam Bolt Kit	K80276	±2°		2
2004-1998				
Camber Shim	K90470	1mm		1
Camber Shim	K90471	2mm		1
Camber Shim	K90472	3mm		1
Juke				
Front				
2014-2011				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Rear				
2014-2011				
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Leaf				
Rear				
2014-2011				
Camber/Toe Shim	K7264 Series	1/4° to 1°	Full Contact Shims; K7264-1 (1/4), K7264-2 (1/2), K7264-3 (3/4), K7264-4 (1)	2

Part Label	Part No.	Align Range	Qualifier	Qty
Maxima				
Front				
2014-1995				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1994-1985				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1994-1985				
Lateral Arm	K90388	camber -2° to +2-3/4°	adjustable	2
Multi				
Front				
1988-1986				
Cam Bolt Kit	K90473	±1-3/4°	4WD/AWD; "Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	4WD/AWD; "Magna Cam"; 12mm bolts	2
Murano				
Front				
2014-2003				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
NX				
Front				
1993-1991				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1993-1991				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Pathfinder				
Front				
2014-2005				
Cam Bolt Kit	K80276	±2°		2
2004-1997				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1996-1996				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Camber Shim	K90470	1mm		1
Camber Shim	K90471	2mm		1
Camber Shim	K90472	3mm		1
1995-1987				
Camber Shim	K90470	1mm		1
Camber Shim	K90471	2mm		1
Camber Shim	K90472	3mm		1

Nissan

Part Label	Part No.	Align Range	Qualifier	Qty
Pulsar				
Front				
1983-1983				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1983-1983				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Pulsar NX				
Front				
1990-1983				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1990-1987				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1986-1983				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Quest				
Front				
2014-2004				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
2002-1993				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Sentra				
Front				
2014-2007				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
2006-1995				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
1994-1982				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
2014-2007				
Camber/Toe Shim	K7264 Series	1/4° to 1°	Full Contact Shims; K7264-1 (1/4), K7264-2 (1/2), K7264-3 (3/4), K7264-4 (1)	2
1994-1987				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Nissan

Part Label	Part No.	Align Range	Qualifier	Qty
				Stanza
Front				
1992-1982				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1992-1987				
Lateral Arm	K90388	camber -2° to +2-3/4°	adjustable	2
1988-1986				
Cam Bolt Kit	K5330	±1-3/4°	Wagon; 4WD; "Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	Wagon; 4WD; "Axis Cam"; 14mm bolts	2
Camber Wedge Kit	K90073	2°	Wagon; 4WD; adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
				Titan
Front				
2014-2004				
Cam Bolt Kit	K80276	±2°		2
				Versa
Front				
2014-2007				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Rear				
2014-2012				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
2011-2010				
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4). K6660-4 (1)	2
2009-2007				
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4). K6660-4 (1)	2
				Xterra
Front				
2014-2005				
Cam Bolt Kit	K80276	±2°		2

Oldsmobile

Part Label	Part No.	Align Range	Qualifier	Qty
				442
Front				
1971-1964				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1

Oldsmobile

Part Label	Part No.	Align Range	Qualifier	Qty
88				
Front				
1999-1997				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1996-1992				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Rear				
1999-1996				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
1995-1992				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Camber/Toe Shim	K90149	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2

Part Label	Part No.	Align Range	Qualifier	Qty
				98
Front				
1996-1985				
Cam Bolt Kit	K100024	$\pm 1\ 3/4^\circ$	16mm bolts	2
Cam Bolt Kit	K90476	$\pm 1\ 3/4^\circ$	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	$\pm 1\ 3/4^\circ$	"Magna Cam"; 16mm bolts	2
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
1984-1980				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
1979-1974				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1971				
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
Rear				
1996-1985				
Cam Bolt Kit	K100024	$\pm 1\ 3/4^\circ$	16mm bolts	2
Cam Bolt Kit	K90476	$\pm 1\ 3/4^\circ$	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	$\pm 1\ 3/4^\circ$	"Magna Cam"; 16mm bolts	2
Camber/Toe - Universal Shim	K918	$\pm 1\ 1/2^\circ$	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8" or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4" or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4" or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2" or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4" to 1-1/2"	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
				Achieva
Front				
1998-1996				
Cam Bolt Kit	K5330	$\pm 1\ 3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1\ 3/4^\circ$	"Axis Cam"; 14mm bolts	2
1995-1992				
Cam Bolt Kit	K100024	$\pm 1\ 3/4^\circ$	16mm bolts	2
Cam Bolt Kit	K90476	$\pm 1\ 3/4^\circ$	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	$\pm 1\ 3/4^\circ$	"Magna Cam"; 16mm bolts	2

Oldsmobile

Part Label	Part No.	Align Range	Qualifier	Qty
Achieva				
Rear				
1998-1992				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Alero				
Front				
2004-1999				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2004-1999				
Cam Bolt Kit	K6699	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Aurora				
Front				
2003-1995				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
2003-2001				
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
1999-1995				
Camber Shim	K6661 Series	1/4° to 1°	K6661-1 (1/4), K6661-2 (1/2), K6661-3 (3/4), K6661-4 (1)	2
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
Bravada				
Front				
2001-1996				
Cam Bolt Kit	K6367	±1-1/8°	Upper	2
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Offset Bushing Kit	K7104		Upper; eccentric bushing kit provides additional camber adjustment	2
1994-1991				
Cam Bolt Kit	K6367	±1-1/8°	Upper	2
Control Arm Offset Bushing Kit	K7104		Upper; eccentric bushing kit provides additional camber adjustment	2

Part Label	Part No.	Align Range	Qualifier	Qty
Calais				
Front				
1987-1985				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
1987-1985				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Custom Cruiser				
Front				
1992-1980				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
1979-1974				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1971				
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2

Oldsmobile



Part Label	Part No.	Align Range	Qualifier	Qty
Cutlass				
Front				
1999-1997				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1987-1985				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
1981-1978				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
1977-1974				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1973				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
1972-1965				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
1964-1964				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1

Part Label	Part No.	Align Range	Qualifier	Qty
Cutlass				
Rear				
1999-1997				
Cam Bolt Kit	K6699	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cutlass Calais				
Front				
1991-1988				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1984-1978				
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
Rear				
1991-1988				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Cutlass Ciera				
Front				
1996-1982				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
1996-1995				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
1994-1982				
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Cutlass Cruiser				
Front				
1994-1987				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1983-1980				
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2

Oldsmobile

Part Label	Part No.	Align Range	Qualifier	Qty
Cutlass Cruiser				
Rear				
1994-1987				
Camber/Toe - Universal Shim	K918	$\pm 1-1/2^{\circ}$	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8" or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4" or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4" or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2" or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4" to 1-1/2"	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Cutlass Salon				
Front				
1987-1985				
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
1981-1978				
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
1977-1975				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2

Part Label	Part No.	Align Range	Qualifier	Qty
Cutlass Supreme				
Front				
1997-1997				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Camber Shim	K6478 to K6481	1/4° to 1°	K6478 (1/4), K6479 (1/2), K6480 (3/4), K6481 (1)	2
1996-1989				
Camber Shim	K6478 to K6481	1/4° to 1°	K6478 (1/4), K6479 (1/2), K6480 (3/4), K6481 (1)	2
1988-1988				
Camber Shim	K6478 to K6481	1/4° to 1°	FWD; K6478 (1/4), K6479 (1/2), K6480 (3/4), K6481 (1)	2
Control Arm Shaft Kit	K6218		FWD; Upper provides additional positive camber adjustment	2
1987-1978				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
1977-1973				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
1972-1967				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
Rear				
1997-1997				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K6375	±3/4°		2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
1996-1988				
Cam Bolt Kit	K100024	±1 3/4°	FWD; 16mm bolts	2
Cam Bolt Kit	K6375	±3/4°	FWD	2
Cam Bolt Kit	K90476	±1-3/4°	FWD; "Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	FWD; "Magna Cam"; 16mm bolts	2
Cutlass Tiara				
Front				
1976-1976				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2

Oldsmobile

Part Label	Part No.	Align Range	Qualifier	Qty
Delta 88				
Front				
1991-1986				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1985-1985				
Control Arm Shaft Kit	K6210		RWD; Upper; provides additional positive camber adjustment	2
1984-1980				
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
1982-1971				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
Rear				
1991-1986				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
F85				
Front				
1972-1965				
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
Firenza				
Front				
1988-1982				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
1986-1982				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2

Part Label	Part No.	Align Range	Qualifier	Qty
Intrigue				
Front				
2002-1998				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2002-1998				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
LSS				
Front				
1999-1996				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
1999-1996				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Omega				
Front				
1984-1980				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1979-1975				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1974-1973				
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
Rear				
1984-1980				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2

Oldsmobile

Part Label	Part No.	Align Range	Qualifier	Qty
Regency				
Front				
1998-1997				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
1998-1997				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Silhouette				
Front				
2004-1997				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1996-1990				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
2004-1990				
Camber/Toe - Universal Shim	K917	±1-1/2°	FWD; universal full contact dual angle shim	2
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	FWD; Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Toronado				
Front				
1992-1986				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1985-1979				
Cam Bolt Kit	K5266	±1-1/8°	Upper	2
Control Arm Offset Bushing Kit	K7104		Upper; eccentric bushing kit provides additional camber adjustment	2
1978-1966				
Cam Bolt Kit	K5266	±1-1/8°	Upper	2

Part Label	Part No.	Align Range	Qualifier	Qty
Toronado				
Rear				

1992-1986

Camber Shim	K6624 to K6627	1/4° to 1°	K6624 (1/4), K6625 (1/2), K6626 (3/4), K6627 (1)	2
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2

Vista Cruiser

Front				
--------------	--	--	--	--

1975-1971

Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
-----------------------	--------------	--	---	---

Plymouth

Part Label	Part No.	Align Range	Qualifier	Qty
Acclaim				
Front				

1995-1989

Cam Bolt Kit	K7151	±1-1/8°		2
--------------	--------------	---------	--	---

Rear				
-------------	--	--	--	--

1995-1989

Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2

Barracuda

Front				
--------------	--	--	--	--

1974-1970

Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Control Arm Offset Bushing Kit	K7103		Upper	2

1969-1964

Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2

Belvedere

Front				
--------------	--	--	--	--

1970-1962

Control Arm Offset Bushing Kit	K7103		Upper	2
--------------------------------	--------------	--	-------	---

1970-1960

Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2

1959-1959

Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
--------------	---------------	---------	-------------------	---

Plymouth

Part Label	Part No.	Align Range	Qualifier	Qty
Belvedere II				
Front				
1967-1965				
Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2
Breeze				
Front				
2000-1996				
Ball Joint	K7451	±1°	Upper; adjustable	2
Camber Bushing	K7317	±1°	Upper; eccentric bushing kit	2
Caravelle				
Front				
1988-1988				
Cam Bolt Kit	K7151	±1-1/8°	FWD	2
1987-1985				
Cam Bolt Kit	K7151	±1-1/8°		2
Rear				
1988-1985				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Champ				
Front				
1982-1979				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Colt				
Front				
1994-1985				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
1984-1984				
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cuda				
Front				
1974-1970				
Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2
Duster				
Front				
1976-1970				
Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2

Plymouth

Part Label	Part No.	Align Range	Qualifier	Qty
Fury				
Front				
1973-1965				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
1964-1962				
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2
1961-1959				
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Fury I				
Front				
1973-1968				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Fury II				
Front				
1973-1965				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Fury III				
Front				
1973-1965				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Gran Fury				
Front				
1973-1972				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Grand Voyager				
Front				
2000-1996				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1995-1991				
Cam Bolt Kit	K7151	±1-1/8°		2

Plymouth

Part Label	Part No.	Align Range	Qualifier	Qty
Grand Voyager				
Rear				
2000-1996				
Camber Shim	K7444 to K7447	1/4° to 1°	K7444 (1/4), K7445 (1/2), K7446 (3/4), K7447 (1)	2
Camber/Toe Shim	K7264 Series	1/4° to 1°	Full Contact Shims; K7264-1 (1/4), K7264-2 (1/2), K7264-3 (3/4), K7264-4 (1)	2
Toe Shim	K7438 to K7443	.10° to .80°	K7438 (.10 deg.), K7439 (.20 deg.), K7440 (.30 deg.), K7441 (.40 deg.), K7442 (.50 deg.), K7443 (.80 deg.)	2
1995-1991				
Camber Shim	K7444 to K7447	1/4° to 1°	AWD; Non-ABS; K7444 (1/4), K7445 (1/2), K7446 (3/4), K7447 (1)	2
Camber/Toe Shim	K90152	3/8° or 3/32"	FWD; half shim; 20 shims per package	2
Camber/Toe Shim	K90153	3/4° or 3/16"	FWD; half shim; 20 shims per package	2
Camber/Toe Shim	K982-1	1/4° or 1/16"	FWD; half shim; 20 shims per package	2
Camber/Toe Shim	K982-2	1/2° or 1/8"	FWD; half shim; 20 shims per package	2
Toe Shim	K7438 to K7443	.10° to .80°	AWD; Non-ABS; K7438 (.10 deg.), K7439 (.20 deg.), K7440 (.30 deg.), K7441 (.40 deg.), K7442 (.50 deg.), K7443 (.80 deg.)	2
1990-1990				
Camber/Toe Shim	K90152	3/8° or 3/32"	half shim; 20 shims per package	2
Camber/Toe Shim	K90153	3/4° or 3/16"	half shim; 20 shims per package	2
Camber/Toe Shim	K982-1	1/4° or 1/16"	half shim; 20 shims per package	2
Camber/Toe Shim	K982-2	1/2° or 1/8"	half shim; 20 shims per package	2
GTX				
Front				
1971-1968				
Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Control Arm Offset Bushing Kit	K7103		Upper	2
1967-1967				
Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2
Horizon				
Front				
1990-1978				
Cam Bolt Kit	K7120	±1-1/8°		2
Rear				
1990-1978				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Laser				
Front				
1994-1990				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Plymouth

Part Label	Part No.	Align Range	Qualifier	Qty
Neon				
Front				
2001-1995				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2001-1995				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Lateral Arm	K100001	camber ±3-1/2°	adjustable	2
PB100 Van				
Front				
1978-1974				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
PB200 Van				
Front				
1978-1974				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
PB300 Van				
Front				
1978-1974				
Cam Bolt Kit	K7036	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Reliant				
Front				
1989-1984				
Cam Bolt Kit	K7151	±1-1/8°		2
1983-1981				
Cam Bolt Kit	K7120	±1-1/8°		2
Rear				
1989-1981				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Roadrunner				
Front				
1975-1973				
Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
1972-1968				
Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2

Plymouth

Part Label	Part No.	Align Range	Qualifier	Qty
Satellite				
Front				
1974-1973				
Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
1972-1965				
Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2
Savoy				
Front				
1964-1962				
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2
1961-1959				
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Scamp				
Front				
1983-1983				
Cam Bolt Kit	K7120	±1-1/8°		2
1976-1973				
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2
1972-1971				
Control Arm Offset Bushing Kit	K7103		Upper	2
Sundance				
Front				
1994-1987				
Cam Bolt Kit	K7151	±1-1/8°		2
Rear				
1994-1987				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Trailduster				
Front				
1981-1974				
Cam Bolt Kit	K7036	±1-1/8°	RWD; Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	RWD; Upper Control Arm	2
Caster/Camber Bushing	K931 to K936	1/4° to 1-1/2°	4WD; K931 (1/4), K932 (1/2), K933 (3/4), K934 (1), K935 (1-1/4), K936 (1-1/2)	2
Turismo				
Front				
1985-1983				
Cam Bolt Kit	K7120	±1-1/8°		2

Plymouth

Part Label	Part No.	Align Range	Qualifier	Qty
Turismo				
Rear				
1985-1983				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2

Valiant				
Front				
1976-1960				
Cam Bolt Kit	K7030	±1-1/8°	Upper Control Arm; cam bolt and bushing kit	2
Cam Bolt Kit	K8243A	±1-1/8°	Upper Control Arm	2
Control Arm Offset Bushing Kit	K7103		Upper	2

Voyager				
Front				
2000-1996				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2

1995-1984				
Cam Bolt Kit	K7151	±1-1/8°		2

Rear				
2000-1996				
Camber Shim	K7444 to K7447	1/4° to 1°	K7444 (1/4), K7445 (1/2), K7446 (3/4), K7447 (1)	2
Camber/Toe Shim	K7264 Series	1/4° to 1°	Full Contact Shims; K7264-1 (1/4), K7264-2 (1/2), K7264-3 (3/4), K7264-4 (1)	2
Toe Shim	K7438 to K7443	.10° to .80°	K7438 (.10 deg.), K7439 (.20 deg.), K7440 (.30 deg.), K7441 (.40 deg.), K7442 (.50 deg.), K7443 (.80 deg.)	2
1995-1991				
Camber Shim	K7444 to K7447	1/4° to 1°	AWD; Non-ABS; K7444 (1/4), K7445 (1/2), K7446 (3/4), K7447 (1)	2
Camber/Toe Shim	K90152	3/8° or 3/32"	FWD; half shim; 20 shims per package	2
Camber/Toe Shim	K90153	3/4° or 3/16"	FWD; half shim; 20 shims per package	2
Camber/Toe Shim	K982-1	1/4° or 1/16"	FWD; half shim; 20 shims per package	2
Camber/Toe Shim	K982-2	1/2° or 1/8"	FWD; half shim; 20 shims per package	2
Toe Shim	K7438 to K7443	.10° to .80°	AWD; Non-ABS; K7438 (.10 deg.), K7439 (.20 deg.), K7440 (.30 deg.), K7441 (.40 deg.), K7442 (.50 deg.), K7443 (.80 deg.)	2

1990-1990				
Camber/Toe Shim	K90152	3/8° or 3/32"	half shim; 20 shims per package	2
Camber/Toe Shim	K90153	3/4° or 3/16"	half shim; 20 shims per package	2
Camber/Toe Shim	K982-1	1/4° or 1/16"	half shim; 20 shims per package	2
Camber/Toe Shim	K982-2	1/2° or 1/8"	half shim; 20 shims per package	2

Pontiac

Part Label	Part No.	Align Range	Qualifier	Qty
6000				
Front				
1991-1982				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2

Pontiac

Part Label	Part No.	Align Range	Qualifier	Qty
6000				
Rear				
1991-1982				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Acadian				
Front				
1987-1976				
Ball Joint	K5292	±1°	Upper; adjustable	2
Aztek				
Front				
2005-2001				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2005-2001				
Camber/Toe - Universal Shim	K100143	±1-1/2°	FWD; universal full contact dual angle shim	2

Part Label	Part No.	Align Range	Qualifier	Qty
Bonneville				
Front				
2005-1987				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1986-1982				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
1981-1980				
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
1979-1978				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1977-1974				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1971				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
Rear				
2005-2000				
Camber Shim	K6661 Series	1/4° to 1°	K6661-1 (1/4), K6661-2 (1/2), K6661-3 (3/4), K6661-4 (1)	2
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
1999-1987				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90149	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90150	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K979-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2

Pontiac



Part Label	Part No.	Align Range	Qualifier	Qty
Catalina				
Front				
1981-1980				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2
1979-1974				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1971				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
1970-1969				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Fiero				
Front				
1987-1984				
Ball Joint	K5292	±1°	Upper; adjustable	2
Rear				
1988-1984				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2

Part Label	Part No.	Align Range	Qualifier	Qty
Firebird				
Front				
1981-1980				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
1979-1974				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1970				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
1969-1967				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
Firefly				
Front				
1999-1985				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
G5				
Front				
2010-2007				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2010-2007				
Camber/Toe Shim	K6717 Series	1/4° to 1°	Full Contact Shims; K6717-1 (1/4), K6717-2 (1/2), K6717-3 (3/4), K6717-4 (1)	2

Pontiac

Part Label	Part No.	Align Range	Qualifier	Qty
G6				
Front				
2010-2005				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2010-2010				
Camber/Toe Shim	K6717 Series	1/4° to 1°	Full Contact Shims; K6717-1 (1/4), K6717-2 (1/2), K6717-3 (3/4), K6717-4 (1)	2
2009-2005				
Cam Bolt Kit	K100155	±1 3/4°		2
Camber/Toe Shim	K6717 Series	1/4° to 1°	Full Contact Shims; K6717-1 (1/4), K6717-2 (1/2), K6717-3 (3/4), K6717-4 (1)	2
G8				
Front				
2009-2008				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2009-2008				
Camber/Toe Cam Bolt Kit	K100141	camber ±1°; toe ±2°		2
Grand Am				
Front				
2005-1996				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1995-1985				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1980-1978				
Caster/Camber Shim	K957 to K960	Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package		1
Caster/Camber Shim	K961 to K963	Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package		1
Caster/Camber Shim	K970 to K972	Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package		1
Control Arm Shaft Kit	K6218	Upper; provides additional positive camber adjustment		2
1975-1973				
Caster/Camber Shim	K957 to K960	Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package		1
Caster/Camber Shim	K961 to K963	Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package		1
Caster/Camber Shim	K970 to K972	Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package		1
Control Arm Shaft Kit	K6146	Upper; provides additional positive camber adjustment		2



Pontiac

Part Label	Part No.	Align Range	Qualifier	Qty
Grand Am				
Rear				
2005-1999				
Cam Bolt Kit	K6699	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
1998-1985				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Grand LeMans				
Front				
1982-1981				
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2

Pontiac

Part Label	Part No.	Align Range	Qualifier	Qty
Grand Prix				
Front				
2008-1997				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1996-1988				
Camber Shim	K6478 to K6481	1/4° to 1°	K6478 (1/4), K6479 (1/2), K6480 (3/4), K6481 (1)	2
1987-1978				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
1977-1974				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1973				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
1972-1969				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
1968-1965				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1

Pontiac

Part Label	Part No.	Align Range	Qualifier	Qty
Grand Prix				
Rear				
2008-1997				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1996-1995				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1994-1988				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K6375	±3/4°		2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Grandville				
Front				
1975-1974				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1971				
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
GTO				
Front				
2006-2004				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1973-1973				
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
1972-1972				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
1971-1964				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
J2000				
Front				
1983-1982				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2

Pontiac

Part Label	Part No.	Align Range	Qualifier	Qty
J2000				
Rear				
1983-1982				
Camber/Toe - Universal Shim	K917	$\pm 1-1/2^{\circ}$	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8" or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4" or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4" or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2" or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4" to 1-1/2"	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
J2000 Sunbird				
Front				
1985-1984				
Cam Bolt Kit	K100024	$\pm 1\ 3/4^{\circ}$	16mm bolts	2
Cam Bolt Kit	K90476	$\pm 1-3/4^{\circ}$	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	$\pm 1-3/4^{\circ}$	"Magna Cam"; 16mm bolts	2
Rear				
1985-1984				
Camber/Toe - Universal Shim	K917	$\pm 1-1/2^{\circ}$	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8" or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4" or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4" or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2" or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4" to 1-1/2"	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2

Part Label	Part No.	Align Range	Qualifier	Qty
LeMans				
Front				
1981-1978				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6218		Upper; provides additional positive camber adjustment	2
1977-1974				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1973-1973				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6148		Upper; provides additional positive camber adjustment	2
1972-1964				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
Montana				
Front				
2009-1999				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2009-1999				
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Parisiene				
Front				
1986-1983				
Control Arm Shaft Kit	K6210		Upper; provides additional positive camber adjustment	2

Pontiac

Part Label	Part No.	Align Range	Qualifier	Qty
Phoenix				
Front				
1984-1980				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1979-1977				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
Rear				
1984-1980				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Pursuit				
Front				
2006-2005				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2006-2005				
Camber/Toe Shim	K6717 Series	1/4° to 1°	Full Contact Shims; K6717-1 (1/4), K6717-2 (1/2), K6717-3 (3/4), K6717-4 (1)	2
Safari				
Front				
1989-1987				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Control Arm Shaft Kit	K6210		Wagon; Upper; provides additional positive camber adjustment	2
1976-1976				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
Sunbird				
Front				
1994-1986				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2

Pontiac

Part Label	Part No.	Align Range	Qualifier	Qty
Sunbird				
Rear				
1994-1986				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Sunburst				
Front				
1988-1985				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1988-1985				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Sunfire				
Front				
2005-1995				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2005-1995				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90147	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90148	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K978-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
T1000				
Front				
1987-1981				
Ball Joint	K5292	±1°	Upper; adjustable	2

Pontiac

Part Label	Part No.	Align Range	Qualifier	Qty
Tempest				
Front				
1991-1987				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
1970-1964				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Rear				
1991-1987				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
Torrent				
Front				
2009-2006				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2009-2006				
Caster/Camber Kit	K100015	toe ±1°		2
Trans Sport				
Front				
1999-1997				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
1996-1990				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
1999-1990				
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Ventura				
Front				
1977-1975				
Control Arm Shaft Kit	K6146		Upper; provides additional positive camber adjustment	2
1974-1971				
Control Arm Shaft Kit	K5250		Upper; provides additional positive camber adjustment	2
Vibe				
Front				
2010-2003				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2

Pontiac

Part Label	Part No.	Align Range	Qualifier	Qty
				Vibe
Rear				
2010-2003				
Camber/Toe - Universal Shim	K100143	$\pm 1\text{-}1/2^\circ$	universal full contact dual angle shim	2
2008-2003				
Camber/Toe Shim	K6660 Series	$\pm 1^\circ$	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4), K6660-4 (1)	2
				Wave
Front				
2008-2005				
Cam Bolt Kit	K6699	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 12mm bolts	2

Porsche

Part Label	Part No.	Align Range	Qualifier	Qty
				924
Front				
1988-1987				
Cam Bolt Kit	K90473	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	$\pm 2^\circ$	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1982-1977				
Cam Bolt Kit	K90473	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	$\pm 2^\circ$	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
				944
Front				
1991-1983				
Cam Bolt Kit	K90473	$\pm 1\text{-}3/4^\circ$	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	$\pm 1\text{-}3/4^\circ$	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	$\pm 2^\circ$	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Ram

Part Label	Part No.	Align Range	Qualifier	Qty
				1500
Front				
2014-2011				
Ball Joint	K100115	$\pm 3^\circ$	Upper; adjustable	2
				2500
Front				
2014-2013				
Ball Joint	K7448	camber $\pm 1^\circ$	Upper; adjustable	2
2012-2011				
Ball Joint	K7448	camber $\pm 1^\circ$	Upper; adjustable	2
Cam Bolt Kit	K100132	$\pm 1^\circ$ to $\pm 1\text{-}1/2^\circ$	adjustable; caster/pinion angle	2
				3500
Front				
2014-2014				
Ball Joint	K7448	camber $\pm 1^\circ$	Upper; adjustable	2
2013-2011				
Ball Joint	K7448	camber $\pm 1^\circ$	Upper; adjustable	2
Cam Bolt Kit	K100132	$\pm 1^\circ$ to $\pm 1\text{-}1/2^\circ$	adjustable; caster/pinion angle	2

Renault

Part Label	Part No.	Align Range	Qualifier	Qty
Alliance				
Front				
1987-1983				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Encore				
Front				
1986-1984				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2

Saab

Part Label	Part No.	Align Range	Qualifier	Qty
900				
Front				
1993-1980				
Caster/Camber Shim	K957 to K960		Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
9000				
Front				
1998-1986				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
1998-1986				
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

9-3

Rear				
2011-2003				
Cam Bolt Kit	K100155	±1 3/4°		2

Saturn

Part Label	Part No.	Align Range	Qualifier	Qty
Astra				
Front				
2009-2008				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Aura				
Rear				
2009-2007				
Cam Bolt Kit	K100155	±1 3/4°		2
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2

Part Label	Part No.	Align Range	Qualifier	Qty
Ion				
Front				
2007-2004				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
2003-2003				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Rear				
2007-2003				
Camber/Toe Shim	K6717 Series	1/4° to 1°	Full Contact Shims; K6717-1 (1/4), K6717-2 (1/2), K6717-3 (3/4), K6717-4 (1)	2
L Series				
Front				
2005-2001				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2005-2005				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
2004-2004				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
2003-2001				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
LS Series				
Front				
2000-2000				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2000-2000				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2
LW Series				
Front				
2003-2000				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2003-2000				
Camber/Toe - Universal Shim	K917	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K995 Series	1/4° to 1-1/2°	Full Contact Shims; K995-1 (1/4), K995-2 (1/2), K995-3 (3/4), K995-4 (1), K995-5 (1-1/4), K995-6 (1-1/2)	2

Saturn

Part Label	Part No.	Align Range	Qualifier	Qty
Outlook				
Front				
2010-2007				
Cam Bolt Kit	K100024	±1 3/4°	16mm bolts	2
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Rear				
2010-2007				
Cam Bolt Kit	K100142	±1-1/2°		2
Relay				
Front				
2007-2005				
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2007-2005				
Camber/Toe - Universal Shim	K918	±1-1/2°	FWD; universal full contact dual angle shim	2
SC Series				
Front				
2002-1991				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Camber Wedge Kit	K6622	+2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
Rear				
2002-1991				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Camber Wedge Kit	K6622	+2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
Toe Adjusting Kit	K6396	2°	Toe-Cam Plate Kit	1
SL Series				
Front				
2002-1991				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Camber Wedge Kit	K6622	+2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
Rear				
2002-1991				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Camber Wedge Kit	K6622	+2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
Toe Adjusting Kit	K6396	2°	Toe-Cam Plate Kit	1
SW Series				
Front				
2001-1993				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Camber Wedge Kit	K6622	+2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
Rear				
2001-1993				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Camber Wedge Kit	K6622	+2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
Toe Adjusting Kit	K6396	2°	Toe-Cam Plate Kit	1

Saturn

Part Label	Part No.	Align Range	Qualifier	Qty
Vue				
Front				
2009-2009				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
2008-2002				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2009-2005				
Caster/Camber Kit	K100015	toe ±1°		2
2004-2002				
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Caster/Camber Kit	K100015	toe ±1°		2

Scion

Part Label	Part No.	Align Range	Qualifier	Qty
FR-S				
Rear				
2014-2014				
Control Arm	K100124	toe ±3°	Lower Forward; adjustable; Incl. Ball Joint	2
2013-2013				
Control Arm	K100124	toe ±3°	Lower Forward; adjustable; Incl. Ball Joint	2
Lateral Arm	K100136	camber ±2°; toe ±1-1/2°	adjustable	2
iQ				
Rear				
2014-2012				
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4). K6660-4 (1)	2
tC				
Front				
2014-2005				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
Rear				
2014-2011				
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4). K6660-4 (1)	2
2010-2005				
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4). K6660-4 (1)	2
xA				
Front				
2006-2004				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2006-2004				
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4). K6660-4 (1)	2

Scion

Part Label	Part No.	Align Range	Qualifier	Qty
xB				
Front				
2014-2004				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2014-2004				
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4). K6660-4 (1)	2
xD				
Front				
2014-2008				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Rear				
2014-2008				
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4). K6660-4 (1)	2

Subaru

Part Label	Part No.	Align Range	Qualifier	Qty
Baja				
Front				
2006-2003				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
BRZ				
Front				
2013-2013				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Rear				
2014-2013				
Control Arm	K100124	toe ±3°	Lower Forward; adjustable; Incl. Ball Joint	2
Forester				
Front				
2008-1998				
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
Rear				
2014-2014				
Control Arm	K100093	camber ±3°	Lower Rearward; adjustable	1
Control Arm	K100124	toe ±3°	Lower Forward; adjustable; Incl. Ball Joint	2
2013-2009				
Control Arm	K100093	camber ±3°	Lower Rearward; adjustable	1
Control Arm	K100124	toe ±3°	Lower Forward; adjustable; Incl. Ball Joint	2
Lateral Arm	K100136	camber ±2°; toe ±1-1/2°	adjustable	2
2005-1998				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2

Part Label	Part No.	Align Range	Qualifier	Qty
Impreza				
Rear				
2014-2014				
Cam Bolt Kit	K5330	$\pm 1-3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1-3/4^\circ$	"Axis Cam"; 14mm bolts	2
Control Arm	K100124	toe $\pm 3^\circ$	Lower Forward; WRX Models; adjustable; Incl. Ball Joint	2
2013-2008				
Cam Bolt Kit	K5330	$\pm 1-3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1-3/4^\circ$	"Axis Cam"; 14mm bolts	2
Control Arm	K100093	camber $\pm 3^\circ$	Lower Rearward; WRX Models; adjustable	1
Control Arm	K100124	toe $\pm 3^\circ$	Lower Forward; WRX Models; adjustable; Incl. Ball Joint	2
Lateral Arm	K100136	camber $\pm 2^\circ$; toe $\pm 1-1/2^\circ$	WRX Models; adjustable	2
2007-1993				
Cam Bolt Kit	K5330	$\pm 1-3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1-3/4^\circ$	"Axis Cam"; 14mm bolts	2
Lateral Arm	K100136	camber $\pm 2^\circ$; toe $\pm 1-1/2^\circ$	WRX Models; adjustable	2
Legacy				
Front				
2008-1990				
Cam Bolt Kit	K90474	$\pm 1-3/4^\circ$	"Axis Cam"; 14mm bolts	2
Rear				
2014-2010				
Cam Bolt Kit	K5330	$\pm 1-3/4^\circ$	"Magna Cam"; 14mm bolts	2
Control Arm	K100124	toe $\pm 3^\circ$	Lower Forward; adjustable; Incl. Ball Joint	2
2009-2003				
Cam Bolt Kit	K5330	$\pm 1-3/4^\circ$	"Magna Cam"; 14mm bolts	2
2002-1990				
Cam Bolt Kit	K5330	$\pm 1-3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1-3/4^\circ$	"Axis Cam"; 14mm bolts	2
Camber Wedge Kit	K90073	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
Outback				
Rear				
2014-2010				
Cam Bolt Kit	K5330	$\pm 1-3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1-3/4^\circ$	"Axis Cam"; 14mm bolts	2
Control Arm	K100124	toe $\pm 3^\circ$	Lower Forward; adjustable; Incl. Ball Joint	2
2009-2000				
Cam Bolt Kit	K5330	$\pm 1-3/4^\circ$	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	$\pm 1-3/4^\circ$	"Axis Cam"; 14mm bolts	2
XV Crosstrek				
Rear				
2014-2014				
Control Arm	K100124	toe $\pm 3^\circ$	Lower Forward; adjustable; Incl. Ball Joint	2
2013-2013				
Control Arm	K100093	camber $\pm 3^\circ$	Lower Rearward; To 7/26/2012	2
Control Arm	K100124	toe $\pm 3^\circ$	Lower Forward; adjustable; Incl. Ball Joint	2
Lateral Arm	K100136	camber $\pm 2^\circ$; toe $\pm 1-1/2^\circ$	adjustable	2

Suzuki

Part Label	Part No.	Align Range	Qualifier	Qty
Aerio				
Front				
2007-2002				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2007-2002				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Esteem				
Front				
2002-1995				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2002-1995				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Forenza				
Front				
2006-2004				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2006-2004				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Grand Vitara				
Front				
2014-1999				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Reno				
Front				
2006-2005				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2006-2005				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Sidekick				
Front				
1998-1989				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Swift				
Front				
2001-1989				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2

Suzuki

Part Label	Part No.	Align Range	Qualifier	Qty
Swift				
Rear				
2001-1989				
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Swift+				
Front				
2009-2004				
Cam Bolt Kit	K6699	±1-3/4°	"Magna Cam"; 12mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Rear				
2009-2004				
Camber/Toe - Universal Shim	K916	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K994 Series	1/4° to 1-1/2°	Full Contact Shims; K994-1 (1/4), K994-2 (1/2), K994-3 (3/4), K994-4 (1), K994-5 (1-1/4), K994-6 (1-1/2)	2
SX4				
Front				
2014-2007				
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Verona				
Front				
2006-2004				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Vitara				
Front				
2004-1999				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
X-90				
Front				
1998-1996				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
XL-7				
Front				
2006-2002				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2009-2002				
Caster/Camber Kit	K100015	toe ±1°		2

Toyota

Part Label	Part No.	Align Range	Qualifier	Qty
4Runner				
Front				
2014-2010				
Caster/Camber Kit	K100129	±1-1/2°		2
2009-2003				
Caster/Camber Kit	K100128	±1-1/2°		2
2002-1996				
Caster/Camber Kit	K100127	±1-1/2°		2

Toyota

Part Label	Part No.	Align Range	Qualifier	Qty
Avalon				
Front				
2014-2012				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
2011-1995				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
Camber Wedge Kit	K90073	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
Rear				
2012-2012				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
2011-2009				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
2008-1995				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Camry				
Front				
2014-2009				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
2008-1992				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
Caster/Camber Shim	K90209	1/4°	1/4 deg. per shim; 12 shims per package	1
1991-1987				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
Camber Wedge Kit	K90073	2°	FWD; adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
Caster/Camber Shim	K90209	1/4°	1/4 deg. per shim; 12 shims per package	1
1986-1983				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Caster/Camber Shim	K90209	1/4°	1/4 deg. per shim; 12 shims per package	1

Part Label	Part No.	Align Range	Qualifier	Qty
Camry				
Rear				
2014-1988				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
1987-1987				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
1986-1983				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Celica				
Front				
2005-2000				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
1999-1994				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Camber Wedge Kit	K90073	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
1993-1992				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Camber Wedge Kit	K90073	2°	FWD; adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
1991-1990				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Camber Wedge Kit	K90073	2°	Exc. Supra; adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
1989-1987				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Camber Wedge Kit	K6622	+2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
1986-1986				
Cam Bolt Kit	K90208	±1-3/4°	Exc. Supra; "Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	Exc. Supra; "Axis Cam"; 15mm bolts	2
Camber Wedge Kit	K6622	+2°	Exc. Supra; adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
Rear				
1999-1990				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
1989-1987				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Camber Wedge Kit	K6622	+2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
1986-1986				
Cam Bolt Kit	K90208	±1-3/4°	Exc. Supra; "Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	Exc. Supra; "Axis Cam"; 15mm bolts	2
Camber Wedge Kit	K6622	+2°	Exc. Supra; adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1

Toyota

Part Label	Part No.	Align Range	Qualifier	Qty
Corolla				
Front				
2008-2003				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
2002-1988				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Camber Wedge Kit	K90073	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
1987-1984				
Cam Bolt Kit	K90473	±1-3/4°	FWD; "Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	FWD; "Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	FWD; adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
2014-2009				
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4). K6660-4 (1)	2
2008-2003				
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4). K6660-4 (1)	2
2002-1988				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
1987-1984				
Cam Bolt Kit	K90473	±1-3/4°	FWD; "Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	FWD; "Magna Cam"; 12mm bolts	2
Camber/Toe - Universal Shim	K918	±1-1/2°	FWD; universal full contact dual angle shim	2
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	FWD; Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2
Cressida				
Front				
1992-1985				
Caster/Camber Shim	K90209	1/4°	1/4 deg. per shim; 12 shims per package	1
Echo				
Front				
2005-2000				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Rear				
2005-2000				
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
FJ Cruiser				
Front				
2014-2010				
Caster/Camber Kit	K100129	±1-1/2°		2
2009-2007				
Caster/Camber Kit	K100128	±1-1/2°		2

Part Label	Part No.	Align Range	Qualifier	Qty
Highlander				
Front				
2011-2001				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Rear				
2014-2001				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
Matrix				
Front				
2013-2003				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
Rear				
2013-2003				
Camber/Toe - Universal Shim	K100143	±1-1/2°	FWD; universal full contact dual angle shim	2
Camber/Toe Shim	K6660 Series	±1°	FWD; K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4), K6660-4 (1)	2
MR2				
Front				
1995-1991				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Camber Wedge Kit	K90073	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
1989-1985				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
1995-1991				
Camber Wedge Kit	K90073	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
1989-1985				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
MR2 Spyder				
Front				
2005-2000				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Rear				
2005-2000				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Paseo				
Front				
1998-1992				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2

Toyota

Part Label	Part No.	Align Range	Qualifier	Qty
Pickup				
Front				
1994-1974				
Caster/Camber Shim	K957 to K960		RWD; Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		RWD; Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		RWD; Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Previa				
Front				
1997-1991				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
Camber Wedge Kit	K90073	2°	adjustable; Incl. 2 wedges, 2 bolts, 2 nuts and washers	1
Prius				
Front				
2014-2010				
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
2009-2001				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Rear				
2014-2001				
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4), K6660-4 (1)	2
Prius C				
Front				
2014-2012				
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
Rear				
2014-2012				
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4), K6660-4 (1)	2
Prius V				
Front				
2014-2012				
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
Rear				
2014-2012				
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4), K6660-4 (1)	2
RAV4				
Front				
2014-1996				
Cam Bolt Kit	K90476	±1-3/4°	"Axis Cam"; 16mm bolts	2
Cam Bolt Kit	K928	±1-3/4°	"Magna Cam"; 16mm bolts	2
Sienna				
Front				
2014-1998				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2

Part Label	Part No.	Align Range	Qualifier	Qty
Sienna				
Rear				
2014-1998				
Camber/Toe Shim	K7264 Series	1/4° to 1°	Full Contact Shims; K7264-1 (1/4), K7264-2 (1/2), K7264-3 (3/4), K7264-4 (1)	2
Solara				
Front				
2008-1999				
Cam Bolt Kit	K90477	±1-3/4°	"Axis Cam"; 17mm bolts	2
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
Caster/Camber Shim	K90209	1/4°	1/4 deg. per shim; 12 shims per package	1
Rear				
2008-1999				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
T100				
Front				
1998-1993				
Caster/Camber Shim	K957 to K960		RWD; Universal Shims; For 5/8" bolt size; 1-3/16" Length x 1-1/2" width; Available in different thicknesses K957 (1/64"), K958 (1/32"), K959 (1/16"), K960 (1/8"); 24 shims per package	1
Caster/Camber Shim	K961 to K963		RWD; Universal Shims; For 9/16" bolt size; 1-1/8" Length x 1-7/8" width; Available in different thicknesses K961 (1/32"), K962 (1/16"), K963 (1/8"); 24 shims per package	1
Caster/Camber Shim	K970 to K972		RWD; Universal Shim; For 9/16" bolt size; 1-1/2" Length x 2-7/16" width; Available in different thicknesses K970 (1/32"), K971 (1/16"), K972 (1/8"); 24 shims per package	1
Tacoma				
Front				
2014-2005				
Caster/Camber Kit	K100128	±1-1/2°	4WD; Front Position	2
2004-1995				
Caster/Camber Kit	K100127	±1-1/2°		2
Tercel				
Front				
1999-1989				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
1988-1987				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Caster/Camber Shim	K90209	1/4°	1/4 deg. per shim; 12 shims per package	1
1986-1986				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Caster/Camber Shim	K90209	1/4°	1/4 deg. per shim; 12 shims per package	1
1985-1983				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
1986-1983				
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Camber/Toe - Universal Shim	K918	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K996 Series	1/4° to 1-1/2°	Full Contact Shims; K996-1 (1/4), K996-2 (1/2), K996-3 (3/4), K996-4 (1), K996-5 (1-1/4), K996-6 (1-1/2)	2

Toyota

Part Label	Part No.	Align Range	Qualifier	Qty
Venza				
Front				
2014-2009				
Cam Bolt Kit	K929	±1-3/4°	"Magna Cam"; 17mm bolts	2
Yaris				
Front				
2014-2007				
Cam Bolt Kit	K90208	±1-3/4°	"Magna Cam"; 15mm bolts	2
Cam Bolt Kit	K90475	±1-3/4°	"Axis Cam"; 15mm bolts	2
Rear				
2014-2007				
Camber/Toe - Universal Shim	K100143	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K6660 Series	±1°	K6660-1 (1/4), K6660-2 (1/2), K6660-3 (3/4), K6660-4 (1)	2

Volkswagen

Part Label	Part No.	Align Range	Qualifier	Qty
Beetle				
Front				
2010-1998				
Strut Mount	K90488	±1°		2
Rear				
2008-1998				
Camber Shim	K90483 to K90486	±1°	K90483 (+1/2), K90484 (+1), K90485 (-1/2), K90486 (-1)	2
Camber/Toe Shim Kit Assort.	K90478		Assortment incl. T40258 shim wrench and 2 of each toe shim K90479, K90480, K90481, K90482, 2 of each camber shim K90483, K90484, K90485, K90486	1
Spacer Multi-Pack	K90487		spacer set contains 4 sizes (2 of each) .12", .15", .18", .21" , used to align caliper to rotor after installation of a camber shim	1
Toe Shim	K90479 to K90482	1/8° to 1/2°	K90479 (1/8), K90480 (1/4), K90481 (3/8), K90482 (1/2)	2
Cabrio				
Front				
2002-1995				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2002-1995				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2

Cabriolet				
Front				
1993-1985				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Part Label	Part No.	Align Range	Qualifier	Qty
Cabriolet				
Rear				
1993-1985				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Corrado				
Front				
1995-1990				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1995-1990				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Dasher				
Rear				
1981-1974				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Fox				
Front				
1993-1987				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1993-1987				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2

Volkswagen

Part Label	Part No.	Align Range	Qualifier	Qty
Golf				
Front				
2011-2011				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
2010-2010				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
2006-1999				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Strut Mount	K90488	±1°	A4 Body	2
1998-1985				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
2006-2000				
Camber Shim	K90483 to K90486	±1°	K90483 (+1/2), K90484 (+1), K90485 (-1/2), K90486 (-1)	2
Camber/Toe Shim Kit Assort.	K90478		Assortment incl. T40258 shim wrench and 2 of each toe shim K90479, K90480, K90481, K90482, 2 of each camber shim K90483, K90484, K90485, K90486	1
Spacer Multi-Pack	K90487		spacer set contains 4 sizes (2 of each) .12", .15", .18", .21", used to align caliper to rotor after installation of a camber shim	1
Toe Shim	K90479 to K90482	1/8° to 1/2°	K90479 (1/8), K90480 (1/4), K90481 (3/8), K90482 (1/2)	2
1999-1999				
Camber Shim	K90483 to K90486	±1°	A3 Body; K90483 (+1/2), K90484 (+1), K90485 (-1/2), K90486 (-1)	2
Camber/Toe - Universal Shim	K915	±1-1/2°	A3 Body; universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	A3 Body; half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	A3 Body; half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	A3 Body; half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	A3 Body; half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	A3 Body; Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Camber/Toe Shim Kit Assort.	K90478		A3 Body; Assortment incl. T40258 shim wrench and 2 of each toe shim K90479, K90480, K90481, K90482, 2 of each camber shim K90483, K90484, K90485, K90486	1
Spacer Multi-Pack	K90487		A3 Body; spacer set contains 4 sizes (2 of each) .12", .15", .18", .21", used to align caliper to rotor after installation of a camber shim	1
Toe Shim	K90479 to K90482	1/8° to 1/2°	A3 Body; K90479 (1/8), K90480 (1/4), K90481 (3/8), K90482 (1/2)	2
1998-1985				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2

Part Label	Part No.	Align Range	Qualifier	Qty
Golf City				
Front				
2010-2007				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Strut Mount	K90488	±1°		2
Rear				
2010-2007				
Camber Shim	K90483 to K90486	±1°	K90483 (+1/2), K90484 (+1), K90485 (-1/2), K90486 (-1)	2
Camber/Toe Shim Kit Assort.	K90478		Assortment incl. T40258 shim wrench and 2 of each toe shim K90479, K90480, K90481, K90482, 2 of each camber shim K90483, K90484, K90485, K90486	1
Spacer Multi-Pack	K90487		spacer set contains 4 sizes (2 of each) .12", .15", .18", .21", used to align caliper to rotor after installation of a camber shim	1
Toe Shim	K90479 to K90482	1/8° to 1/2°	K90479 (1/8), K90480 (1/4), K90481 (3/8), K90482 (1/2)	2
GTI				
Front				
2010-2010				
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
2009-2006				
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Strut Mount	K90488	±1°		2
Rear				
2009-2006				
Camber Shim	K90483 to K90486	±1°	K90483 (+1/2), K90484 (+1), K90485 (-1/2), K90486 (-1)	2
Camber/Toe Shim Kit Assort.	K90478		Assortment incl. T40258 shim wrench and 2 of each toe shim K90479, K90480, K90481, K90482, 2 of each camber shim K90483, K90484, K90485, K90486	1
Spacer Multi-Pack	K90487		spacer set contains 4 sizes (2 of each) .12", .15", .18", .21", used to align caliper to rotor after installation of a camber shim	1
Toe Shim	K90479 to K90482	1/8° to 1/2°	K90479 (1/8), K90480 (1/4), K90481 (3/8), K90482 (1/2)	2
Jetta				
Front				
2006-2006				
Strut Mount	K90488	±1°		2
2005-2000				
Strut Mount	K90488	±1°	A4 Body	2
1999-1999				
Cam Bolt Kit	K90473	±1-3/4°	A3 Body; "Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	A3 Body; "Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	A3 Body; adjustable; adjustment range -2 to 2 deg. of camber; Incl. 2 wedges, 2 bolts and nuts	1
Strut Mount	K90488	±1°	A4 Body	2
1998-1980				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Volkswagen

Part Label	Part No.	Align Range	Qualifier	Qty
Jetta				
Rear				
2006-2000				
Camber Shim	K90483 to K90486	±1°	K90483 (+1/2), K90484 (+1), K90485 (-1/2), K90486 (-1)	2
Camber/Toe Shim Kit Assort.	K90478		Assortment incl. T40258 shim wrench and 2 of each toe shim K90479, K90480, K90481, K90482, 2 of each camber shim K90483, K90484, K90485, K90486	1
Spacer Multi-Pack	K90487		spacer set contains 4 sizes (2 of each) .12", .15", .18", .21", used to align caliper to rotor after installation of a camber shim	1
Toe Shim	K90479 to K90482	1/8° to 1/2°	K90479 (1/8), K90480 (1/4), K90481 (3/8), K90482 (1/2)	2
1999-1999				
Camber Shim	K90483 to K90486	±1°	A4 Body; K90483 (+1/2), K90484 (+1), K90485 (-1/2), K90486 (-1)	2
Camber/Toe - Universal Shim	K915	±1-1/2°	A3 Body; universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	A3 Body; half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	A3 Body; half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	A3 Body; half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	A3 Body; half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	A3 Body; Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Camber/Toe Shim Kit Assort.	K90478		A4 Body; Assortment incl. T40258 shim wrench and 2 of each toe shim K90479, K90480, K90481, K90482, 2 of each camber shim K90483, K90484, K90485, K90486	1
Spacer Multi-Pack	K90487		A4 Body; spacer set contains 4 sizes (2 of each) .12", .15", .18", .21", used to align caliper to rotor after installation of a camber shim	1
Toe Shim	K90479 to K90482	1/8° to 1/2°	A4 Body; K90479 (1/8), K90480 (1/4), K90481 (3/8), K90482 (1/2)	2
1998-1980				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Passat				
Front				
2010-2006				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
2005-1998				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Control Arm	K100092	camber ±1-1/2°; caster ±1-1/2°	FWD; Upper; adjustable; set of two adjustable arms; replace factory fixed-length arms; Incl. Ball Joint	2
1997-1990				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Part Label	Part No.	Align Range	Qualifier	Qty
Passat				
Rear				
1999-1990				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Passat CC				
Front				
2010-2009				
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Quantum				
Front				
1988-1982				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1988-1982				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
R32				
Front				
2008-2008				
Strut Mount	K90488	±1°		2
Rear				
2008-2008				
Camber Shim	K90483 to K90486	±1°	K90483 (+1/2), K90484 (+1), K90485 (-1/2), K90486 (-1)	2
Camber/Toe Shim Kit Assort.	K90478		Assortment incl. T40258 shim wrench and 2 of each toe shim K90479, K90480, K90481, K90482, 2 of each camber shim K90483, K90484, K90485, K90486	1
Spacer Multi-Pack	K90487		spacer set contains 4 sizes (2 of each) .12", .15", .18", .21", used to align caliper to rotor after installation of a camber shim	1
Toe Shim	K90479 to K90482	1/8° to 1/2°	K90479 (1/8), K90480 (1/4), K90481 (3/8), K90482 (1/2)	2
Rabbit				
Front				
2009-2006				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1984-1975				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1

Volkswagen

Part Label	Part No.	Align Range	Qualifier	Qty
Rabbit				
Rear				
2009-2006				
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
1984-1975				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Rabbit Convertible				
Front				
1984-1980				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Rear				
1984-1980				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2
Rabbit Pickup				
Front				
1983-1980				
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
Routan				
Front				
2012-2009				
Cam Bolt Kit	K7256	±1-3/4°	"Magna Cam"; 14mm bolts	2
Scirocco				
Front				
1989-1989				
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1988-1983				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Camber Wedge Kit	K100083	±2°	adjustable; Incl. 2 wedges, 2 bolts and nuts	1
1982-1975				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2

Part Label	Part No.	Align Range	Qualifier	Qty
Scirocco				
Rear				
1988-1975				
Camber/Toe - Universal Shim	K915	±1-1/2°	universal full contact dual angle shim	2
Camber/Toe Shim	K90145	3/8° or 3/32"	half shim; 20 shims per package	1
Camber/Toe Shim	K90146	3/4° or 3/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-1	1/4° or 1/16"	half shim; 20 shims per package	1
Camber/Toe Shim	K977-2	1/2° or 1/8"	half shim; 20 shims per package	1
Camber/Toe Shim	K993 Series	1/4° to 1-1/2°	Full Contact Shims; K993-1 (1/4), K993-2 (1/2), K993-3 (3/4), K993-4 (1), K993-5 (1-1/4), K993-6 (1-1/2)	2




Volvo

Part Label	Part No.	Align Range	Qualifier	Qty
850				
Front				
1997-1993				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
C30				
Rear				
2013-2007				
Control Arm	K100002	camber -1-1/2° to +5°	Upper; adjustable	2
C70				
Front				
2008-1998				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2013-2006				
Control Arm	K100002	camber -1-1/2° to +5°	Upper; adjustable	2
S40				
Front				
2008-2000				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
Rear				
2011-2004				
Control Arm	K100002	camber -1-1/2° to +5°	Upper; adjustable	2
S60				
Front				
2006-2001				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2
S70				
Front				
2000-1998				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
S80				
Front				
2010-1999				
Cam Bolt Kit	K5330	±1-3/4°	"Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	"Axis Cam"; 14mm bolts	2




Volvo

Part Label	Part No.	Align Range	Qualifier	Qty
S90				
Front				
1998-1998				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
V40				
Front				
2004-2000				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
V50				
Rear				
2011-2005				
Control Arm	K100002	camber -1-1/2° to +5°	Upper; adjustable	2
V70				
Front				
2010-1998				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
V90				
Front				
1998-1998				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
XC70				
Front				
2008-2003				
Cam Bolt Kit	K90473	±1-3/4°	"Axis Cam"; 12mm bolts	2
Cam Bolt Kit	K9757	±1-3/4°	"Magna Cam"; 12mm bolts	2
XC90				
Front				
2006-2003				
Cam Bolt Kit	K5330	±1-3/4°	AWD; "Magna Cam"; 14mm bolts	2
Cam Bolt Kit	K90474	±1-3/4°	AWD; "Axis Cam"; 14mm bolts	2





Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
ALIGN1 NEW				Alignment Assortment Incl. Alignment Center Display Board, hooks, reorder cards. Contains 1 of each K8740, K7448, K90474, K80065, K80109, K8674, K5330, K9757, K90492, K90473	
CK80826 NEW	1°	1.2	2	Adjustable Control Arm Incl. offset bushings offering 2 degrees of camber change Cadillac Escalade 06-02; Escalade ESV 06-03; Escalade EXT 06-02; Chevrolet Avalanche 1500 06-02; Express 1500 13-03; Express 2500 05-03; Silverado 1500 07-99; Suburban 1500 06-00; Tahoe 06-00; GMC Savana 1500 13-03; Savana 2500 05-03; Sierra 1500 07-99; Sierra C3 01; Yukon 06-00; Yukon XL 1500 06-00	
CK620053 NEW	1°	1.3	2	Adjustable Control Arm Incl. offset bushings offering 2 degrees of camber change Chevrolet Avalanche 2500 06-02; Silverado 1500 HD 07-01; Silverado 2500 04-99; Silverado 2500 HD 10-01; Silverado 3500 07-01; Silverado 3500 HD 10-07; Suburban 2500 12-00; GMC Sierra 1500 HD 07-01; Sierra 2500 04-99; Sierra 2500 HD 10-01; Sierra 3500 07-01; Sierra 3500 HD 10-07; Yukon XL 2500 12-00; Hummer H2 09-03	

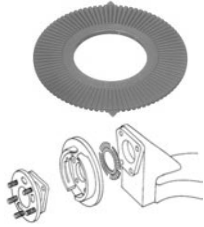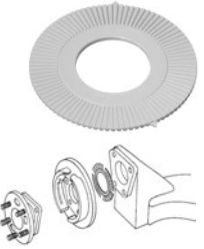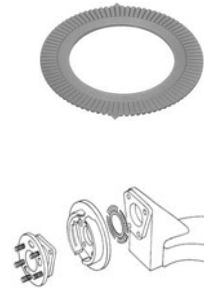
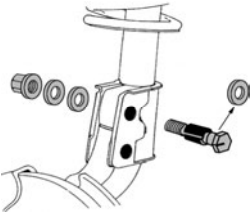

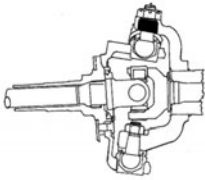
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K915	$\pm 1\ 1/2^\circ$	0.6	2	Universal Full Contact, Dual Angle Shim (Blue) Alternative to angle specific shims K993-1 to K993-6 Audi coupe GT, Fox, 80/90, 4000 95-73. Chrysler (FWD) E Class, Fifth Ave. Imperial, Laser, LeBaron, New Yorker, TC 95-83. PT Cruiser 10-01. Dodge 400, 600, Aries, Charger. Daytona, Dynasty, Lancer, Monaco, Omni Rampage, 024, Shadow, Spirit, 95-78. Eagle Medallion, Premier 92-88. Ford Aspire, Festiva 1988-97. Geo Spectrum 89-85. Plymouth Acclaim, Caravelle, Horizon, Turismo & TC-3, Reliant. Scamp, Sundance 95-78. VW FWD 99-78. Packaged one kit per box.	
K916	$\pm 1\ 1/2^\circ$	0.6	2	Universal Full Contact, Dual Angle Shim (White) Alternative to angle specific shims K994-1 to K994-6 Mercury Villager 01-93. Nissan Quest 02-93. Audi 100/200, 5000, 94-78. Chrysler Town and Country Van, Dodge Caravan, Plymouth Voyager 95-84 Ford Windstar 03-95. Honda Prelude 82-79. Mercury Villager 01-93. Nissan Quest 02-93. Ford Windstar 03-95. Chevrolet Aveo 11-04.	
K917	$\pm 1\ 1/2^\circ$	0.6	2	Universal Full Contact, Dual Angle Shim (Grey) Alternative to angle specific shims K995-1 to K995-6 Toyota Tercel Sedan 83-99. Cadillac SRX 14-10. Acura Integra 89-86. Buick Skyhawk, Skylark, Somerset 98-80. Cadillac Cimarron 88-82. Chevrolet Beretta, Corsica, Cavalier, Citation, 05-80. Honda Civic, CRX 87-80. Oldsmobile Achieva, Calais, Cutlass Ciera. Firenza, Omega, Silhouette 04-80. Pontiac Grand Am, J2000, Sunbird, Sunfire, Phoenix, 05-80. Saturn L Series 06-02. Packaged one kit per box.	








Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K918	$\pm 1 \frac{1}{2}^{\circ}$	0.6	2	Universal Full Contact, Dual Angle Shim (Burgundy) Alternative to angle specific shims K996-1 to K996-6 Kia Forte 14-10. Nissan Juke 14-11. Chevrolet Uplander 09-05. Buick Century, Electra, LeSabre, Park Ave., Rendezvous, Riviera, Terazza 07-79. Cadillac Eldorado, Seville 85-79. Chevrolet Lumina Van, Nova, Venture. Celebrity 05-85. Kia Rio 11-01. Oldsmobile. 98 Regency, Cutlass Ciera, Delta. 88, Silhouette Van, Toronado 99-79. Pontiac 6000, Bonneville, Trans Sport, Aztec, Montana 06-02. Saturn Relay 08-05. Toyota Avalon 12-95, Camry, Celica, Corolla, FX 06-84. Packaged one kit per box.	 
K928	$\pm 1 \frac{3}{4}^{\circ}$	0.3	2	Double Offset Camber Adjusting Kit - Magna Cam 16mm 10.9 High-Strength Bolts Buick, Cadillac, Chevrolet, Chrysler, Dodge, Oldsmobile, Pontiac, Eagle Medallion, Premier, Vision, 1988-04. Honda Odyssey 1999-14. Lexus ES-250 1990-91. Land Rover 2003-04. Saturn Outlook 2007-08. Toyota RAV 4 1996-06, Avalon 1995-08. QUICK & EASY Camber adjustments on front & rear susp. NO GUESSING - Accurately adjust camber with weight of vehicle on it's wheels - simply turn the cam bolt and adjust to live readings. Adjustable for FUTURE ALIGNMENTS Alternative to Cam Bolt K90476 Kit includes: 16mm Cam Bolt, Sleeve, Slotted Spacers, Nut and Washers. Packaged one kit per box.	 






Numerical List, Flat Rate Time Guide, Description and Product Illustrations

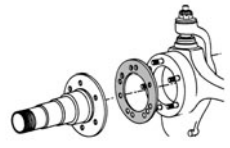Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K929	$\pm 1 \frac{3}{4}^{\circ}$	0.3	2	Double Offset Camber Adjusting Kit - Magna Cam 17mm 10.9 High Strength Bolts Toyota Venza, Prius 14-09. Lexus ES350, RX350 07-14. Lexus ES300, ES330, RX300, RX330 06-99. Pontiac Vibe 2003-10. Scion TC 2005-14. Toyota Avalon, Camry, Previa, Sienna, Highlander 14-87. Sienna, Highlander, Corolla, Matrix 14-87. QUICK & EASY Camber adjustments on front & rear susp. NO GUESSING - Accurately adjust camber with weight of vehicle on it's wheels - simply turn the cam bolt and adjust to live readings. Adjustable for FUTURE ALIGNMENTS Alternative to Cam Bolt K90477 Kit includes: 17mm Cam Bolt, Sleeve, Nut and Washers. Packaged one kit per box.	 
K931	1/4°	0.8	2	Camber/Caster Bushing Chevrolet K10, K20, V10, V20 Blazer, Ramcharger 93-71. Suburban 91-71. Dodge: W100/150, W200/250, W300/350 93-72. Ford 4WD: Bronco, F150, F250 79-66. GMC 4WD: K1500, K2500, V1500, V2500, Jimmy Jeep 4WD, full size 91-62. Unique, 2-piece full contact design will adjust camber/caster angles to exact specifications while maintaining proper ball joint preload Provides LIVE ADJUSTMENT for easier and more accurate alignment. Packaged one per box.	 
K932	1/2°	0.8	2		
K933	3/4°	0.8	2		
K934	1°	0.8	2		
K935	1 1/4°	0.8	2		
K936	1 1/2°	0.8	2		






Numerical List, Flat Rate Time Guide, Description and Product Illustrations

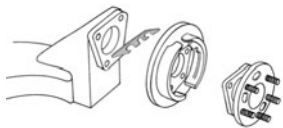Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K957	1/64"	0.3	A/R	Caster/Camber Shim	
K958	1/32"	0.3	A/R	For 5/8" bolt size	
K959	1/16"	0.3	A/R	1 3/16" x 1 1/2"	
K960	1/8"	0.3	A/R		
K961	1/32"	0.3	A/R	Caster/Camber Shim	
K962	1/16"	0.3	A/R	For 9/16" bolt size	
K963	1/8"	0.3	A/R	Small 1 1/8" x 1 7/8"	
K964	1/32"	0.3	A/R	Caster/Camber Shim	
K965	1/16"	0.3	A/R	For 7/16" bolt size	
K966	1/8"	0.3	A/R	15/16" x 1 3/8"	
K970	1/32"	0.3	A/R	Caster/Camber Shim	
K971	1/16"	0.3	A/R	For 9/16" bolt size	
K972	1/8"	0.3	A/R	Large 1 1/2" x 2 7/16"	
SHIM2B				Assortment - 24 of each shim and plastic organizer. Each part number contains 24 shims. Buick Apollo 74-73. Century 76-74. Estate Wagon 83-80. Lesabre 93-71. Roadmaster 96-91. Skylark 79-64. Cadillac Brougham 92-87. Chevrolet Astro 05-85. C10, C20 86-75. C20 Pickup 74-65. C30 76-75. C30 Pickup 74-65.	
K974-3	3/8°	1.0	2	Camber Shims	 
K974-4	1/2°	1.0	2	Chevrolet K10, K20, V10, V20 Blazer,	
K974-5	5/8°	1.0	2	Suburban 91-70. Dodge: W100/150,	
K974-6	3/4°	1.0	2	W200/250, W300/350 93-72. Ford 4WD;	
K974-7	7/8°	1.0	2	Bronco, F150, F250 79-66. GMC 4WD;	
K974-8	1°	1.0	2	K1500, K2500, V1500, V2500, Jimmy.	
K974-9	1 1/8°	1.0	2	Suburban 91-70. Jeep 4WD, full size 91-62.	
K974-10	1 1/4°	1.0	2		
K974-11	1 3/8°	1.0	2	Camber only alternative to K931 series	
K974-12	1 1/2°	1.0	2	Packaged one per box.	


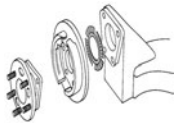
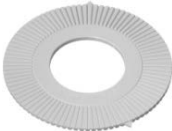






Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration																		
Close Tolerance Steel Half Shims for Front Wheel Drive Cars - Available in four thicknesses of .010, .015, .020 and .030 - The most economical rear wheel system. - Accurately changes camber or toe settings. - Manufactured from close tolerance steel. - Easily installed. - Stackable.				SHIM SPECIFICATIONS: <table><tr><th>THICKNESS</th><th>* CAMBER CHANGE</th><th>*TOE CHANGE</th></tr><tr><th>Inches</th><th>Degrees</th><th>Inches</th></tr><tr><td>.010</td><td>1/4</td><td>1/16</td></tr><tr><td>.015</td><td>3/8</td><td>3/32</td></tr><tr><td>.020</td><td>1/2</td><td>1/8</td></tr><tr><td>.030</td><td>3/4</td><td>3/16</td></tr></table> *Maximum allowable change - Camber 2°/Toe 1/2"	THICKNESS	* CAMBER CHANGE	*TOE CHANGE	Inches	Degrees	Inches	.010	1/4	1/16	.015	3/8	3/32	.020	1/2	1/8	.030	3/4	3/16	
THICKNESS	* CAMBER CHANGE	*TOE CHANGE																					
Inches	Degrees	Inches																					
.010	1/4	1/16																					
.015	3/8	3/32																					
.020	1/2	1/8																					
.030	3/4	3/16																					
K977-1	Camber 1/4° or 1/16"	Toe 0.5	A/R	Rear Wheel Half Shims Audi GT, Fox, 80/90, 4000 95-73 Chev Spectrum 89-85. Chrysler (FWD) E Class, Fifth Ave, Imperial, Laser, LeBaron, New Yorker 95-83. Dodge 400, 600, Aries, Charger Daytona, Dynasty, Lancer, Monaco, Omni, Rampage, 024, Shadow, Spirit, 95-78. Plymouth Acclaim, Caravelle, Horizon, Turismo, TC3, Reliant, Scamp, Sundance 95-78. VW all FWD 00-78. Each part number contains 20 shims.																			
K978-1	Camber 1/4° or 1/16"	Toe 0.6	A/R	Rear Wheel Half Shims Buick Skyhawk, Skylark, Somerset 98-80. Cadillac Cimarron 88-82. Chevrolet Beretta, Corsica, Cavalier, Citation, 05-80. Oldsmobile Calais, Firenza, Omega 98-80. Pontiac Grand AM, J2000, Sunfire, Phoenix 05-88. Each part number contains 20 shims.																			
K979-1	Camber 1/4° or 1/16"	Toe 0.6	A/R	Rear Wheel Half Shims Buick Century, Electra, LeSabre, Park Ave, Rendezvous, Riviera, Terazza 07-79. Cadillac Eldorado, Seville 85-78. Chev Celebrity, Lumina van 96-82. Olds Cutlass Ciera, Delta 88/98, Toronado 99-79. Pontiac 6000, Bonneville 99-82. Each part number contains 20 shims.																			
K980-3				See K980 series following K982 series																			
K982-1	Camber 1/4° or 1/16"	Toe 0.5	A/R	Rear Wheel Half Shim Chrysler Town and Country Van, Dodge Caravan, Plymouth Voyager 95-84. Each part number contains 20 shims.																			







Numerical List, Flat Rate Time Guide, Description and Product Illustrations

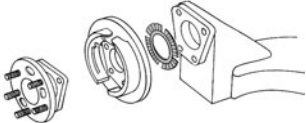Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K980-3	1/4°	1.1	2	Camber Shims	 
K980-4	1/2°	1.1	2	Chev K30, V30, GMC K3500, V3500, 91-58.	
K980-5	5/8°	1.1	2	Dodge W200/250, W300/350, W450 93-61.	
K980-6	3/4°	1.1	2	Ford F350 91-75. 4WD heavy duty,	
K980-7	7/8°	1.1	2	With Dana 60 axle.	
K980-8	1°	1.1	2	Alternative to Eccentric Camber Adjusting	
K980-9	1 1/8°	1.1	2	King Pin, Part No. K992 .	
K980-10	1 1/4°	1.1	2		
K980-12	1 1/2°	1.1	2		
				Packaged one per box.	
K982-1				See K982 Series - prior to K980 series	
K992	±1 1/2°	1.0	2	Eccentric Camber Adjusting King Pin. 4WD Trucks W/Dana 60 Axle. Chev/GMC Truck K30, V3500, 91-77. Dodge Truck W200/250, W300/350, W450 93-57. Ford F350 91-75. Provides all Camber angles from -1 1/2° to +1 1/2°. Easily re-adjustable for the life of the vehicle. Replaces Lower 0° OE King Pin. Use with lower king pin repair kit, K8832 or K8833 and upper king pin repair kit K6652 Alternative to Camber Shims K980-3 Series. Packaged one per box.	
K993-1	1/4°	0.6	2	Blue Series - Full Contact, Dual Angle Shims	  
K993-2	1/2°	0.6	2	Audi coupe GT, Fox, 80/90, 4000 95-73.	
K993-3	3/4°	0.6	2	Chrysler (FWD) E Class, Fifth Ave.	
K993-4	1°	0.6	2	Imperial, Laser, LeBaron, New Yorker, TC 95-83.	
K993-5	1 1/4°	0.6	2	PT Cruiser 2001-07. Dodge 400, 600, Aries, Charger.	
K993-6	1 1/2°	0.6	2	Daytona, Dynasty, Lancer, Monaco, Omni	
				Rampage, 024, Shadow, Spirit, 95-78.	
				Eagle Medallion, Premier 92-88.	
				Ford Aspire, Festiva 97-88. Geo Spectrum 89-85.	
				Plymouth Acclaim, Caravelle, Horizon,	
				Turismo & TC-3, Reliant. Scamp, Sundance 95-78.	
				VW FWD 99-78.	
K915	±1 1/2°	0.6	2	Universal Shim (Blue) Alternative to K993-1 to K993-6 . Packaged one per box.	

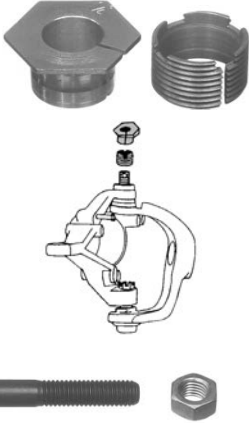


Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K994-1	1/4°	0.6	2	White Series - Full Contact, Dual Angle Shims Chevrolet Aveo, Aveo5 11-04. Honda Prelude 82-79. Suzuki Swift + 09-04. Audi 100/200, 5000, 94-78.	
K994-2	1/2°	0.6	2	Chrysler Town and Country Van, Dodge	
K994-3	3/4°	0.6	2	Caravan, Plymouth Voyager 95-84	
K994-4	1°	0.6	2	Windstar, Villager 03-93. Nissan Quest 02-93	
K994-5	1 1/4°	0.6	2		
K994-6	1 1/2°	0.6	2		
K916	±1 1/2°	0.6	2	Universal Shim (White) Alternative to K994-1 to K994-6 Packaged one per box.	
K995-1	1/4°	0.6	2	Grey Series - Full Contact Dual Angle Shims Acura Integra 89-86	
K995-2	1/2°	0.6	2	Buick Skyhawk, Skylark, Somerset 98-80	
K995-3	3/4°	0.6	2	Cadillac Cimarron 88-82.	
K995-4	1°	0.6	2	Beretta, Corsica, Cavalier, Citation, 05-80.	
K995-5	1 1/4°	0.6	2	Honda Civic, CRX 87-80	
K995-6	1 1/2°	0.6	2	Oldsmobile Achieva, Calais, Cutlass Ciera Firenza, Omega, Silhouette 04-80. Pontiac Grand Am, J2000, Sunbird, Sunfire, Phoenix, Tempest, 05-80. Saturn L Series 06-00.	
K917	±1 1/2°	0.6	2	Universal Shim (Grey) Alternative to K995-1 to K995-6 Packaged one per box.	
K996-1	1/4°	0.6	2	Burgundy Series - Full Contact, Dual Angle Shims Buick Century, Electra, LeSabre, Park Ave., Rendezvous, Riviera, Terazza 07-79. Cadillac Eldorado, Seville 85-79	
K996-2	1/2°	0.6	2	Chevrolet Lumina Van, Nova, Venture	
K996-3	3/4°	0.6	2	Celebrity 05-85. Kia Rio 11-01. Oldsmobile	
K996-4	1°	0.6	2	98 Regency, Cutlass Ciera, Delta	
K996-5	1 1/4°	0.6	2	88, Silhouette Van, Toronado 99-79.	
K996-6	1 1/2°	0.6	2	Pontiac 6000, Bonneville, Trans Sport, Aztec, Montana 06-82. Saturn Relay 08-05 Toyota Avalon 08-95, Camry, Celica, Corolla, FX 06-84. Chevrolet Uplander 09-05. Kia Forte 14-10	
K918	±1 1/2°	0.6	2	Universal Shim (Burgundy) Alternative to K996-1 to K996-6 . Packaged one per box.	

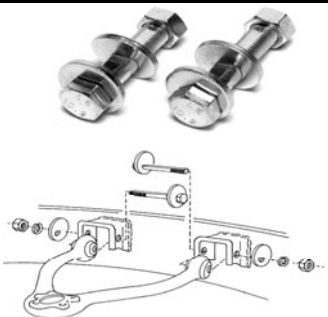
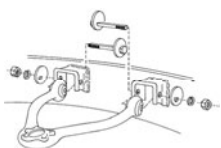





Numerical List, Flat Rate Time Guide, Description and Product Illustrations

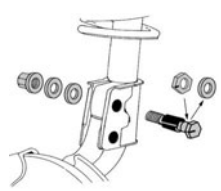Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K3154	1/4°	0.8	2	Camber Adjusting Bushing	
K3155	1/2°	0.8	2	Jeep 2 & 4WD, Cherokee, Comanche,	
K3156	3/4°	0.8	2	Wagoneer, Wrangler (Downsized) 89-84	
K3157	1°	0.8	2	Improved full contact design.	
K3158	1 1/4°	0.8	2	Provides LIVE ADJUSTMENT for easier and more accurate alignment.	
K3159	1 1/2°	0.8	2	"Positive Locking" feature for safe trouble free installation.	
K4037			2	Packaged one per box. Hardware Kit bag Contains pinch bolt and nut.	
K4038			2	Hardware Kit bag Contains pinch bolt and snap ring.	
K4039			2	Hardware Kit bag Contains pinch bolt.	
K4040			2	Hardware Kit bag Contains three nuts and cotter pin.	
K5266	±1 1/8°	0.6	2	Camber Adjusting Kit Buick Riviera 85-79. Cadillac Eldorado, Seville 85-66. Olds Toronado 85-66. Chevrolet/GMC 4WD S10/15 1982. 230, 260 Motorhome 78-73. Replaces upper control arm mounting bolts Packaged two cam/bolts per box.	


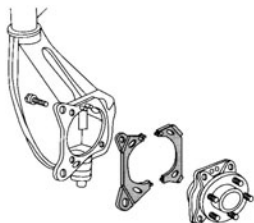




Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K5292	$\pm 1^{\circ}$	0.8	2	Adjustable Ball Joint - Upper Chevrolet, Chevette, Pontiac T1000, Acadian 87-76, Buick Opel 79-76. Isuzu I-Mark 85-81. Impulse 89-83. Pontiac Fiero 87-84. Quick and easy camber adjustments Future adjustments can be easily made. Packaged one per box.	
K5330	$\pm 1 \frac{3}{4}^{\circ}$	0.3	2	Double Offset Camber Adjusting Kit - Magna Cam Audi cabriolet 98-94. Buick Century, Regal, Rendezvous, Skylark, Lacrosse 08-05, Terraza 07-05. Allure 10-05. Chevrolet Captiva Sport 14-12. Chevrolet Beretta, Corsica, Cavalier, Equinox, Impala 08-00, Lumina, Malibu, Monte Carlo, Venture Van 07-05, Uplander 07-05, Honda Insight 07-00. Hyundai Tiboron 08-03. Infiniti I-30, I-35, FX35/45 08-96. Kia Optima, Sedona 08-01. Nissan Altima 08-02, Maxima, Quest, Stanza Wgn, Pathfinder 07-95. Oldsmobile, Achieva, Alero, Cutlass, Intrigue, Silhouette 04-96. Pontiac Aztek, Grand AM, Grand Prix, GTO, J-2000, Montana, Sunfire, Trans Sport, G6 08-97. Saturn S Series, Relay, Vue 08-91. Scion Xa, Xb 08-04. Subaru Baja, Impreza, Forester, Legacy, Outback, SVX, WRX, 07-89. Volvo S60, S80, XC90, 850 06-93. Landrover Freelander 05-02. NO GUESSING - Accurately adjust camber with weight of vehicle on it's wheels - simply turn the cam bolt and adjust to live readings. Adjustable for FUTURE ALIGNMENTS Alternative to Cam Bolt K90474 Kit includes: 14mm Cam Bolt, Sleeve, Nut and Washers and a stopper washer. Packaged one kit per box.	 



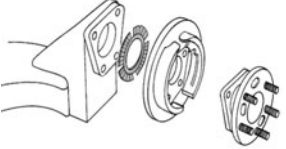
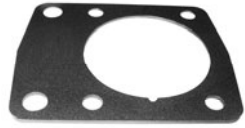
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K6302	$\pm 1 \frac{1}{8}^{\circ}$	0.6	2	Caster/Camber Kit Cadillac Escalade 01-99. Chev/GMC, Astro/Safari 4WD 05-85. C1500, C2500, C3500, Blazer, Suburban, Tahoe & Yukon 01-88. G1500, G2500, G3500 02-96. K1500, K2500, K3500, Blazer, Suburban & Yukon 01-88. Adjust caster, camber or a combination of both. From 1992, vehicles have some provision for caster/camber. This PROBLEM SOLVING , HEAVY DUTY KIT reolaces the upper control arm mounting bolts Use knock out tool No. T40222 , to quickly and easily remove the inserts on the upper control arm alignment brackets. Packaged two cam/bolts per box.	 
K6367	$\pm 1 \frac{1}{8}^{\circ}$	0.4	1	Camber Adjusting Cam/Bolt Kit Chevrolet/GMC S10, S15, Blazer, Envoy 4WD 02-93. Isuzu Hombre 4WD 00-96. Oldsmobile Bravada 4WD 01-91. Provides additional adjustment capabilities beyond OEM Replaces upper control arm mounting bolts. Packaged two kits per box.	 
K6375	$\pm 3/4^{\circ}$	0.3	1	Rear toe Adjusting Kit Buick Regal, Chev Lumina, Olds Cutlass Supreme, Pontiac Grand Prix 97-83. Toe adjustment made easy. Teeth on cams hold adjustment. Packaged two cam/bolts per box.	
K6396	2°	0.6	1	Rear Toe Adjusting Kit Saturn S Series 02-91. Provides from -1° to $+1^{\circ}$ of Toe change. Quick and easy installation. Kit contains: One Mounting Plate, two Cams plus Mounting Hardware. Packaged one kit per box.	 



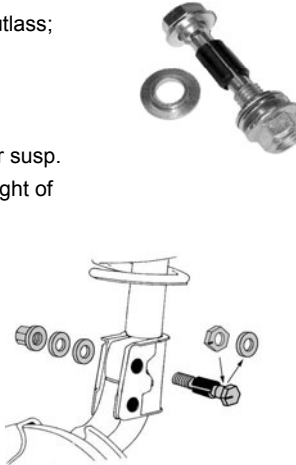
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

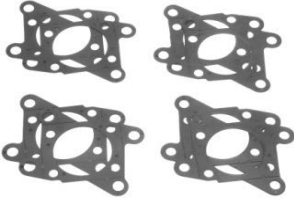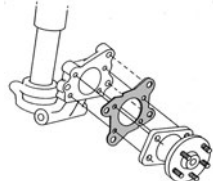Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K6478 K6479 K6480 K6481	1/4° 1/2° 3/4° 1°	0.5 0.5 0.5 0.5	2 2 2 2	Front Camber Shims Buick Regal 96-86. Chevrolet Lumina, Monte Carlo, 01-86 Oldsmobile Cutlass Supreme 97-88. Pontiac Grand Prix, 96-88. For Models W/ABS or W/O ABS This design allows for precise camber adjustment while keeping the caliper in exact alignment with the rotor. The "split" design enables fast installation without removal of the hub and bearing assembly or the CV joint and half shaft. Will increase or decrease Camber. Packaged one per box.	 
K6622	2°	0.6	1	Camber Adjusting Wedge Kit Saturn 02-91. Toyota Celica 89-86. Front & rear susp. Fits vehicles requiring 14mm bolts. Kit includes: Two 12mm high strength bolts, two wedges, nuts and washers. Packaged one kit per box.	 
K6623				Rear Camber Shim Assortment General Motors: "E" and "K" body cars with rear disc brakes - including "ABS" systems. Buick Riviera/Reatta, Cadillac Allante, Eldorado, Seville. Oldsmobile Toronado 94-86. Contains 2 each of K6624, K6625, K6626 & K6627	
K6624 K6625 K6626 K6627	1/4° 1/2° 3/4° 1°	0.6 0.6 0.6 0.6	2 2 2 2	Rear camber shim design allows for either positive or negative camber adjustment on rear disc brake GM "E" & "K" body vehicles while maintaining the caliper in exact alignment with the rotor. Shims fit either passenger or drivers side of vehicle. Shims can increase or decrease camber. Packaged one kit per box.	

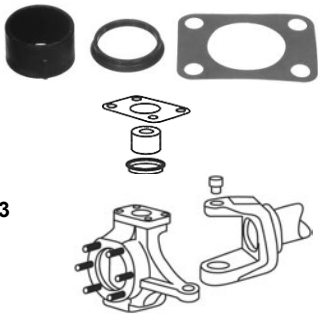



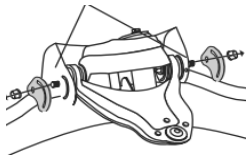
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K6652		1	2	Upper King Pin Repair Kit Chevrolet K30,V30. GMC K35, V35 91-77. Dodge W300/350, W450 93-57. Ford F350 4WD 91-75. Use with eccentric camber adjusting King Pin K992 and lower repair kit K8832 or K8833 Each kit contains a bushing, gasket and oil seal. Packaged one kit per box.	
K6660-1	1/4°	0.6	2	Rear Camber/Toe Shim Kia Soul 14-10. Nissan Cube 14-10. Hyundai Accent 14-06. Hyundai Veloster 13-12.	
K6660-2	1/2°	0.6	2	Chrysler 200 14-11. Honda Fit 14-07.	
K6660-3	3/4°	0.6	2	Pontiac Vibe 08-03. Toyota Corolla,	
K6660-4	1°	0.6	2	Matrix, Prius,Yaris 08-01. Nissan Versa 11-07. Scion IQ, tC, xA, xB, xD 14-04. Allows for quick and easy adjustment where no OE adjustment is available. Packaged one shim per box.	
K6661-1	1/4°	0.8	2	Rear Camber Shim	
K6661-2	1/2°	0.8	2		
K6661-3	3/4°	0.8	2	Buick Park Ave, LeSabre 05-00.	
K6661-4	1°	0.8	2	Cadillac SeVille, Deville 05-98. Olds Aurora 03-01. Pontiac Bonneville 05-00. Allows for quick and easy adjustment where no OE adjustment is available. Will not interfere with ABS break system. Packaged one shim per box.	

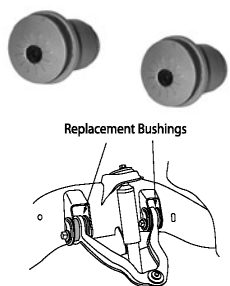



Numerical List, Flat Rate Time Guide, Description and Product Illustrations

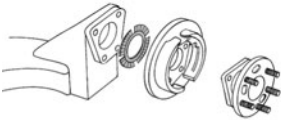Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K6669	±1°	0.8	2	Upper Control Arm Offset Camber Bushings. Chev/GMC 1500 2 & 4wd. Avalanche, Sierra/Silverado exc. Crew Cab, Tahoe/Yukon, Cadillac Escalade/EXT 08-99. Hummer H2 07-02. Express/Savana Vans G1500, G2500, G3500 10-03. Provides an additional 2° of camber adjustment. OE style design for consistent ride and handling. Allows use of OE adjusters to fine tune settings Most effective means of regaining lost camber. Use bushing adapter set T40259 for fast, simple installation. Packaged two bushings per box.	 <p>Replacement Bushings</p>
K6670	±1°	0.8	2	Upper Control Arm Offset Camber Bushings. Chev/GMC 2 & 4wd. Avalanche 2500HD, Sierra/Silverado 1500/1500/3500HD, Tahoe/Yukon, Suburban 2500 11-10. Provides an additional 2° of camber adjustment. OE style design for consistent ride and handling. Allows use of OE adjusters to fine tune settings Most effective means of regaining lost camber. Use bushing adapter set T40259 for fast, simple installation. Packaged two bushings per box.	 <p>Replacement Bushings</p>
K6699 (12mm)	±1 3/4°	0.3	2	Double Offset Camber Adjusting Kit - Magna Cam Chevrolet Aveo 11-04, Malibu; Oldsmobile Alero, Cutlass; Pontiac Grand Am 07-97. Pontiac Wave, Suzuki Swift+ 09-04. QUICK & EASY Camber adjustments on front & rear susp. NO GUESSING - Accurately adjust camber with weight of vehicle on it's wheels, simply turn the cam bolt and adjust to live readings. Adjustable for FUTURE ALIGNMENTS Alternative to Cam Bolt K90473 Kit includes: 12mm Cam Bolt, Sleeve, Nut and Washers. Packaged one kit per box.	






Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K6716	N/A	0.3	A/R	Alignment Cam Guide Pins Chev/GMC, Express/Savana Van, Colorado/Canyon 14-03, Hummer H3 09-06. Izusu Truck 4wd I-280, I-350 2006. Cadillac Escalade, Escalade ESV Escalade EXT 14.-02 Avalanche 13-07. OEM's do not provide a replacemst pin when breakage occurs. They recommend replacing the frame. FAST and EASY TO INSTALL Kit contains 12 replacement pins	
K6717-1 K6717-2 K6717-3 K6717-4	1/4° 1/2° 3/4° 1°	0.6 0.6 0.6 0.6	2 2 2 2	Full Contact Dual Angle Shim - Rear Suspension Chev Cobalt, Opel Astra, HHR 10-05. Pontiac Pursuit (Canada), 06-05. Saturn Ion 07-03. Scion Xa, Xb 08-04. Pontiac G5, Pontiac G6 05-10. Allows for quick and easy adjustment where no OE adjustment is available. FAST AND ACCURATE INSTALLATION Packaged one shim per box.	 
K6721	±1 1/2°	0.3	2	Caster/ Camber Adjuster "Quick Cam". Chev/GMC Colorado, Canyon 4WD 12-04. Hummer H3 10-06, Isuzu 135/128 4WD 2006. Replace outboard OEM upper control arm, non adjustable cam, with "QUICK CAM". Features an easy axcess ALLEN WRENCH SLOT. Provides FAST AND EASY, on vehicle adjustment. Use with K6716 Cam Guide pins Each kit contains 2 cams.	 



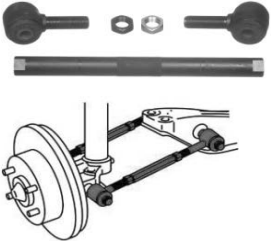
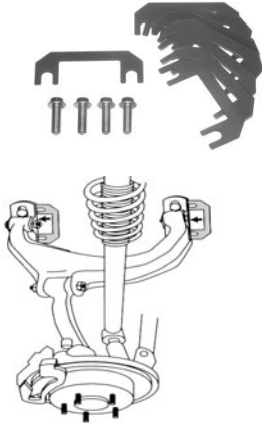

Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K7030	±1 1/8°	0.5	1	Upper Control Arm Cam Bolt and Bushing Kit Dodge All RWD 64-62, Challenger, Charger, Coronet, Dart, Demon, Lancer 76-61. Plymouth All RWD 64-62, Barracuda, Belvedere, Duster, GTX, Road Runner, Satellite, Valiant 76-60. Packaged two cam/bolt kits and two control arm bushings per box	
K7036	±1 1/8°	0.5	1	Upper Control Arm Cam Bolt and Bushing Kit RWD Chrysler 300, New Yorker, Newport 73-62. Dodge 880, Monaco, Polaro 78-65. Plymouth Fury 73-65. Dodge Truck B100-B350, D100-D450 78-69, Ramcharger 93-74. Plymouth Truck PB100-PB300 78-74, PD100/150 93-74. Packaged two cam/bolt kits and two control arm bushings per box	
K7103	2°	0.5	2	Upper Control Arm Eccentric Bushing Kit Dodge All RWD 64-62, Challenger, Charger, Coronet, Dart, Demon, Lancer 76-61. Plymouth All RWD 64-62, Barracuda, Belvedere, Duster, GTX, Road Runner, Satellite, Valiant 76-60. Packaged two control arm bushings and hardware per box	
K7104	2°	0.5	2	Upper Control Arm Eccentric Bushing Kit Buick Riviera 85-79. Cadillac Eldorado, Seville 85-68. Olds Toronado 85-66. Sonoma, Syclone, Typhoon 04-91. Chevrolet Blazer, Gmc Jimmy 05-95. Chevrolet/GMC 4WD S10/15 94-93. 230, 260 Motorhome 78-73. Chrysler 300, New Yorker, Newport Dodge 880, Monaco, Polaro Plymouth Fury 78-65. Dodge Truck B100-B350, D100-D450 78-69, Ramcharger 93-74. Plymouth Truck PB100-PB300 PD100/150 93-74. Packaged two control arm bushings and hardware per box	

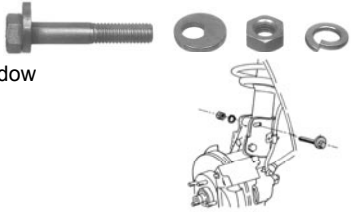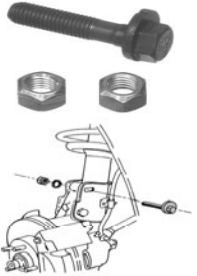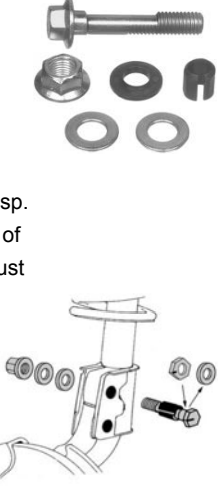
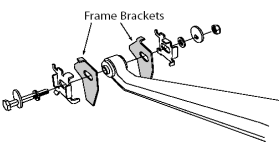
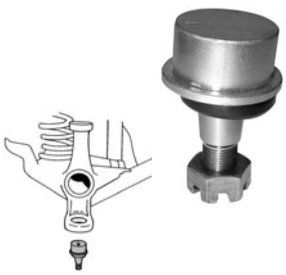

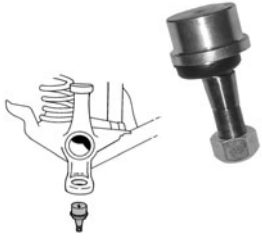
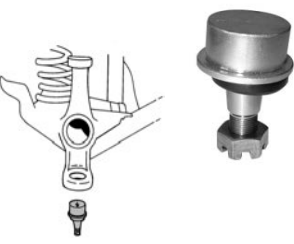
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K7120	±1 1/8°	0.3	2	Camber Adjusting Kit Dodge Omni, 024, Rampage 90-78. Spirit, Shadow Plymouth Horizon, Turismo & TC3, 95-85. Scamp Pickup Reliant 83-81. Packaged one kit per box.	
K7151	±1 1/8°	0.5	2	Camber Adjusting Kit Chrysler E-class, Fifth Ave, Imperial, Laser, LeBaron, New Yorker, Town & Country Van 95-82: Dodge 400 600, Aries, Caravan, Charger, Daytona. Plymouth Acclaim, Reliant, Sundance, Voyager 95-84. Mercury Zephyr 83-78. Packaged one per box.	
K7256	±1 3/4°	0.3	2	Double Offset Camber Adjusting Kit - Magna Cam Chrysler Pacifica 2004-08, Town & Country Van, Dodge Caravan, Plymouth Voyager 08-96. PT Cruiser 2001-08. Neon 04-95. Chevrolet Caprice 14-12. Sonic 14-12. Dodge Sebring 10-06. Dodge Caliber 12-07. QUICK & EASY Camber adjustments on front & rear susp. NO GUESSING - Accurately adjust camber with weight of vehicle on it's wheels - simply turn the cam bolt and adjust to live readings. Adjustable for FUTURE ALIGNMENTS Kit includes: 14mm cam bolt, sleeve, nut and washers. Packaged one kit per box.	
K7264-1	1/4°	0.6	2	Green Series - Full Contact, Dual Angle Shims Chrysler Town and Country, Dodge Caravan, Plymouth Voyager 14-06, Nissan Sentra 14-07. Toyota Sienna 14-07. Packaged one per box.	
K7264-2	1/2°	0.6	2		
K7264-3	3/4°	0.6	2		
K7264-4	1°	0.6	2		
K7317	±1°	0.8	2	Front Camber Bushings Chrysler Cirrus, Sebring Convertible and Sedan Dodge Stratus. Plymouth Breeze 06-95. Provides CAMBER ADJUSTMENT FOR LIFE on previously non adjustable suspensions. Replaces OEM upper control arm bushings. Alternative to ball joint K7451 Packaged two bushings per box.	



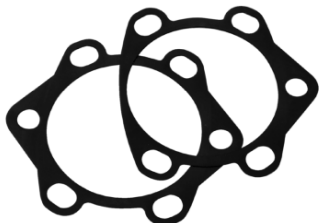
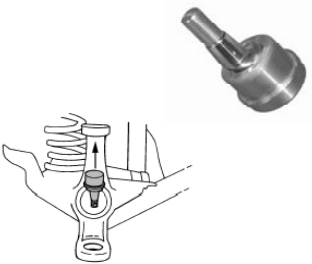
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

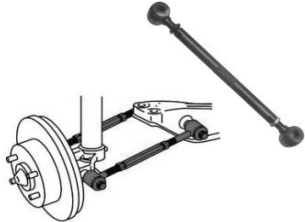Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K7318	-2° to +1°	0.5	2	Rear Camber Toe Link w/Rubber Bushings - Smart Arm Chrysler LHS, New Yorker, Concord, Dodge Intrepid, Eagle Vision 97-93. Provides camber/toe adjustment for life on previously non adjustable suspensions. Packed one link per box.	
K7330	1 1/2°	0.5	2	Front Control Arm Mounts w/Rubber Bushings Chrysler Sebring, Dodge Avenger 00-95. Mitsubishi Eclipse, Galant 99-94. Replaces non adjustable OE Anchor bolts. Rubber bushings restores original ride. Kit contains two complete adjustable bolts & hardware.	
K7331	-2° to +1°	0.5	2	Rear Camber Toe Link w/Rubber Bushings Chrysler 300/LHS, Concorde, Dodge Intrepid 04-98. Provides camber/toe adjustment for life on previously non adjustable suspensions. Packed one link per box.	
K7332	1 1/4°	0.2	2	Rear Camber Shim Kit Chrysler Sebring 10-95. Dodge Avenger 00-95, Stratus 05-95. Eagle Talon 98-95. Mitsubishi Diamante, Eclipse, 07-00, Galant 12-99. For QUICK AND EASY camber adjustment to 1 1/4 degrees of positive camber. Each kit contains : 4 ea. 1/16" shims 4 ea. 1/8" shims 4 ea. Extended bolts Packed one kit per box.	
K7396	±1°	0.9	2	Adjustable Ball Joint - Upper Dodge Ram 2500HD, 3500 4wd. 05-00. Adjust camber with a simple turn of the ball stud. FUTURE ADJUSTMENTS can be easily made. Adjustable offset design. Packed one per box.	




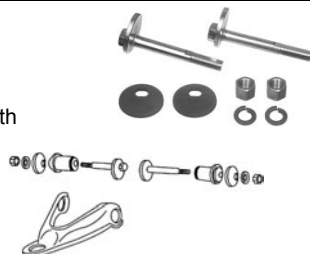
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K7398	$\pm 1^\circ / \pm 1 \frac{1}{2}^\circ$	0.5	2	Camber/Caster Cam/Bolt & Plate Adjusting Kit Dodge Ram 1500, 05-00. PRECISE, EASILY CONTROLLED ADJUSTMENTS FAST, BOLT ON INSTALLATION; no drilling or modifying required. Allows for easy future adjustments. Alternative to tool T40260 Packed two kits per box.	 
K7403	$\pm 1 \frac{3}{4}^\circ$	0.9	2	Adjustable Ball Joint - Lower Jeep Cherokee, Wagoneer 01-84, Comanche 92-86. Grand Cherokee 98-93. Wrangler 14-87 TJ 06-97. Adjust camber with a simple turn of the ball stud. FUTURE ADJUSTMENTS can be easily made. Adjustable offset design. Packed one per box.	
K7405	$\pm 1 \frac{3}{4}^\circ$	0.9	2	Adjustable Ball Joint - Lower Dodge Ram 1500, 2500 light duty, 4WD, 99-94. Adjust camber with a simple turn of the ball stud. FUTURE ADJUSTMENTS can be easily made. Adjustable offset design. Packed one per box.	
K7407	$\pm 1^\circ$	0.9	2	Adjustable Ball Joint - Lower Dodge Ram R1500, R2500 4wd 01-00. Adjust camber with a simple turn of the ball stud. FUTURE ADJUSTMENTS can be easily made. Adjustable offset design. Packed one per box.	
K7429	$\pm 1 \frac{3}{4}^\circ$	0.9	2	Adjustable Ball Joint - Lower Jeep Grand Cherokee 08-99. Adjust camber with a simple turn of the ball stud. FUTURE ADJUSTMENTS can be easily made. Adjustable offset design. Packed one per box.	

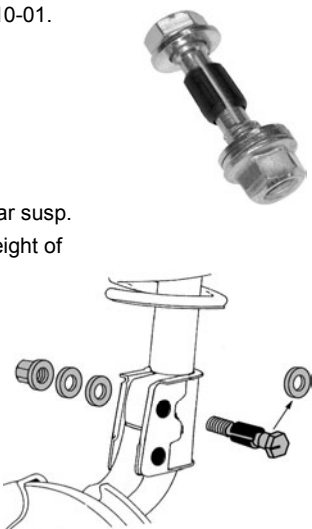



Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K7436 (16mm)	$\pm 1 \frac{3}{4}^{\circ}$	0.3	2	Double Offset Camber Adjusting Kit - Magna Cam Acura MDX, RSX 06-00. Chrysler Sebring Coupe 10-01. Dodge Stratus Coupe 05-01. Honda CR-V, Civic SI, Element 14-02. Mitsubishi Eclipse, Galant 12-99. Ford Edge, Lincoln MKX 14-07. QUICK & EASY Camber adjustments on front & rear susp. NO GUESSING - Accurately adjust camber with weight of vehicle on it's wheels, simply turn the cam bolt and adjust to live readings. Adjustable for FUTURE ALIGNMENTS Alternative to Cam Bolt K90476 Kit includes: 16mm Cam Bolt, Sleeve, Nut and Washers. Packaged one kit per box.	
K7437				Rear Camber/Toe Shim Set Assortment Contains 20 shims (two of each size). Dodge Caravan, Voyager, Town & Country AWD, w/o ABS 07-95,	
K7438	.10°	0.5	2	Rear Toe Shims	
K7439	.20°	0.5	2	Rear Toe Shims	
K7440	.30°	0.5	2	Rear Toe Shims	
K7441	.40°	0.5	2	Rear Toe Shims	
K7442	.50°	0.5	2	Rear Toe Shims	
K7443	.80°	0.5	2	Rear Toe Shims	
K7444	1/4°	0.5	2	Rear Camber Shims	
K7445	1/2°	0.5	2	Rear Camber Shims	
K7446	3/4°	0.5	2	Rear Camber Shims	
K7447	1°	0.5	2	Rear Camber Shims	
				Packaged one shim per box.	
K7448	$\pm 1^{\circ}$	0.9	2	Adjustable Ball Joint - Upper Dodge Ram P/U R2500HD, R3500HD, 14-03. Adjust camber with a simple turn of the ball stud. FUTURE ADJUSTMENTS can be easily made. Adjustable offset design. Packaged one per box.	


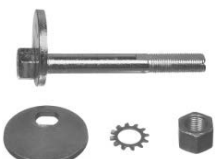
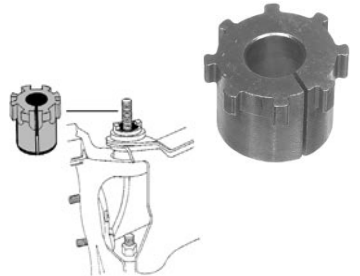


Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K7451	±1°	0.9	2	Adjustable Ball Joint - Upper Chrysler Cirrus, 00-95, Sebring Convertible 06-96. Sebring Sedan 06-01. Dodge Stratus 00-95. Stratus Sedan 06-01. Plymouth Breeze 00-96. Provides a fast, easy solution to the problem of non-adjustable front suspensions. Fully adj. design allows for most caster/camber combinations. FUTURE ADJUSTMENTS can be easily made. Unique design allows fast & easy "on vehicle" replacement. Alternative to control arm bushings K7317 Packaged one per box.	
K7452	±1°	0.9	2	Adjustable Ball Joint - Upper Chrysler Sebring, Dodge Avenger, Stratus 00-95. Eagle Talon 98-95. Hyundai Sonata 08-99, XG300, XG350 06-01. Kia Amanti, Optima 08-01. Mitsubishi Eclipse 99-95, Galant 98-94. Provides a fast, easy solution to the problem of non-adjustable front suspensions. Fully adj. design allows for most caster/camber combinations. FUTURE ADJUSTMENTS can be easily made. Unique design allows fast & easy "on vehicle" replacement. Packaged one per box.	
K7469	±3/4°	0.9	2	Adjustable Ball Joint - Upper Chrysler 300, Charger, Magnum (RWD) 14-04. Provides a fast, easy solution to the problem of non-adjustable front suspensions. Fully adj. design allows for most caster/camber combinations. FUTURE ADJUSTMENTS can be easily made. Unique design allows fast & easy "on vehicle" replacement. Packaged one per box.	
K8243A	±1 1/8°	0.9	2	Caster/Camber Kit Chev. Corvette, Chevy II, Nova 82-62. Chrysler, Dodge, Plymouth RWD 76-59. Ford, Lincoln, Mercury RWD 82-66. Dodge/Plymouth Truck, B100 to B300 Van 78-69, D100 to D450 Pickup 93-72. Packaged two cam/bolts per box.	

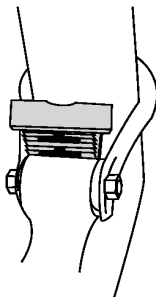
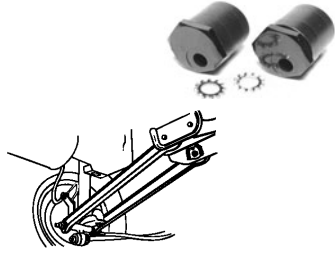
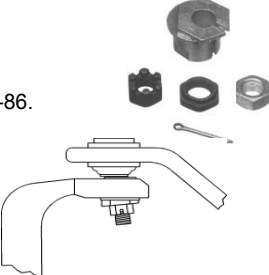
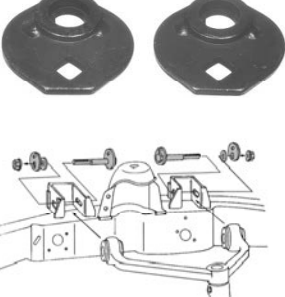
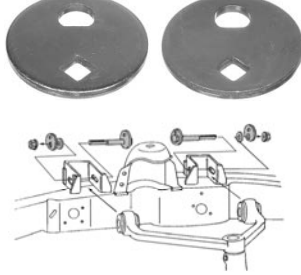
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K8280	1/4°	1.0	2	Camber Adjustment Bushing Ford 4WD, Bronco, F150 96-80, F250, F350 97-80. Alternative to K8958 series or the K8709 or K80108 Universal Bushings Packaged one per box.	
K8281	1/2°	1.0	2		
K8284	3/4°	1.0	2		
K8285	1°	1.0	2		
K8286	1 1/4°	1.0	2		
K8287	1 1/2°	1.0	2		
K8859	2°	1.0	2		
K8358	2°	0.3	1	Front and Rear Camber Wedge Kit Chevrolet Spectrum, Sprint 1985-89. Daihatsu Charade 1988-95. Dodge Colt 1979-95, Neon 1995-05. Eagle Talon 1990-96. Fiat 128, 131, Brava, Strada, X1/9 1968-83. Ford Aspire, Escort, Tempo, Festiva, Fiesta, Probe 1978-97. Geo Spectrum, Storm, Tracker 1985-95. Hyundai Elantra, Excel, Sonata 1986-06. Isuzu I-Mark, Impulse, Stylus 1985-93. Mazda 323, 626, GLC, MPV, MX-3, MX-6, RX-7 1979-06. Mercury Capri, Lynx, Topaz, Tracer, Villager Van, 1981-02. Mitsubishi Cordia, Eclipse, Galant, Mirage, Precis, Tredia 1983-02. Nissan Maxima, NX, Pulsar, Quest, Sentra, Stanza 1982-02. Plymouth Champ, Laser, Neon Reliant 1979-01. Pontiac Firefly, Sunburst 1985-01. Porsche 924, 944 1976-92. Saab 9000 1976-98. Suzuki Swift 1989-98. Toyota Avalon 1995-08, Camry, Corolla, FX-16, Tercel 1993-06. Volkswagen 1974-02. For most import cars w/strut type suspensions as well as other vehicles w/12mm strut to knuckle mounting bolts. Kit includes: Two Wedges plus two 10mm Bolts, Nuts & Washers Packaged one kit per box.	 
K8364	1/4°	1.2	2	Camber Adjustment Bushing Ford: 2WD F100/150 86-82, Bronco & Ranger 88-83. Provides incremental camber adjustments with the easy to use hex head. Alternative to Universal Bushing K8668 Packaged one kit per box.	
K8365	1/2°	1.2	2		
K8366	3/4°	1.2	2		
K8367	1°	1.2	2		
K8368	1 1/4°	1.2	2		
K8369	1 1/2°	1.2	2		
K8370	1 3/4°	1.2	2		
K8371	2°	1.2	2		






Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K8460	$\pm 1 \frac{1}{4}^{\circ}$	0.9	1	Rear Camber Kit Ford Taurus, Mercury Sable station wagon 05-86. Accurately adjusts rear camber. Corrects tire wear problems. Packaged two cam/bolts per box.	
K8521	$\pm 1 \frac{1}{8}^{\circ}$	0.6	2	Camber Adjusting Kit Ford Thunderbird, Lincoln Mark VII, Mercury Cougar 98-89. Provides additional camber adjustment beyond factory provisions. Packaged one per box.	
K8530	0°	1.0	2	Caster/Camber Bushing Ford 4WD, Bronco II, Ranger 89-83 Positive locking multi-slot design. Alternative to K8736 Universal Bushing or K80153 Ultra Range Universal Bushing. Packaged one per box.	
K8566	1/4°	1.0	2		
K8567	1/2°	1.0	2		
K8568	3/4°	1.0	2		
K8569	1°	1.0	2		
K8570	1 1/4°	1.0	2		
K8571	1 1/2°	1.0	2		
K8572	1 3/4°	1.0	2		
K8573	2°	1.0	2		
K8574	$\pm 1 \frac{1}{4}^{\circ}$	0.7	2	Front Caster/Camber Adjusting Plates Ford Escort, EXP, Tempo. Mercury LN7, Lynx, Topaz 1984-94. Easily adjust camber, caster or both. Allows future alignment adjustments to be easily made. (-1 1/4° to +1 1/4°). Simply rotate adjusting plates. Packaged one kit per box. Note: T40209 - 2 1/4" hole saw w/special insert guide makes installation easier.	
K8585	2°	0.6	1	Rear Toe Adjusting Kit Ford Escort, Mercury, Capri, Tracer 1991-03. Designed to replace factory non-adjustable bushing on left rear stabilizer arm. OE toe is adjustable on right rear only. Kit contains: Two Bushings and one Sleeve w/Offset Hole. Packaged one kit per box.	






Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K8594		0.3	2	Rear Toe Adjusting Link Ford Thunderbird 1989-97 , Lincoln Mark VIII 1994-98' Mercury Cougar 1989-96. Packaged one kit per box.	
K8627	$\pm 2^\circ / \pm 3/4^\circ$	0.9	2	Rear Camber/Toe Kit Ford Taurus, Mercury Sable 1986-07. Lincoln Continental 1988-94. Adjustable eccentric bushings replace stock bushings located on rear control arms. Adjust Camber $\pm 2^\circ$ Adjust toe $\pm 3/4^\circ$ Packaged two bushings per box.	
K8668	$\pm 2 \ 1/4^\circ$	0.5	2	Universal Camber Adjusting Bushing Ford 2WD Truck Bronco II, Ranger 1983-88, F100/150, F250, F350 1980-86. Provides camber settings over a range of $4 \ 1/2^\circ$. Can be used in place of K8364 to K8371 . Packaged one per box.	
K8674	$\pm 1 \ 1/4^\circ$	0.3	2	Camber/Caster Adjusting Cams Ford Explorer & Ranger 1995-12. Mazda B Series 1998-09. Mercury Mountaineer 1995-01. Provides for quick and easy camber and caster settings on factory non-adjustable suspensions. Accurate adjustments complete in just minutes. Alternative to K80065 Cam/Bolt Kit Each part number contains 2 cams.	
K8701	$\pm 2 \ 1/2^\circ$	0.3	2	Camber/Caster Adjusting Cams Ford Truck 2 & 4WD. Expedition, F150/250, Lincoln Navigator 1997-04. Provides for quick and easy camber and caster settings on factory non-adjustable suspensions. Accurate adjustments complete in just minutes. Each part number contains 2 cams.	




Numerical List, Flat Rate Time Guide, Description and Product Illustrations

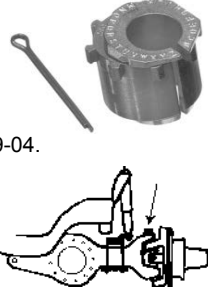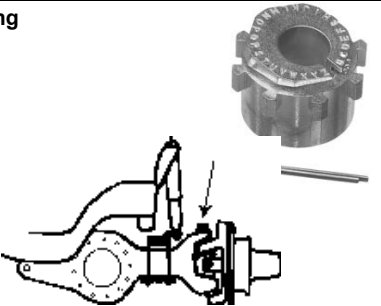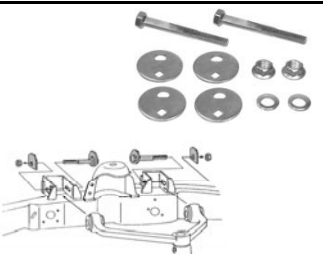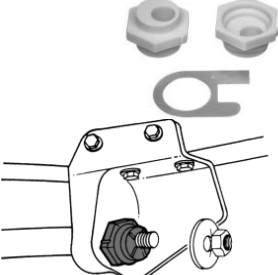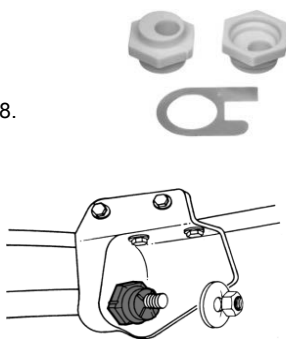Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K8709	$\pm 3/4^\circ$ to $\pm 2 3/4^\circ$	1.0	2	Universal Caster/Camber Adjusting Bushing Dodge R2500HD, R3500 1994-02. Ford 2WD, F450, F550 Super Duty 1999-04. Ford 4WD, Bronco, F150 1980-96, Excursion 2000-05. F250, F350 1980-97. F250, F350, F450, F550 Super Duty 1999-04. $\pm 3/4$ to $\pm 2 3/4$ degrees on full sized trucks For 0 to $3/4$ degrees use a fixed angle bushing or K80108 Alt. to K8958 series and K80108 Ultra Range Universal Bushing. Packaged one per box.	
K8736	$\pm 2 3/4^\circ$	1.0	2	Universal Caster/Camber Adjusting Bushing Ford 4WD, Bronco II, Ranger 1983-89. $\pm 3/4^\circ$ to $\pm 2 3/4^\circ$ on down sized trucks For 0 to $3/4^\circ$ use a fixed angle bushing. Alternative to K8566 series or K80153 Ultra Range Universal Bushing. Packaged one per box.	
K8740	$\pm 1 1/4^\circ$	0.5	2	Camber/Caster Adjusting Cam/Bolt Kits Ford Truck 2 & 4WD. Expedition, F150/250, Lincoln Navigator, Blackwood 1997-04. Provides for quick and easy camber and caster settings on factory non-adjustable suspensions. Packaged two kits per box.	
K8745	$\pm 1^\circ$	0.7	2	Radius Arm Eccentric Caster Bushing Ford 2 & 4wd Bronco, F100/150, F200/250, F300/350 1980-96. Provides Caster change from -1° to $+1^\circ$ Replaces OE radius arm bushings. Packaged one kit per box.	
K8746	$\pm 1^\circ$	0.7	2	Radius Arm Eccentric Caster Bushing Ford Bronco, F100/150 F200/250 F300/350 1980-96. Explorer 1991-94. Bronco 11. Ranger 1983-97. Mazda B Series, Navajo 1991-98. For those Ford Trucks with a shorter radius arm rod. Allows nut to be started easily. Provides Caster change from -1° to $+1^\circ$ Replaces OE radius arm bushing. Packaged one kit per box.	


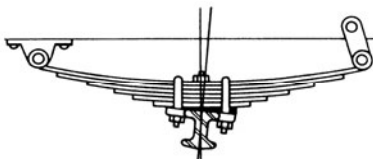


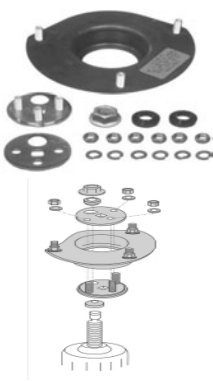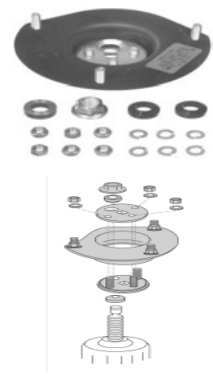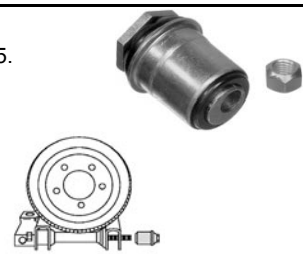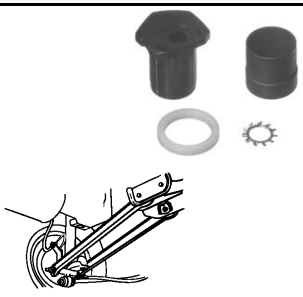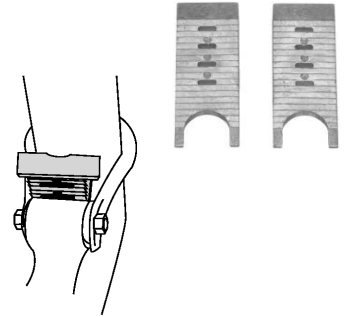
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K8821	$\pm 1 \frac{1}{4}^{\circ}$	0.5	2	Front Caster/Camber Adjusting Plates Ford Taurus, Mercury Sable 1986-90. Accurately allows caster and camber adjustments. Quick and easy to install. No cutting, drilling or modifying required. Positive locking feature for a secure non slip hold. Future alignment adjustments easily made - simply rotate adjusting plates. NO SPECIAL TOOLS REQUIRED. Packaged one kit per box.	
K8822	$\pm 1 \frac{1}{4}^{\circ}$	0.5	2	Front Caster/Camber Adjusting Plates Application: Ford Taurus, Mercury Sable 1991-95. Accurately allows caster and camber adjustments Quick and easy to install. No cutting, drilling or modifying required. Positive locking feature for a secure non slip hold. Future alignment adjustments easily made - simply rotate adjusting plates. Packaged one kit per box.	
K8823	$\pm 1 \frac{1}{4}^{\circ}$	1.0	2	Rear Toe Adjusting Kit Ford Taurus, Mercury Sable Station Wagon 1986-95. Eccentric cam replaces "frozen" OE toe units. Easy to install. Does not require removal of "frozen" spindle bolt. Packaged one per box.	
K8824	$\pm 2^{\circ} / \pm 2^{\circ}$	0.5	4	Rear Camber/Toe Change Kit Ford Tempo, Mercury Topaz 1984-94. Eccentric bushing kit, replaces OE bushings located on rear control arms. On 1984-85 $\pm 2^{\circ}$ Camber adjustment, $\pm 2^{\circ}$ Toe adjustment Packaged one per box.	
K8825	2°	0.3	1	Front Camber Wedge Kit Ford Crown Victoria, Fairmont, Granada, Mustang, LTD, T-Bird 1978-90. Lincoln Continental, Mark VII 1982-92. Mercury Capri, Cougar, Grand Marquis, Marquis 1967-90. Kit includes: 2 Wedges Only. Packaged one kit per box.	

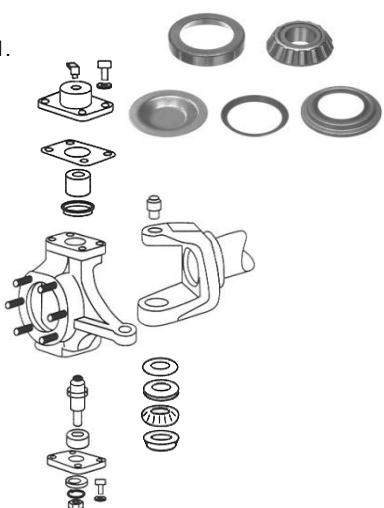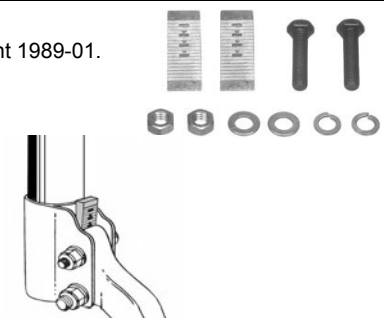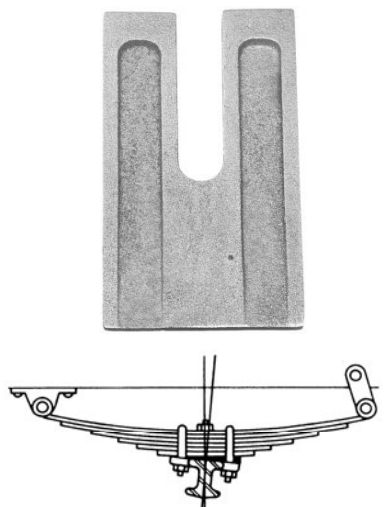

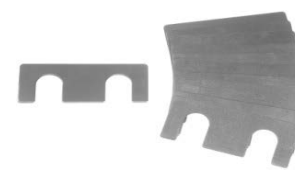

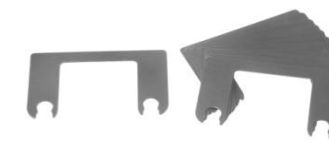
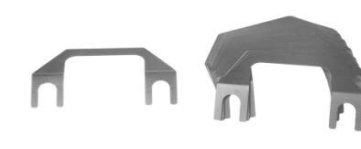
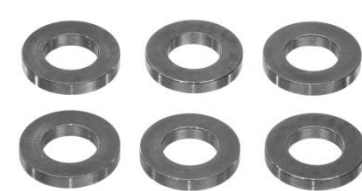
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration	
K8832	-	1.0	2	Lower King Pin Repair kit Chevrolet K30,V30. GMC K35, V35 1977-91. Dodge W300/350, W450 1957-93. Ford F250, F350 4WD 1979.		
K8833	-	1.0	2	Lower King Pin Repair Kit Ford F250, F350 4WD 1985-91. Use with eccentric camber adjusting King Pin K992 and upper repair kit K6652 Each kit contains a bearing and race, a retainer cap and two seals. Packaged one kit per box.		
K8859				See K8280 Series		
K8877	2°	0.6	1	Camber Adjusting Wedge Kits Ford Escort 1997-03. Chev/ Geo Metro/Sprint 1989-01. Mitsubishi Diamante 1992-96 Fits vehicles requiring 12mm bolts. Kit includes: Two 10mm high strength bolts, two wedges, nuts & washers. Packaged one kit per box.		
Part No.	Alignment Change	Width/Lgth	Pcs. Per Vehicle	Description	Illustration	
K8878	1/2°	2 1/2" 5"	2	Heavy Duty Truck Maganese Bronze Caster Wedges Heavy Duty Truck Maganese Bronze Caster Wedges ■ The toughest material available for super heavy-duty service. Will not break or compress. Extremely accurate. Thicker than competitive material. Parts are stamped for easy identification.		
K8879	1/2°	3" 6"	2			
K8880	1/2°	3-1/2" 6-1/4"	2			
K8881	1/2°	4" 6-1/2"	2			
K8882	1°	2 1/2" 5"	2			
K8883	1°	3" 6"	2			
K8884	1°	3-1/2" 6-1/4"	2			
K8885	1°	4" 6-1/2"	2			
K8886	1 1/2°	2 1/2" 5"	2			
K8887	1 1/2°	3" 6"	2			
K8888	1 1/2°	3-1/2" 6-1/4"	2			
K8889	1 1/2°	4" 6-1/2"	2			
K8890	2°	2 1/2" 5"	2			
K8891	2°	3" 6"	2			
K8892	2°	3-1/2" 6-1/4"	2			
K8893	2°	4" 6-1/2"	2			
						Packaged one per box.


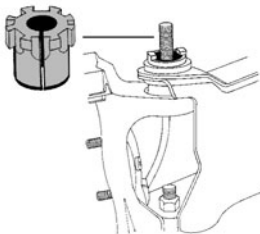

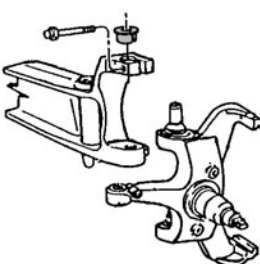
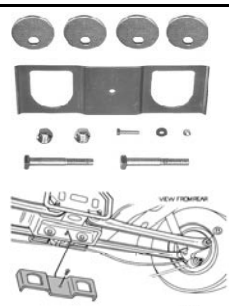
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

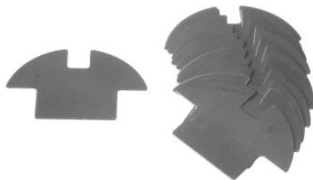Part No.	Alignment Change	Wdth/Lgth	Pcs. Per Vehicle	Description	Illustration
K8894	2 1/2°	2 1/2" 5"	2	Heavy Duty Truck Maganese Bronze Caster Wedges Heavy Duty Truck Maganese Bronze Caster Wedges ■ The toughest material available for super heavy-duty service. Will not break or compress. Extremely accurate. Thicker than competitive material. Parts are stamped for easy identification. Packaged one per box.	 
K8895	2 1/2°	3" 6"	2		
K8896	2 1/2°	3-1/2" 6-1/4"	2		
K8897	2 1/2°	4" 6-1/2"	2		
K8898	3°	2 1/2" 5"	2		
K8899	3°	3" 6"	2		
K8900	3°	3-1/2" 6-1/4"	2		
K8901	3°	4" 6-1/2"	2		
K8902	3 1/2°	2 1/2" 5"	2		
K8903	3 1/2°	3" 6"	2		
K8904	3 1/2°	3-1/2" 6-1/4"	2		
K8905	3 1/2°	4" 6-1/2"	2		
K8906	4°	2 1/2" 5"	2		
K8907	4°	3" 6"	2		
K8908	4°	3-1/2" 6-1/4"	2		
K8909	4°	4" 6-1/2"	2		
K8910	1/2°	5 3/4"	2	Uni-Wedge, Truck Caster Wedge One shim covers three spring widths by breaking off from 4" to either 3 1/2" or 3". Made of special heavy duty zinc alloy for durable service. Packaged one per box.	
K8911	1°	5 3/4"	2		
K8912	1 1/2°	5 3/4"	2		
K8913	2°	5 3/4"	2		
K8914	2 1/2°	5 3/4"	2		
K8915	3°	5 3/4"	2		
K8916	3 1/2°	5 3/4"	2		
K8917	4°	5 3/4"	2		
Part No.	Thickness			Description	Illustration
K8918	Shims 1/32" - 1/8" Spacers 1/32" - 1"		A/R	Heavy Duty Truck Tandem Alignment Shim and Spacer Assortment Fits: Freightliner, I.H.C., Kenworth, Peterbilt, Volvo/White and Wilson Trailers. Contains: 6 Each size of all H.D. tandem truck shims, 2 each size Kenworth spacers. Includes H.D. metal storage case.	
K8919	1/32"		A/R	Heavy Duty Truck Tandem Alignment Shims Wilson Tandem Shims for Hutchins Suspension. Each part no. contains 12 shims.	
K8920	1/16"		A/R		
K8921	1/8"		A/R		




Numerical List, Flat Rate Time Guide, Description and Product Illustrations

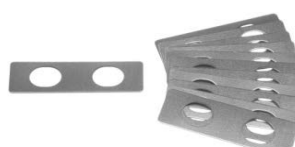Part No.	Alignment Change	Width/Lgth	Pcs. Per Vehicle	Description	Illustration
		Thickness			
K8922		1/32"	A/R	Heavy Duty Truck Tandem Alignment Shims Peterbilt Air Leaf Adjustment Shim. Each part no. contains 12 shims.	
K8923		1/16"	A/R		
K8924		1/8"	A/R		
		Thickness			
K8925		1/32"	A/R	Heavy Duty Truck Tandem Alignment Shims 1990 & newer Freightliner "Single Slot" Adjustment Shim. Each part no. contains 12 shims.	
K8926		1/16"	A/R		
K8927		1/8"	A/R		
		Thickness			
K8928		1/32"	A/R	Heavy Duty Truck Tandem Alignment Shims Freightliner "Double Slot" Adjustment Shim. Each part no. contains 12 shims.	
K8929		1/16"	A/R		
K8930		1/8"	A/R		
		Thickness			
K8931		1/32"	A/R	Heavy Duty Truck Tandem Alignment Shims Freightliner Air Glide Adjustment Shim. Each part no. contains 12 shims.	
K8932		1/16"	A/R		
K8933		1/8"	A/R		
		Thickness			
K8934		1/32"	A/R	Heavy Duty Truck Tandem Alignment Shims Volvo/White Adjustment Shim. Each part no. contains 12 shims.	
K8935		1/16"	A/R		
K8936		1/8"	A/R		
		Thickness			
K8937		1/32"	A/R	Heavy Duty Truck Tandem Alignment Shims I.H.C. Torque Arm Adjustment Shim. Each part no. contains 12 shims.	
K8938		1/16"	A/R		
K8939		1/8"	A/R		
		Thickness			
K8940		1/32"	A/R	Heavy Duty Truck Tandem Alignment Spacers Kenworth Air Glide "8 Bagger" Adjustment Spacers. Each part no. contains 6 shims.	
K8941		1/16"	A/R		
K8942		1/8"	A/R		
K8943		1/4"	A/R		
K8944		1/2"	A/R		
K8945		3/4"	A/R		
K8946		1"	A/R		


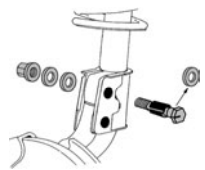
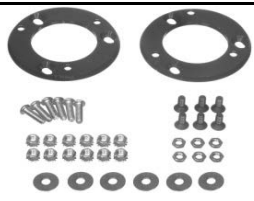
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration	
K8958	0°	1.0	2	Caster/Camber Bushing Dodge 2WD R2500HD, R3500 1994-02. Dodge 4WD R2500, R3500 1994-99. Ford 2WD, F450, F550 Super Duty 1999-04. Ford 4WD, Bronco, F150 1980-96, Excursion 2000-05. F250, F350 1980-97. F250, F350, F450, F550 Super Duty 1999-04. Ford Areostar 90-96. Improved design for easier installation. Positive locking multi-slot design provides the most combinations of caster and camber. Alternative to K8701 or K80108 Universal Bushing. Packaged one per box.	 	
K8959	1/4°	1.0	2			
K8960	1/2°	1.0	2			
K8961	3/4°	1.0	2			
K8962	1°	1.0	2			
K8963	1 1/4°	1.0	2			
K8964	1 1/2°	1.0	2			
K8965	1 3/4°	1.0	2			
K8966	2°	1.0	2			
K8967	2 1/4°	1.0	2			
K8968	2 1/2°	1.0	2			
K8969	2 3/4°	1.0	2			
	2WD	4WD		Caster/Camber Bushing Ford 2 & 4WD, Bronco II, Ranger 1989-97, Explorer 1991-94. Ford 2WD F150 1987-96; F250, F350 1987-9.;; E150, E250, E350, E450 Van 1992-09. Excursion 2000-05. F250/F350 Super Duty w/twin I-Beam 1999-07. Mazda B Series, Navajo 1991-97. Provides incremental caster or camber adjustments with the easy to use hex head. Alternative to Universal Bushings K8986 & K80109 . Packaged one per box.	 	
K8970	0°	0°	1.0			2
K8971	1/4°	3/16°	1.0			2
K8972	1/2°	3/8°	1.0			2
K8973	3/4°	5/8°	1.0			2
K8974	1°	3/4°	1.0			2
K8975	1 1/4°	7/8°	1.0			2
K8976	1 1/2°	1°	1.0			2
K8977	1 3/4°	1 3/16°	1.0			2
K8978	2°	1 3/8°	1.0			2
K8979	2 1/4°	1 3/4°	1.0			2
K8980	2 1/2°	2°	1.0			2
K8981	2 3/4°	2 1/4°	1.0	2		
K8982	3°	2 1/2°	1.0	2		
K8983	3 1/4°	2 3/4°	1.0	2		
K8984	3 1/2°	3°	1.0	2		
K8985	±1°	0.4	1	Adjustable Rear Camber Toe Kit Ford Taurus 1996-07. Mercury Sable 1996-05. Easy camber adjustment for non-adjustable vehicles. Provides rear toe adj. when factory adjusters are frozen. Kit includes plate, two cam bolt assemblies & hardware. Packaged one kit per box.		
K8984	3 1/2°	3°	1.0	2		





Numerical List, Flat Rate Time Guide, Description and Product Illustrations

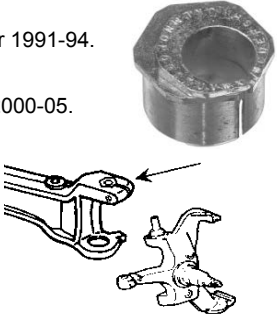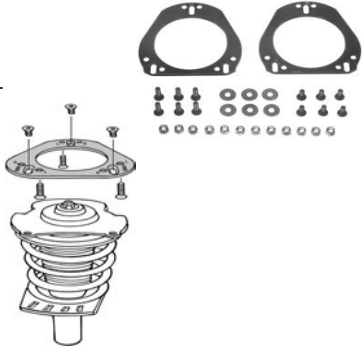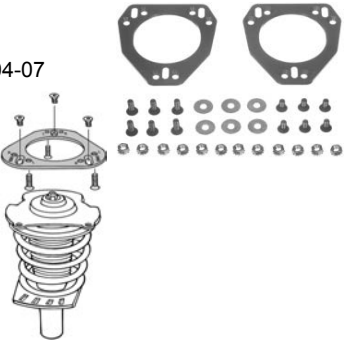Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K8986	$\pm 2 \frac{1}{4}^{\circ}$	1.0	2	Universal Caster/Camber Bushing Ford 2 & 4WD, Bronco II, Ranger 1989-97, Explorer 1991-94. Ford 2WD F150 1987-96; F250, F350 1987-97. E150, E250, E350, E450 Van 1992-07; Excursion 2000-05. F250/F350 Super Duty w/twin I-Beam 1999-07. Mazda B Series, Navajo 1991-97. Pinch Bolt Type Axle Bushing $\pm 3/4^{\circ}$ to $\pm 2 \frac{1}{4}^{\circ}$ on full sized trucks $\pm 3/4^{\circ}$ to $\pm 1 \frac{3}{4}^{\circ}$ on down sized trucks For 0 to $3/4$ degrees use a fixed angle bushing or K80109 Alternative to K8970 to K8984 and K80109 Ultra Range Universal Bushing Packaged one per box.	
K8990	$\pm 1 \frac{1}{4}^{\circ}$	0.9	1	Adjustable Front Camber Plates Ford Taurus 1996-07. Mercury Sable 1996-06. ACCURATE adjustments in $1/4^{\circ}$ increments. Adjustable for FUTURE ALIGNMENTS. Helps restore ORIGINAL RIDE HEIGHT. Kit includes two plates and hardware. Packaged one kit per box.	
K8991	$\pm 1 \frac{1}{4}^{\circ}$	0.9	1	Adjustable Front Camber Plates Ford Windstar 1995-03, Mercury Monterey 2004-07 Ford Freestar 2004-2007 ACCURATE adjustments in $1/4^{\circ}$ increments. Adjustable for FUTURE ALIGNMENTS. Helps restore ORIGINAL RIDE HEIGHT. Kit includes two plates and hardware. Packaged one kit per box.	


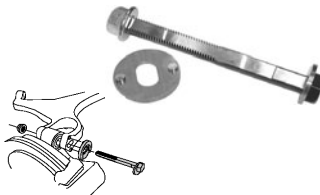
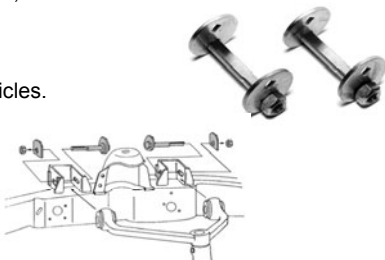

Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K9757	±1 3/4°	0.3	2	<p>Double Offset Camber Adjusting Kit - Magna Cam</p> <p>12mm 12.9 High Strength Bolts</p> <p>Cadillac Catera 1997-01. Chevrolet Nova, Spectrum 1985-89. Cobalt 2005-10; HHR 2006-09; Malibu Maxx 2004-08; Metro, Prizm 1998-02, Sprint 1985-88, Tracker, 1989-04 Daewoo Laganza, Nubira 1999-02. Daihatsu Charade 1988-95. Dodge Colt, Neon 1979-05. Eagle Summit, Talon, 1989-96. Ford Aspire, Escort, Escape, Festiva, Fiesta, Probe 1978-07. Geo Metro/Sprint, Prizm, Spectrum, Storm, Tracker, 1985-01. Hyundai, Accent 1996-09, Elantra, Excel, Sante Fe, Scoupe, Sonata 1986-08, Tiburon 1997-08. Infiniti G-20 1991-96. Kia Sephia, Spectra 1993-08, Rio 2001-08, Rio5 2006-08. Isuzu Imark, Impulse, Stylus 1985-93. Mazda 323/Protege, 626, MPV, MX3, MX6, GLC, Precedia, RX7, 1979-06, Tribute 2001-08. Mercury Capri, Tracer, Topaz, Villager 1987-02. Mitsubishi Cordia, Diamonte, Eclipse, Expo, Galant, Mirage, Precis, Tredia 1983-04. Nissan Altima, Axxess, Maxima, NX, Pulsar, Quest, Sentra, Stanza, 200SX, 240SX 1978-06. Olds Alero, Cutlass 1997-04. Plymouth Champ, Colt, Neon, Laser 1979-01. Pontiac Firefly, Pursuit, Sunburst 1985-06. Saturn Ion, L series, Vue 2000-07. Porsche 924, 944 1976-92. Saab 9000 1986-98 Suzuki Esteem, Sidekick, Swift, Vitara, Verona, X-90 1986-07. Toyota Camry, Celica, Corolla, FX16, Paseo, Tercel, 1983-02. Volkswagen 1974-99. Volvo 40 2000-08, 70 1998-08, 90 1998-06. Chevrolet Cruze 11-14, Spark 12-14. QUICK & EASY Camber adjustments on front & rear susp. NO GUESSING - Accurately adjust camber with weight of vehicle on it's wheels - simply turn the cam bolt and adjust to live readings. Adjustable for FUTURE ALIGNMENTS</p> <p>Alternative to Cam Bolt K90473</p> <p>Kit includes: 12mm Cam Bolt, Sleeve, Nut and Washers.</p> <p>Packaged one kit per box.</p>	 
K80001	±1°	0.6	1	<p>Camber Adjusting Plates</p> <p>Ford Focus 2000-08.</p> <p>Installs in minutes. Accurate adjustments in 1/4° increments. Adjustable for future alignments</p> <p>Packaged two plates per box.</p>	




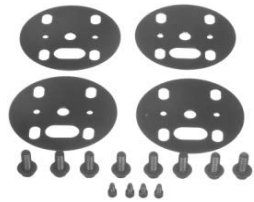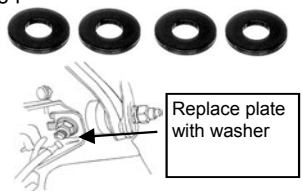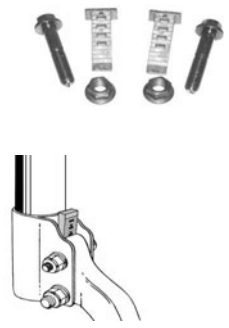


Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K80002	-1/2° to 1°	0.8	1	Rear Camber Shim Kit Ford Focus 14-00. Ford Transit Connect 14-10. Quick and easy installation Changes camber 1/2 or 1 degree depending upon shim selected. Provides full contact for support of rear hub/wheel. Works with factory toe adjuster to accurately set rear angles. Each kit contains two 1/2 degree shims, two 1 degree shims and hardware. Packaged one kit per box.	
K80056	Up to ±1 1/4°	0.3	1	Camber/Caster Alignment Washers Ford Explorer, Lincoln Aviator, Mercury Mountaineer 2002-10. Adjustment Range: Front Camber ±3/4°, Front Caster ±1 1/4°, Rear Camber ±1/2° Heavy duty washer - designed to replace OEM locking plate. Quick and easy camber and caster adjustments. Fits front and rear, Alternative to K80111 See tool T40253 to perform live alignment readings. Packaged four washers per box.	
K80059	1 1/2°	0.3	1	Front Camber Wedge Kit Ford Mustang 1994-04. Use where factory does not provide enough change. Provides an additional 1 1/2° of positive camber. Can be used in conjunction with factory adj. Kit includes: Two 14mm high strength bolts, two wedges and locking nuts. Packaged one kit per box.	
K80060	1 1/2°	0.3	1	Front Camber Wedge Kit Ford Escape, Mazda Tribute 2001-12. Use where factory does not provide enough change. Provides an additional 1 1/2° of positive camber. Can be used in conjunction with factory adj. Kit includes: Two 10mm high strength bolts, two wedges and locking nuts. Packaged one kit per box.	


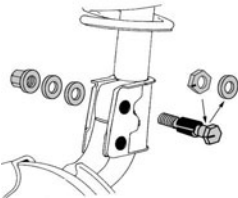

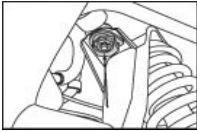

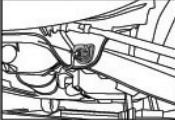
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

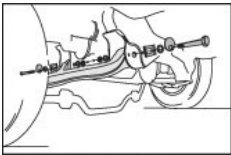Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K80061	$\pm 1\ 1/2^\circ \pm 2^\circ$	0.7	2	Camber/Caster Cam Bolt Kit Ford Thunderbird 2002-08; Lincoln LS, Jaguar S Type 2000-08. $\pm 1.5^\circ$ Camber $\pm 2^\circ$ Caster Replaces non-adjustable factory bolts. Allows for quick and easy adjustments. Packaged two kits per box.	
K80064	$2\ 3/4^\circ$	0.3	2	Camber Adjusting Cam/Bolt Kit - Rear suspension Ford Expedition, Lincoln Navigator. 2003-09. Provides adjustment on non-adjustable vehicles. Allows for easy future adjustments. Packaged two kits per box.	
K80065	$\pm 1\ 5/8^\circ$	0.3	2	Caster/Camber Adjusting Cam/Bolt Kit Ford Explorer, Ranger, Mercury Mountaineer, Mazda B Series. 10-95. Provides adjustment on non-adjustable vehicles. Allows for easy future adjustments. Alternative to cam kit K8674 Packaged two kits per box.	
K80069	2°	0.3	2	Camber/Caster Adjusting Kit Ford Expedition, Lincoln Navigator 2003-07. Quick and accurate installation. Allows for easy future adjustments. Packaged one kit per box.	





Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K80087	$\pm 2^\circ / \pm 1 \frac{1}{2}^\circ$	0.4	2	Camber/Caster Adjusting Kit. Ford F150 2 & 4wd 2004-08; Lincoln Mark LT 2005-08. $\pm 2^\circ$ Camber adjustment $\pm 1 \frac{1}{2}^\circ$ Caster adjustment Quick and accurate installation. Allows for easy future adjustments. Includes two cams, bolts guides and hardware.  Packaged two kits per box.	
K80108	$\pm 3 \frac{1}{4}^\circ$	0.9	2	Caster/Camber "Ultra Range" Universal Bushing Dodge 2WD R2500HD, R3500 1994-02. Dodge 4WD R2500, R3500 1994-99. Ford 2WD, F450, F550 Super Duty 1999-04. Ford 4WD, Bronco, F150 1980-96, Excursion 2000-05. F250, F350 1980-97. F250, F350, F450, F550 Super Duty 1999-04. New DUAL AXIS design - for up to 25% greater range of adj. TECH FRIENDLY - Standard socket fits easily & securely over hex adjuster for fast & accurate settings - on the vehicle UNIVERSAL - for any caster or camber or combination. Bushing can be set to TRUE ZERO, eliminating need for 0 bush. Alternative to K8958 series or Universal Bushings K8709 Packaged one per box.	 
K80109	$\pm 4^\circ$	0.9	2	Caster/Camber "Ultra Range" Universal Bushing Ford 2 & 4WD, Bronco II, Ranger 1989-97, Explorer 1991-94. Ford 2WD F150 1987-96; F250, F350 1987-97. E150, E250, E350, E450 Van 1992-14; Excursion 2000-05. F250/F350 Super Duty w/twin I-Beam 1999-07. Mazda B Series, Navajo 1991-97. New DUAL AXIS design - for up to 30% greater range of adj. TECH FRIENDLY - Standard socket fits easily & securely over hex adjuster for fast & accurate settings - on the vehicle UNIVERSAL - for any caster or camber or combination. Bushing can be set to TRUE ZERO. K80109 Not for use on E Series Vans W/Commercial or Recreational Chassis. See K100016 thru K100022 Lock in Design Bushings Alternative to K8970 to K8984 series and K8986 Universal Bushing Packaged one per box.	 


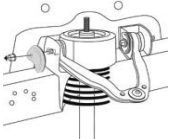



Numerical List, Flat Rate Time Guide, Description and Product Illustrations

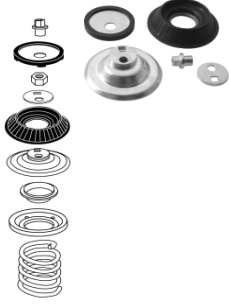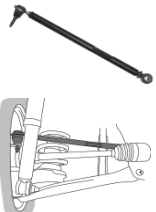Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K80110 (12mm)	$\pm 1 \frac{3}{4}^{\circ}$	0.3	2	Double Offset Camber Adjusting Kit - Magna Cam Ford Escort 1991-03; Probe 1989-97. Hyundai Sonata 1995-99. Mazda 323, 626, MX-3, Protégé, MX-6 1979-03. Hyundai Elantra 97-06. QUICK & EASY Camber adjustments on front & rear susp. NO GUESSING - Accurately adjust camber with weight of vehicle on it's wheels, simply turn the cam bolt and adjust to live readings. Adjustable for FUTURE ALIGNMENTS Alternative to Cam Bolt K90473 Kit includes: 12mm Cam Bolt, Sleeve, Nut and Washers. Packaged one kit per box.	 
K80111	$\pm 3/4^{\circ}$	0.4	2	Front Suspension Caster/Camber Kit Ford Explorer, Lincoln Aviator, Mercury Mountaineer 2002-05. QUICK & EASY Camber adjustments on front suspension. Adjustable for FUTURE ALIGNMENTS Replaces stock alignment washers on the upper control arm. Alternative to OEM style washers K80056 Packaged two kits per box.	 
K80112	$\pm 1/2^{\circ}$	0.2	2	Rear Suspension Caster/Camber Kit Ford Explorer, Lincoln Aviator, Mercury Mountaineer 2002-08. QUICK & EASY Camber adjustments on rear suspension. Adjustable for FUTURE ALIGNMENTS Replaces stock alignment washers on the lower control arm. Alternative to OEM style washers K80056 Packaged one kit per box.	 



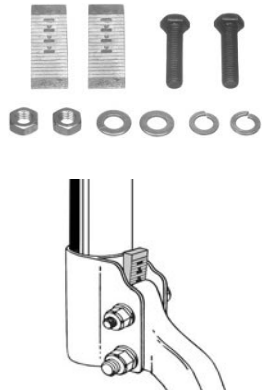
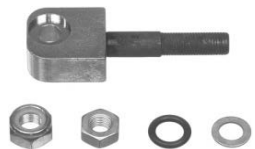
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K80113	±1°	1.5	2	Adjustable Upper Strut Mount Ford Contour, Mercury Mystique 1995-00. Mercury Cougar 1999-02. Also provides -1° to +1° of caster. Replace the OE mount and rotate the adjustable plate to bring alignment back to OE specs. Adjustable for FUTURE ALIGNMENTS Packaged one kit per box.	
K80115	±4°	0.5	2	Camber Adjusting Upper Control Arm - Rear susp. Ford Escape, Mazda Tribute, 2 & 4WD, 2001-08. Simply replace the upper control arm and use the turnbuckle adjuster for positive or negative camber. Packaged one per box.	
K80116	0°	1.0	2	Caster/Camber Bushing Ford Super Duty 4WD, F250, F350 2005-14. Provides incremental caster or camber adjustments with the easy to use hex head. Alternative to K80154 Ultra Range Universal Bushing Packaged one per box.	
K80117	1/4°	1.0	2		
K80118	1/2°	1.0	2		
K80119	3/4°	1.0	2		
K80120	1°	1.0	2		
K80121	1 1/4°	1.0	2		
K80122	1 1/2°	1.0	2		
K80123	1 3/4°	1.0	2		
K80124	2°	1.0	2		
K80125	2 1/4°	1.0	2		
K80126	2 1/2°	1.0	2		
K80128	0°	1.0	2	Fixed Angle Caster/Camber Bushing Ford Super Duty 2 & 4WD, F450, F550 2005-14. Chev/GMC Kodiak/TopKick C4500,C5500 2005-09. Provides incremental caster or camber adjustments with the easy to use hex head. Alternative to K80155 "Ultra Range" Universal Bushing Packaged one per box.	
K80129	1/4°	1.0	2		
K80130	1/2°	1.0	2		
K80131	3/4°	1.0	2		
K80132	1°	1.0	2		
K80133	1 1/4°	1.0	2		
K80134	1 1/2°	1.0	2		
K80135	1 3/4°	1.0	2		
K80136	2°	1.0	2		


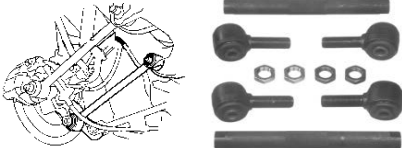
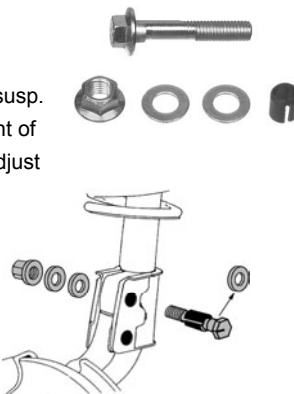
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K80153	±3 1/4°	1.0	2	Caster/Camber "Ultra Range" Universal Bushing Ford 4WD, Bronco II, Ranger 1983-89. New DUAL AXIS design - for up to 25% greater range of adj. TECH FRIENDLY - Standard socket fits easily & securely over hex adjuster for fast & accurate settings - on the vehicle. UNIVERSAL - for any caster or camber or combination. Bushing can be set to TRUE ZERO, eliminating need for 0 bush. Alternative to K8566 series or K8736 Universal Bushing. Packaged one per box.	 
K80154	±2 1/2°	1.0	2	Caster/Camber "Ultra Range" Universal Bushing Ford Super Duty 4WD, F250, F350 2005-14. New DUAL AXIS design - for up to 25% greater range of adj. TECH FRIENDLY - Standard socket fits easily & securely over hex adjuster for fast & accurate settings - on the vehicle. UNIVERSAL - for any caster or camber or combination. Bushing can be set to TRUE ZERO, eliminating need for 0 bush. Alternative to K80116 series. Packaged one per box.	
K80155	±2 1/2°	1.0	2	Caster/Camber "Ultra Range" Universal Bushing Ford Super Duty 2 & 4WD, F450, F550 2005-14. Chev/GMC Kodiak/TopKick C4500,C5500 2005-09. New DUAL AXIS design - for up to 25% greater range of adj. TECH FRIENDLY - Standard socket fits easily & securely over hex adjuster for fast & accurate settings - on the vehicle. UNIVERSAL - for any caster or camber or combination. Bushing can be set to TRUE ZERO, eliminating need for 0 bush. Alternative to K80128 series. Packaged one per box.	
K80276	±2°	0.3	2	Camber/Caster Cam Bolt Kit - Lower Control Arm Nissan Titan, Armada 2004-14; Frontier, Pathfinder, Xterra 2005-14. Makes the vehicle adjustable for caster and camber. Unique design allows for fast and easy adjustment. Works with OEM cam guide. Packaged 2 cam bolt kits per box.	


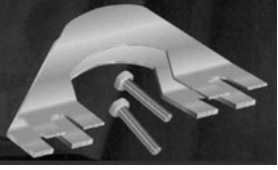
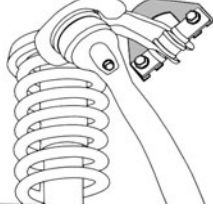
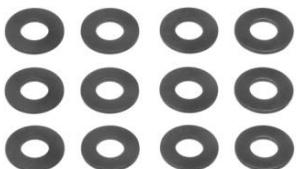

Numerical List, Flat Rate Time Guide, Description and Product Illustrations

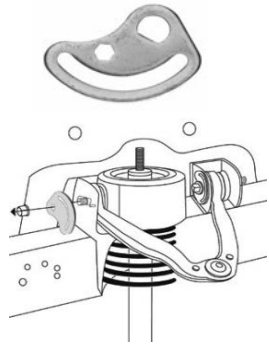Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K80277	$\pm 1 \frac{1}{2}^{\circ}$	0.3	2	Caster/ Camber Adjuster "Quick Cam". Chev/GMC Express, Savana Vans G1500 2 & AWD, G2500 & G3500 2003-14. Replace outboard OEM upper control arm, non adjustable cam, with "QUICK CAM". Features an easy access ALLEN WRENCH SLOT. Provides FAST AND EASY "ON VEHICLE" adjustment. Use with K6716 Cam Guide pins. Each kit contains 1 cam.	
K80757 K80758	1° 2°	0.3 0.3	2 2	Alignment Shim (-1° camber) Alignment Shim (-2° camber) Dodge , Freightliner and Mercedes Sprinter 07-03. FAST AND EASY installation. Shims LOCK IN PLACE, will not fall out. Each kit contains two bolts and two shims 1 Kit per box	
K90073	2°	0.6	1	Camber Adjusting Wedge Kit Dodge Monaco 92-90. Eagle Medallion, Premier 92-88. Hyundai Sonata 98-88. Nissan Stanza 90-86. Subaru Legacy 1989-02. Toyota Avalon 11-95, Camry, Celica, Corolla, MR2, Previa 08-97. Kit includes: Two 14mm high strength bolts, two wedges, nuts and washers. Packaged one kit per box.	
K90139 K90205 K90206 K90141 K90142 K90207	1/4° 1/2° 3/4° 1° 1 1/4° 1 1/2°	0.5 0.5 0.5 0.5 0.5 0.5	2 2 2 2 to 4 2 to 4 2 to 4	Camber Adjusting Kits - "Cam Studs" Honda Accord, front. 1986-89. Assortment 1 each K90141, K90142, K90205, K90206 & K90207 A fast economical means of correcting camber on front wheels, positive or negative. One cam stud required per side.* Replaces O.E. forward upper control arm mounting stud. *Negative changes of 1° or more require a second "Cam-Stud" installed in the positive position, replacing rearward upper control arm anchorbolt. Packaged one per box.	





Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K90143	1 3/4°	0.5	2	Front Control Arm Mounts w/Rubber Bushings Acura CL, RL, TL Series, Integra, Legend, Vigor 1990-08. Honda Accord, Civic, CRX, Del Sol, Prelude 1988-01. Isuzu Oasis 1996-99. Replaces O.E. Non adjustable control arm mounts. Provides camber adjustment for life on previously non adjustable suspensions. Packaged two anchor bolts per box.	
K90145				See K977 series	
K90146				See K977 series	
K90147				See K978 series	
K90148				See K978 series	
K90149				See K979 series	
K90150				See K979 series	
K90152				See K982 series	
K90153				See K982 series	
K90204	-1 1/2° to +3°	0.5	2	Rear Camber Toe Kit w/Rubber Bushings - Smart Arms Acura 3.2CL & 3.2TL 1997-07. Honda Accord 1998-02. Quick and easy installation Adjustable for future alignments. Kit contains two complete adjustable arms & hardware.	
K90205				See K90139 series	
K90206				See K90139 series	
K90207				See K90139 series	
K90208	±1 3/4°	0.3	2	Double Offset Camber Adjusting Kit - Magna Cam Geo Prizm 98-89. Toyota Avalon, Camry, Celica, Corolla, Echo, MR2, Prius, Tercel, Highlander 14-87. Lexus ES350, RX350 12-07. Lexus ES-300/330, RX300/330 06-92. Mercedes E200 12-14. Scion xD 08-14. QUICK & EASY Camber adjustments on front & rear susp. NO GUESSING - Accurately adjust camber with weight of vehicle on it's wheels - simply turn the cam bolt and adjust to live readings. Adjustable for FUTURE ALIGNMENTS Kit includes: 15mm Cam Bolt, Sleeve, Nut and Washers. Packaged one kit per box.	



Numerical List, Flat Rate Time Guide, Description and Product Illustrations

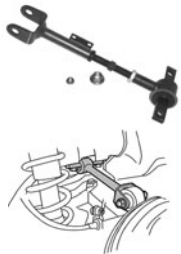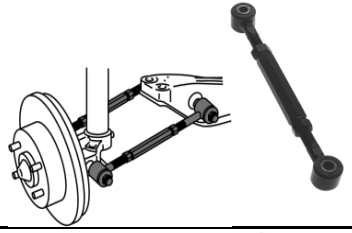Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K90209	1/4° per shim	0.2	A/R	Caster Shims Toyota Camry 1987-08, Cresida, Tercel 1983-07. Toyota models with stabilizer bushings at lower control arms. Quick and easy caster change. Add or remove spacers at stabilizer bar to decrease or increase caster. 1/8" thick shim provides 1/4 degree of caster change. 12 shims per part number	
K90210	±1 1/4 °	0.2	2	Rear Camber Shim Kit Acura CL Series, Integra, Legend, TL series, Vigor 01-90. Honda Accord, Civic, CR-V, CR-X 01-86. Isuzu Oasis 1996-99. For quick and easy camber adjustment to 1 1/4 degrees of positive camber. Each kit contains : 2 ea. 1/16" shims 2 ea. 1/8" shims 2 ea. Extended bolts Packaged one kit per box.	 
K90211	1/4° per shim	0.2	A/R	Caster Shims Acura CL & TL Series 3.2 1999-08, Vigor 1992-07. Honda Accord, Odyssey 1990-07. Isuzu Oasis 1996-99. Quick and easy caster change. Add or remove spacers at strut rod to decrease or increase caster. 1/8" thick shim provides 1/4 degree of caster change. 12 shims per part number	
K90350	±1 3/4°	0.3	2	Camber Adjusting Crank Bolt Kit Pending Supersession to K90473 Acura RSX 2002. Honda Civic, all exc. Hybrid 2001-02. Ford Mustang 2005-08 Designed for Honda Civics with non slotted struts. Allows for EASY FUTURE ADJUSTMENTS. Packaged one kit per box.	





Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K90351	-2° to +3°	0.5	2	Rear Camber Link Honda Civic 2002-05, Acura RSX 2002-06. Adjustment range from -2° to +3° camber. Replaces non-adjustable OEM arms on rear suspension. Includes rubber bushings for a quiet ride. Packaged one arm per box.	
K90388	-2° to +2 3/4°	0.8	2	Camber Adjusting Lateral Link. Nissan Maxima 1985-94. Stanza 1982-92. Replaces the non-adjustable OEM rear arms. Allows for easy future adjustments. Packaged one arm per box.	
K90470 K90471 K90472		0.5 0.5 0.5	A/R A/R A/R	Camber/Caster Shims 1mm Camber/Caster Shims 2mm Camber/Caster Shims 4mm Nissan Van 1987-90, Frontier 1998-04, Pathfinder 1987-95, Pickup 1973-97. Packaged 10 shims per kit.	
K90473	±1 3/4°	0.4	2	Camber Adjusting Bolt Kit - Axis Cam 12mm grade 12.9 High Strength Steel Bolts Makes non-adjustable vehicles fully adjustable for camber with strut - to - Knuckle mounting bolts Chevrolet, Ford, Saab, Toyota, Nissan Volvo, Cadillac, Hyundai, Isuzu QUICK & EASY Camber adjustments on front & rear susp. Adjustable for FUTURE ALIGNMENTS Alternative to Magna Cam K9757 Kit includes: 12mm Cam Bolt, Nut and Washers. Packaged one kit per box.	





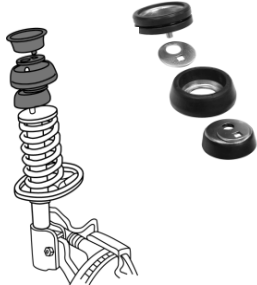
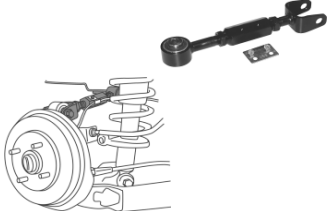
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K90474 (14mm)	$\pm 1 \frac{3}{4}^{\circ}$	0.4	2	Camber Adjusting Bolt Kit - Axis Cam 14mm grade 12.9 High Strength Steel Bolts Makes non-adjustable vehicles fully adjustable for camber with strut - to - Knuckle mounting bolts Acura, Dodge, Honda, Saturn, Toyota, Infinity Plymouth, Mitsubishi, Chrysler 200 QUICK & EASY Camber adjustments on front & rear susp. Adjustable for FUTURE ALIGNMENTS Alternative to Magna Cam K5330 Kit includes: 14mm Cam Bolt, Nut and Washers. Packaged one kit per box.	
K90475 (15mm)	$\pm 1 \frac{3}{4}^{\circ}$	0.4	2	Camber Adjusting Bolt Kit - Axis Cam 15mm grade 12.9 High Strength Steel Bolts Makes non-adjustable vehicles fully adjustable for camber with strut - to - Knuckle mounting bolts Geo, Lexus, Toyota QUICK & EASY Camber adjustments on front & rear susp. Adjustable for FUTURE ALIGNMENTS Alternative to Magna Cam K90208 Kit includes: 15mm Cam Bolt, Nut and Washers. Packaged one kit per box.	









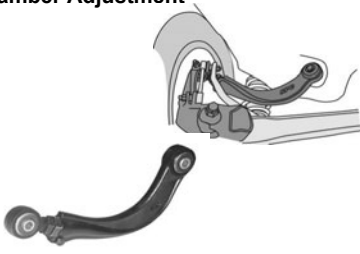
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K90476 (16mm)	$\pm 1 \frac{3}{4}^{\circ}$	0.4	2	Camber Adjusting Bolt Kit - Axis Cam 16mm grade 12.9 High Strength Steel Bolts Makes non-adjustable vehicles fully adjustable for camber with strut - to - Knuckle mounting bolts Acura, Buick, Chevrolet, Honda, Lincoln, Mercury, Ford, Dodge, Pontiac QUICK & EASY Camber adjustments on front & rear susp. Adjustable for FUTURE ALIGNMENTS Alternative to Magna Cam K928 Kit includes: 16mm Cam Bolt, Nut and Washers. Packaged one kit per box.	 
K90477 (17mm)	$\pm 1 \frac{3}{4}^{\circ}$	0.4	2	Camber Adjusting Bolt Kit - Axis Cam 17mm grade 12.9 High Strength Steel Bolts Makes non-adjustable vehicles fully adjustable for camber with strut - to - Knuckle mounting bolts Lexus, Toyota, Pontiac QUICK & EASY Camber adjustments on front & rear susp. Adjustable for FUTURE ALIGNMENTS Alternative to Magna Cam K929 Kit includes: 17mm Cam Bolt, Nut and Washers. Packaged one kit per box.	 



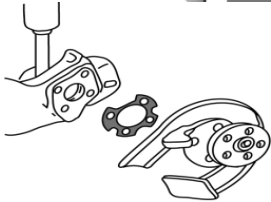

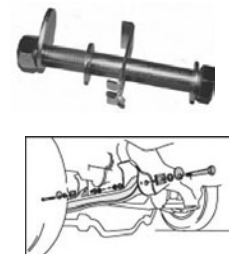
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K90478				Rear Camber/Toe Shim Set Assortment Contains 16 shims (two of each size) and special T40258 shim wrench Audi TT 06-00. VW Beetle, Golf Gti and Jetta. 08-99 Corrects rear camber and toe. Combine two shims to get up to ± 1 degree of camber or $\pm .5$ degree of toe change. Caution: Check brake and rotor clearance for binding. K90487 spacers may be required.	
K90479	1/8°	0.5	2	Rear Toe Shim	
K90480	1/4°	0.5	2	Rear Toe Shim	
K90481	3/8°	0.5	2	Rear Toe Shim	
K90482	1/2°	0.5	2	Rear Toe Shim	
K90483	+1/2°	0.5	2	Rear Camber Shim	
K90484	+1°	0.5	2	Rear Camber Shim	
K90485	-1/2°	0.5	2	Rear Camber Shim	
K90486	-1°	0.5	2	Rear Camber Shim	
				Packaged one shim per box.	
K90487				Spacer Set Use with Audi & VW camber/toe shims (see K90478) Check brake and rotor clearance for binding. Use spacers where required. Contains 8 spacers, 4 different size	
K90488	$\pm 1^\circ$	0.9	2	Adjustable Upper Strut Mount Audi TT 2000-06. VW Beetle 1998-10, Golf, Gti and Jetta. 99-06 Adjusts camber and caster. Remove strut assembly compress spring & replace bearing plate. Adjustable for FUTURE ALIGNMENTS Packaged one kit per box.	
K90489	-2° to +4°	0.5	2	Adjustable Upper Rear Control Arm. Honda CR-V 02-06, Element 03-11. Change camber with the turnbuckle adjuster Adjustable for FUTURE ALIGNMENTS Packaged one kit per box.	

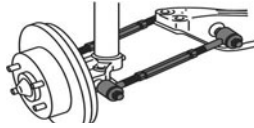


Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K90490	±1°	0.9	2	Adjustable Ball Joint - Upper Honda Accord 1990-97, Prelude 1992-01, Odyssey Van 1995-98. Acura Vigor 1992-94; 2.2CL, 2.3CL, 3.0CL 1997-99. 2.5TL 1995-99; 3.2TL 1996-04. Provides a fast, easy solution to the problem of non-adjustable front suspensions. Fully adj. design allows for most caster/camber combinations. FUTURE ADJUSTMENTS can be easily made. Unique design allows fast & easy "on vehicle" replacement. Packaged one per box.	 
K90492	±1°	0.9	2	Adjustable Ball Joint - Upper Honda Civic, CR-V, & CRX, Del Sol 1998-01. Accord 1998-12, Prelude 1997-01. Acura Integra 1990-01, 3.2CL 2001-04, 3.5RL 1996-07. 3.2TL 1999-07, Legend 1991-9. TSX 2004-08. Accord Crosstour 10-11. Provides a fast, easy solution to the problem of non-adjustable front suspensions. Fully adj. design allows for most caster/camber combinations. FUTURE ADJUSTMENTS can be easily made. Unique design allows fast & easy "on vehicle" replacement. Packaged one per box.	 
K90706	-1 1/2° to +3°	0.1	2	Camber Adjusting Lower Control Arms - Rear Susp. Acura 3.2TL, 3.5 RL 2003-07, TSX 2004-08, TL Series 3.2 1999-08. Honda Accord 2003-07, Makes non adjustable vehicles, now adjustable. Allows for FUTURE, on vehicle, adjustments. Provides camber adjustment FAST AND EASY installation Packaged two arms per box	 
K100001	±3°	0.4	2	Camber/Toe Adjusting Lower Control Arms - Rear Susp. Dodge Neon 1995-05 Plymouth Neon 1995-01. Replaces the non-adjustable OEM rear arms. Allows for easy future adjustments. Provides Camber/Toe Adjustment Packaged two arms per box	 
K100002	-1 1/2° to +5°	0.5	2	Adjustable Control Arm - Rear Upper - Camber Adjustment Ford Focus 00-11, Mazda 3 04-14. Mazda 5 06-12, Volvo S40 04-11. Volvo V50 05-11. Packaged one per box.	

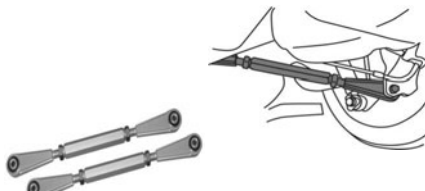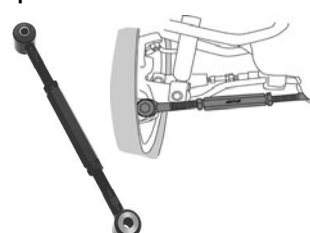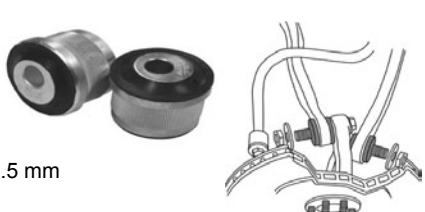




Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K100003	±4°	0.6	1	Camber Adjusting Lower Control Arms - Rear Susp. Mini Cooper 02-11. Camber Adjustment Packaged two per box.	
K100004	±3 1/2°	0.8	2	Camber Adjusting Lower Lateral Link - Rear Susp. Chrysler Sebring Sedan & Convertible 04-06. Dodge Stratus Sedan 04-06. Makes non adjustable vehicles, now adjustable. Allows for FUTURE, on vehicle, adjustments. Provides camber adj. Packaged one per box.	
K100005	±3/4°	0.6	2	Camber Adjusting Upper Control Arm Bushings - Rear Susp. Pending Supersession to K100113 Chrysler 300C RWD 04-10. Dodge Charger RWD 06-10. Dodge Magnum RWD 04-08. Dodge Challenger 08-12. K100005 & K100006 for Arms w/ 1 ,39.5 mm & 1 ,41.5mm O.D. Bushings K100007 & K100008 for arms w/ 2,39.5mm O.D. Bushings	
K100006	±1 1/2°	0.6	2		
K100007	±3/4°	0.6	2		
K100008	±1 1/2°	0.6	2		
K100009	±1°	0.5	2	Upper Control Arm Camber Cam Bolt Kit - Rear Susp. Ford Focus 00-14. Packaged one per box.	
K100010	±2°/±1 1/2°	0.3	1	Camber/Caster Adjusting Cam Bolt Kit Ford Expedition 2 & 4WD 07-12. Lincoln Navigator 2 & 4WD 07-14. Ford F-150 09-14. Allows + or -2° Camber & + or - 1 1/2° Caster adjustment	




Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K100011 NEW				GM 6-Lug Torsion Key Kit Fits GM Light Duty Trucks & SUV's (6-lug) Allows front end ride-height changes up to 3.0" above OEM and an on-the-vehicle adjustment range of 3.5" Allows up to 33" tire/wheel combinations  Cadillac Escalade 06-02; Escalade ESV 06-03; Escalade EXT 06-02. Chevrolet Avalanche 1500 06-02; K1500 99-88; K1500 Suburban 99-92. Silverado 1500 06-99; Suburban 1500 06-00; Tahoe 06-95; GMC K1500 99-88. K1500 Suburban 99-92; Sierra 1500 06-99; Sierra C3 01; Yukon 06-92. Yukon XL 1500 06-00.	
K100012 NEW				GM 8-Lug Torsion Key Kit Allows front end ride-height changes up to 2.5" above OEM and an on-the-vehicle adjustment range of 2.75" Includes Heavy-Duty Powder Coated Shock Mount Extenders Allows up to 33" tire/wheel combinations  Chevrolet Avalanche 2500 10-02; Silverado 1500 HD 07-01. Silverado 2500 04-99; Silverado 2500 HD 10-01; Silverado 3500 09-01. Silverado 3500 HD 10-07; Suburban 2500 10-00; GMC Sierra 1500 HD 07-01. Sierra 2500 04-00; Sierra 2500 HD 10-01; Sierra 3500 07-01. Sierra 3500 HD 10-07; Yukon XL 2500 09-00; Hummer H2 09-03.	
K100013 NEW				Torsion Bar Key Kit Allows front end ride-height changes up to 2.25" above OEM and an on-the-vehicle adjustment range of 3.5" Allows up to 33" tire/wheel combinations  Dodge Ram 1500 05-02.	



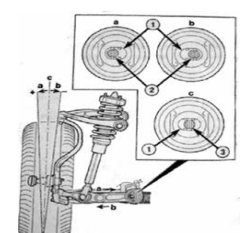



Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K100014 NEW				Torsion Bar Key Kit Allows front end ride-height changes up to 2.5" above OEM and an on-the-vehicle adjustment range of 3.5" Allows up to 33" tire/wheel combinations  Ford Expedition 02-97; F-150 03-97; F-150 Heritage 04. F-250 99-97; Lincoln Navigator 02-98.	
K100015	±1°		2	Camber/Toe Adjusting Cam Nut - Rear susp. Chevrolet Equinox 05-09 ,Pontiac Torrent 06-09. Saturn Vue 02-09 , Suzuki XL7 01-04. Allows -1 ' to +1 ' Toe Adjustment 	
K100016 K100017 K100018 K100019 K100020 K100021 K100022	0° 1/2° 1° 1 1/2° 2° 2 1/2° 3°		2	Camber/Caster Adjustment Bushings Ford 2 & 4WD, Bronco II, Ranger 90-97, Explorer 91-94. E150, E250, E350, E450 Van 92-13; Excursion 00-05. Mazda B Series, Navajo 94-99. Lock In Design;Prevents Bushing Rotation To Maintain Alignment Settings 	
K100023	±0.3°		2	Camber Adjusting Cam/Bolt Kit Chrysler 300/300C 05-14 ,Dodge Challenger 08-14. Dodge Charger 06-14 ,Dodge Magnum 04-09.  	

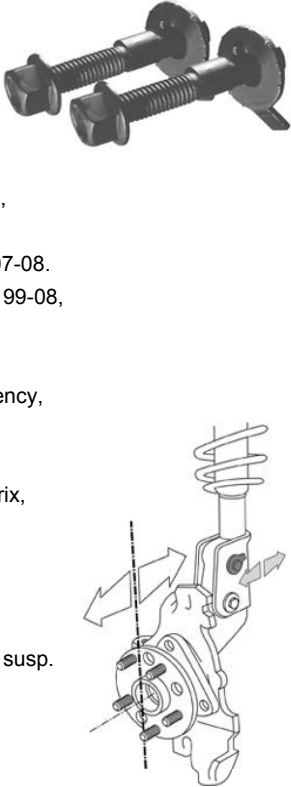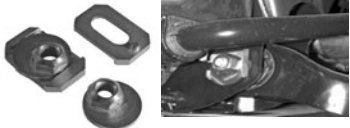

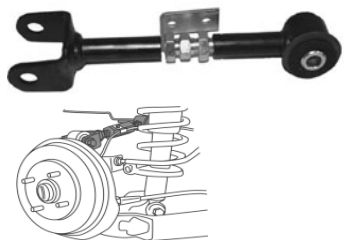

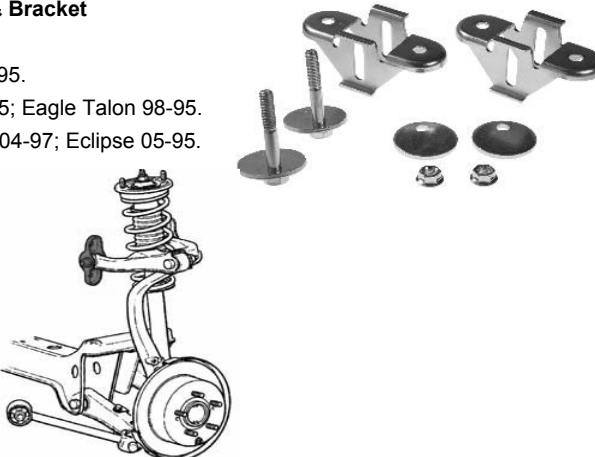
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K100024	±1 3/4°	0.4	2	Camber Adjusting Bolt Kit Acura RSX, MDX,RDX 01-08. BMW X5 00-06. Buick Century, Electra/Park Ave, LeSabre, Regal, Riviera/Reatta, Skyhawk, Skylark, Somerset 80-05. Enclave 08-14.Lucerne 06-11 Cadillac Allante, Cimarron, Deville, Fleetwood Eldorado, Seville 80-05. Chevrolet Beretta, Corsica, Cavalier, Celebrity, Citation, Lumina, Monte Carlo 80-05 Chrysler New Yorker 300M, LHS, Concorde. Sebring, Dodge Intrepid, Monaco. Stratus. Eagle Medallion, Premier, Vision, 88-05. Ford Mustang 79-04. Edge 07-08. Honda CR-V 02-09, Civic, Ridgeline 99-07, Odyssey 99-08, Element 03-08..Lexus ES-250 90-91. Lincoln MKX 07-08.Mitsubishi Eclipse, Endeavor 99-07, Gallant 99-08. Oldsmobile 98 Regency, 88 Delta, Achieva, Aurora, Calais, Cutlass, Firenza, Omega, Silhouette, Toronado 80-04. Pontiac 6000, Bonneville, Fiero, Grand AM, Grand Prix, Phoenix, Sunbird J2000, Tran Sport 80-05. Land Rover 03-04. Saturn Outlook 07-08. Toyota RAV 4 1996-06. QUICK & EASY Camber adjustments on front & rear susp. Adjustable for FUTURE ALIGNMENTS Alternative to K90476 Kit includes: 16mm Cam Bolt, Nut and Washers & Adapter Plate For Slotted Struts Packaged one kit per box.	
K100025	±1° / ±1 1/2°	0.3	1	Camber/Caster Adjusting Cam Bolt Kit Ford Expedition 2 & 4WD 2007-09. Lincoln Navigator 2 & 4WD 2007-09. Allows ±1° Camber & ±1 1/2° Caster adjustment	
K100026	±1 1/2°	0.5	2	Upper Control Arm Bolt w/Quick Cams Chev/GMC 1500 2 & 4wd. Avalanche, Sierra/Silverado exc. Crew Cab, Tahoe/Yukon, Cadillac Escalade/EXT 1999-08. Hummer H2 2002-07. Express/Savana Vans G1500, G2500, G3500 2003-07.	

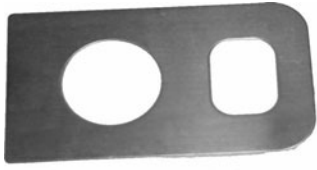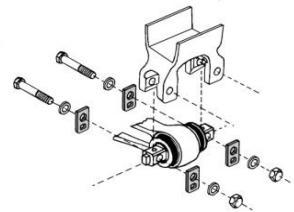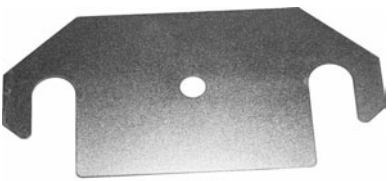

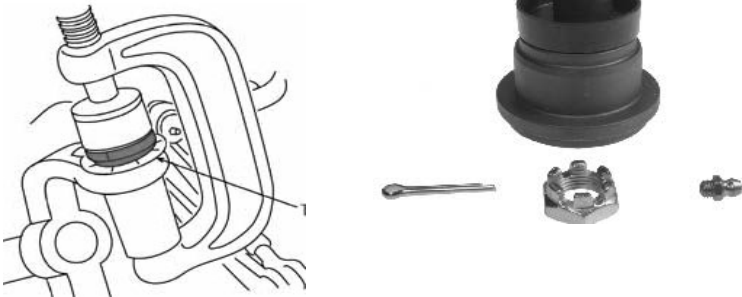
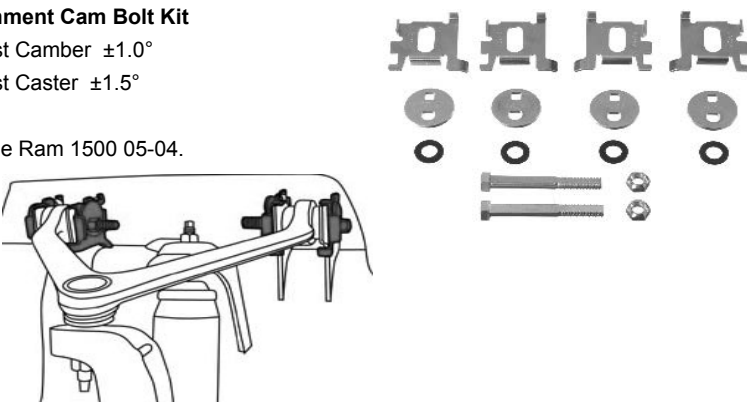
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Thickness	Description	Illustration
K100027	1/8", 1/6", 1/32"	Heavy Duty Truck Hendrickson Adjustable Walking Beam Shim Kit Contains 2 5-Piece Kits Each kit Contains 2 1/8", 1 1/16" & 2 1/32" Shims	 
K100028 K100029 K100030	Thickness 1/32" A/R 1/16" A/R 1/8" A/R	Heavy Duty Truck Freightliner Torque Arm Shims Each Kit Contains 12 pieces	
K100031 K100032 K100033	Thickness 1/32" A/R 1/16" A/R 1/8" A/R	Heavy Duty Truck Peterbilt/Kenworth Tandem Axle Shims Each Kit Contains 12 pieces	
K100034 K100035 K100036	Thickness 1/32" A/R 1/16" A/R 1/8" A/R	Heavy Duty Truck Peterbilt/Kenworth Low Air Shims Each Kit Contains 12 pieces	
K100037 K100038 K100039	Thickness 1/32" A/R 1/16" A/R 1/8" A/R	Heavy Duty Truck International Torque Arm Shims Each Kit Contains 12 pieces	




Numerical List, Flat Rate Time Guide, Description and Product Illustrations

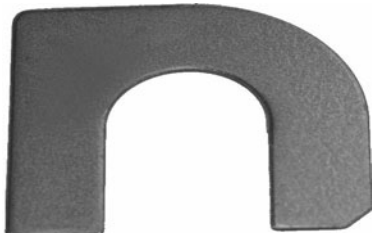Part No.	Thickness		Description	Illustration	
K100040 K100041 K100042	Thickness		Heavy Duty Truck Vanhool Shim Lower Control Arm & Bogey Axle Slot Length:.95" Slot Width:.75" Each Kit Contains 12 pieces		
	1/32"	A/R			
	1/16"	A/R			
	1/8"	A/R			
K100043 K100044 K100045	Thickness		Heavy Duty Truck Vanhool Shim Upper Control Arm & Drive Axle Slot Length: 1" Slot Width:.75" Each Kit Contains 12 pieces		
	1/32"	A/R			
	1/16"	A/R			
	1/8"	A/R			
Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100046	-2° to +4°	0.5	2	Adjustable Control Arm - Rear Upper Honda CR-V 2007-14 Change camber with the turnbuckle adjuster Adjustable for FUTURE ALIGNMENTS Packaged one kit per box.	
K100047	±3°	0.3	2	Caster/Pinion Cam Bolt Kit Adjusts Caster and Pinion Angle Ram Truck 1994-98. Jeep Grand Cherokee 1993-98. Wrangler TJ 1997-06.	
K100048 NEW	3/4° to +1-1/2	0.5	2	Rear Camber Bolt & Bracket Chrysler Sebring 05-95. Dodge Avenger 00-95; Eagle Talon 98-95. Mitsubishi Diamante 04-97; Eclipse 05-95. Galant 03-94.	


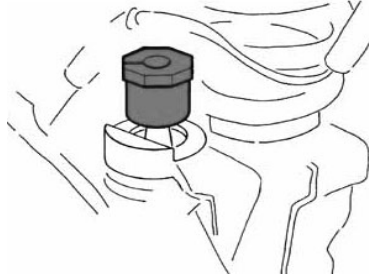


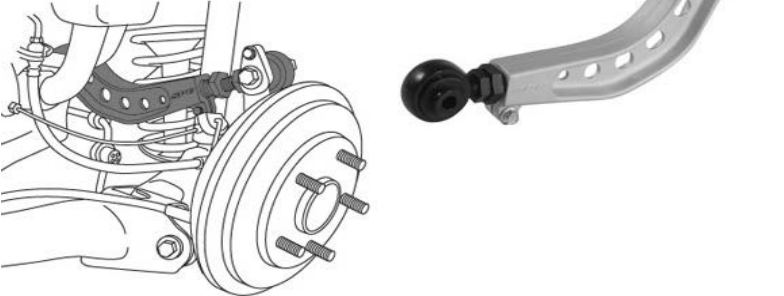
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100049 NEW	$\pm 3^{\circ}$	0.5	2	Adjustable Control Arm - Rear Upper Acura ILX 13-14. Honda Civic 10-06.	
K100050 NEW	-1° to $+1-1/2^{\circ}$	0.5	2	Adjustable Control Arm - Rear Toe Adjustment Ford Escort 94-91. Mazda 323 90-94. Mercury Tracer 94-91.	
K100054 NEW	$\pm 1/2^{\circ}$	1.0	2	Adjustable Ball Joint Dodge Ram 2500 02-00; Ram 3500 02-00.	
K100055 NEW	$\pm 1^{\circ}$ / $\pm 1-1/2^{\circ}$	0.3	2	Alignment Cam Bolt Kit Adjust Camber $\pm 1.0^{\circ}$ Adjust Caster $\pm 1.5^{\circ}$ Dodge Ram 1500 05-04.	

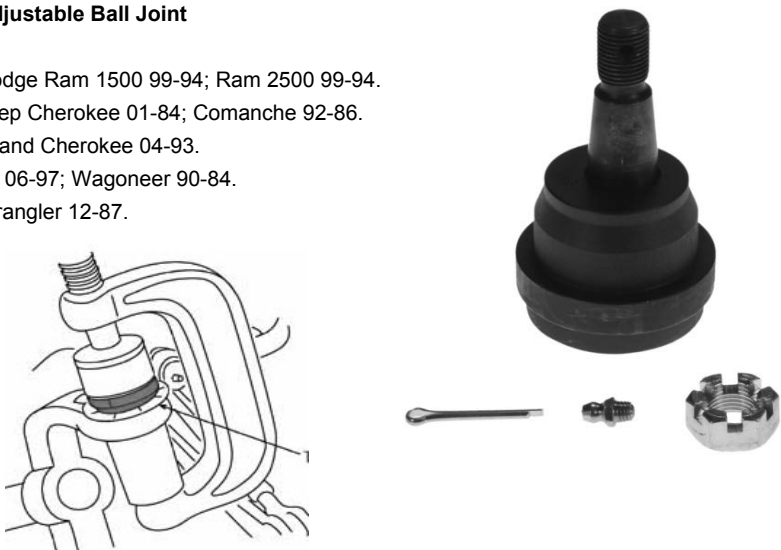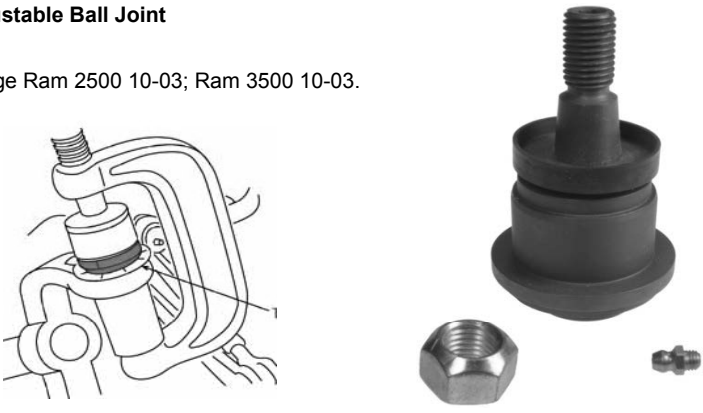



Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100056 NEW	$\pm 1/2^\circ$	1.0	2	Adjustable Ball Joint Dodge Ram 1500 99-94; Ram 2500 99-94. Jeep Cherokee 01-84; Comanche 92-86. Grand Cherokee 04-93. TJ 06-97; Wagoneer 90-84. Wrangler 12-87.	
K100057 NEW	$\pm 1/2^\circ$	1.0	2	Adjustable Ball Joint Dodge Ram 2500 10-03; Ram 3500 10-03.	
K100058 NEW	$\pm 1^\circ$	1.0	2	Adjustable Strut Mount Ford Focus 05-00.	




Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100059 K100060 K100061 K100062 K100063 K100064 K100065 NEW	±1/4° ±1/2° ±3/4° ±1° ±1 1/4° ±1 1/2° ±2°	0.5 0.5 0.5 0.5 0.5 0.5 0.5	2 2 2 2 2 2 2	Alignment Caster/Camber Bushing Dodge Ram 2500 99-94. Ram 3500 99-94; Ford Excursion 05-00. F-250 97; F-250 Super Duty 04-99. F-350 97-92; F-350 Super Duty 04-99. F-450 Super Duty 04-99. F-550 Super Duty 04-99.	 
K100066 NEW	±3/4°	0.8	2	Alignment Caster/Camber Kit Acura CL 99-97; Legend 95-91. TL 98-96; Vigor 94-92. Honda Accord 97-90. Odyssey 98-95; Prelude 01-92.	
K100067 NEW	-2° to +4°	0.5	2	Adjustable Control Arm - Rear Camber Adjustment Acura CL 03-01; RL 08-96; TL 03-99. Honda Accord 02-98.	
K100068 NEW	-2° to +5°	0.5	2	Adjustable Control Arm - Rear Camber Adjustment Acura EL 00-97; Integra 01-90. Honda Civic 00-88. Civic del Sol 97-93. CR-V 01-97; CRX 91-88.	


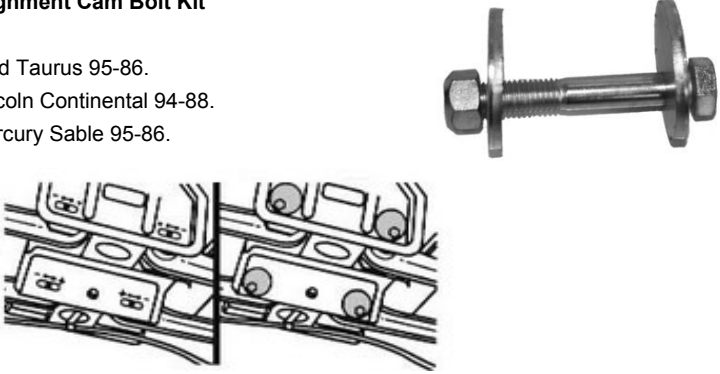
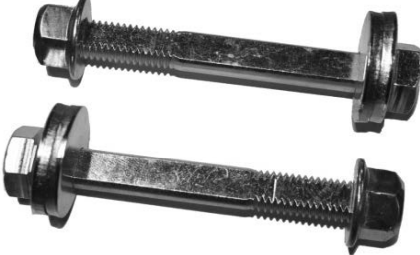

Numerical List, Flat Rate Time Guide, Description and Product Illustrations

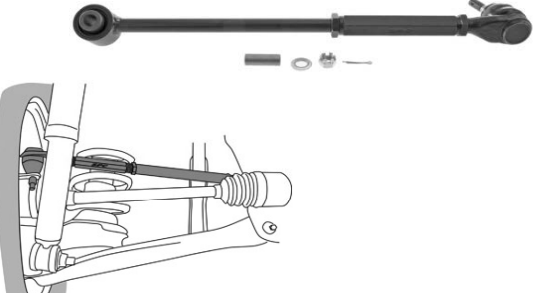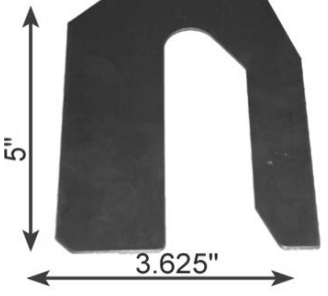Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100070 NEW	$\pm 1^\circ$ / $\pm 1\ 1/2^\circ$			Alignment Caster/Camber Kit Ford Expedition 12-07; F-150 14-04. F-150 Heritage 04. Lincoln Mark LT 08-07; Navigator 14-07.	
K100071 NEW	$\pm 1^\circ$	0.9	2	Adjustable Ball Joint Jeep Commander 10-06. Grand Cherokee 10-05.	
K100072 NEW	$\pm 2^\circ$	0.8	2	Adjustable Control Arm - Rear Camber Adjustment Ford Escape 12-01. Mazda Tribute 11-01. Mercury Mariner 11-05.	
K100074 K100075 K100076 NEW	1/32" 1/16" 1/8"			Alignment Shim Prevost Bus	




Numerical List, Flat Rate Time Guide, Description and Product Illustrations

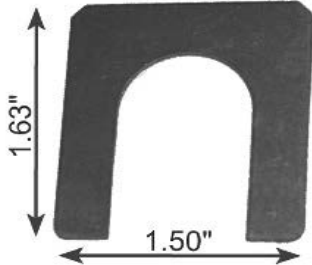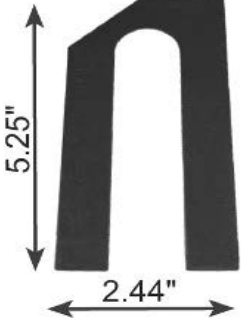Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100077 K100078 K100079 NEW	1/32" 1/16" 1/8"			Alignment Shim Prevost Bus H & XL Series Steer Axle	
K100080 K100081 K100082 NEW	1/32" 1/16" 1/8"			Alignment Shim Prevost Bus H & XL Series Drive Axle & Bogey Axle Scrub	
K100083 NEW	±2°	0.3	2	Alignment Camber Wedge Kit Domestic/Import Vehicle with two bolt strut flange mounting	



Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100084 NEW	$\pm 1\ 1/2^\circ$	0.3	2	Alignment Camber Wedge Kit Ford Mustang 14-05.	
K100085 NEW	$+2\ 1/4^\circ$	0.3	2	Alignment Cam Bolt Kit Ford Taurus 95-86. Lincoln Continental 94-88. Mercury Sable 95-86.	
K100086 NEW	$\pm 3^\circ$	0.3	2	Alignment Cam Bolt Kit Jeep Wrangler 14-07.	
K100087 NEW	$\pm 1\ 1/2^\circ$	0.3	2	Alignment Cam Bolt Kit Ford Five Hundred 07-05; Freestyle 07-05. Taurus 10-08; Taurus X 09-08.	

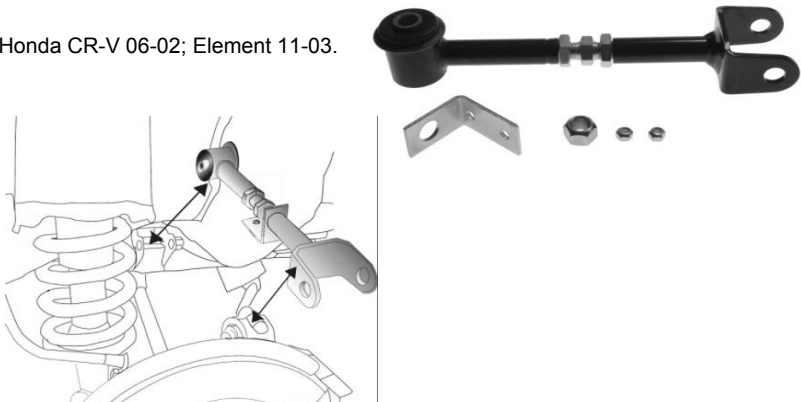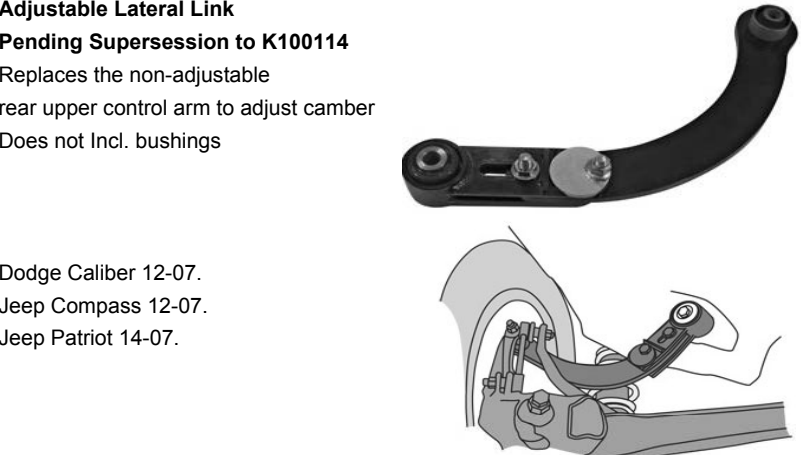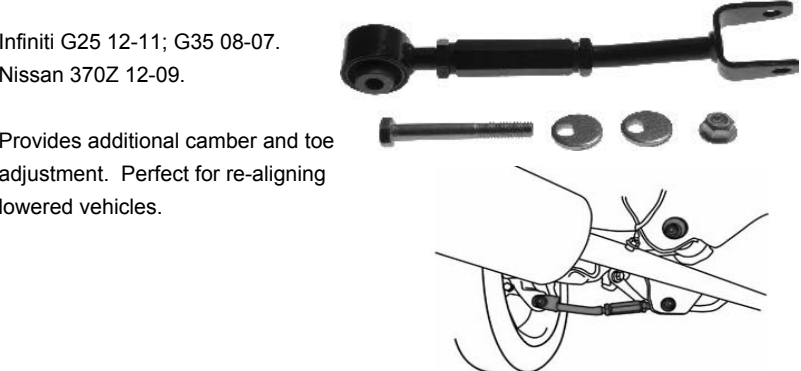



Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100088 NEW	-2° to +3°	0.5	2	Adjustable Control Arm - Rear Camber Adjustment Honda CR-V 06-02; Element 11-03.	
K100089	±2°	0.5	2	Adjustable Lateral Link Pending Supersession to K100114 Replaces the non-adjustable rear upper control arm to adjust camber Does not Incl. bushings Dodge Caliber 12-07. Jeep Compass 12-07. Jeep Patriot 14-07.	
K100090 NEW	±3° / ±2°	0.7	2	Adjustable Control Arm - Rear Camber/Toe Adjustment Infiniti G25 12-11; G35 08-07. Nissan 370Z 12-09. Provides additional camber and toe adjustment. Perfect for re-aligning lowered vehicles.	

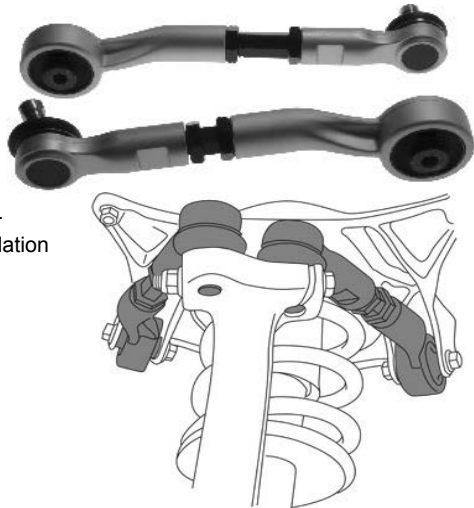
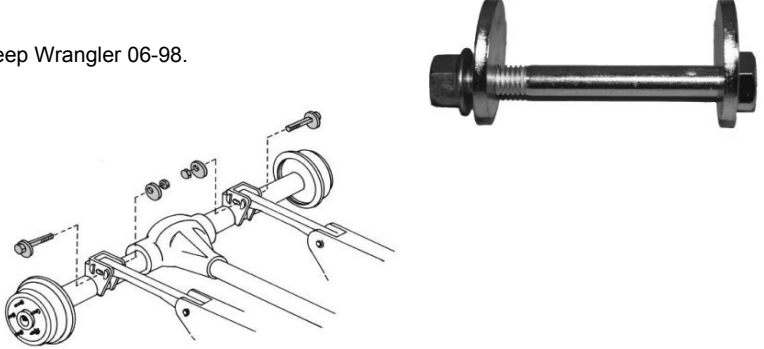
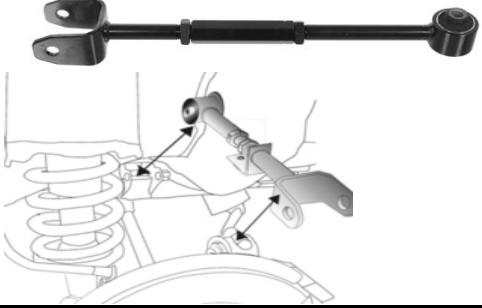

Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100092 NEW	$\pm 1\text{-}1/2^\circ$	0.7	2	Adjustable Control Arm - Front Camber/Caster Adjustment Audi A4 09-96; A6 04-98. RS6 04-03; S4 06-00; S6 03-02. Volkswagen Passat 05-98. Replaces factory fixed length arms. Allows easy adjustment after installation	
K100093 NEW	$\pm 3^\circ$	0.5	2	Adjustable Control Arm - Rear Camber Adjustment Subaru Forester 14-09; Impreza 12-08.	

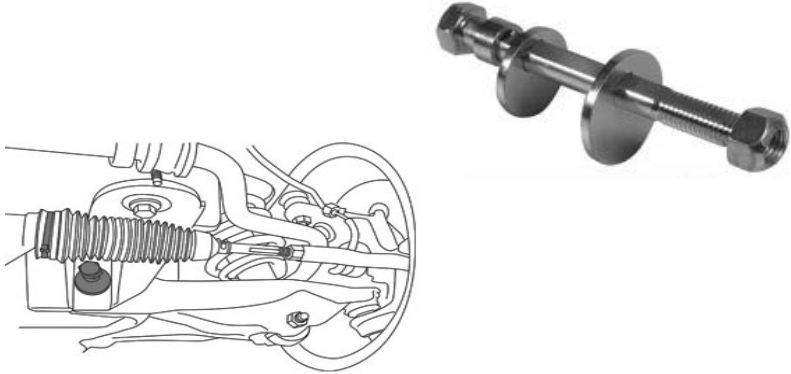
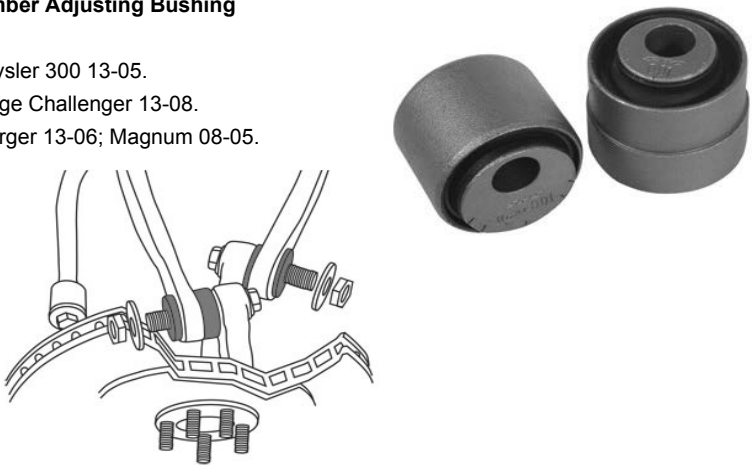
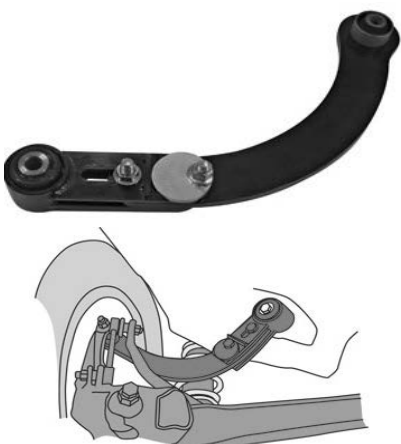

Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100094 NEW	$\pm 1\ 1/2^{\circ}$	0.8	2	Alignment Cam Bolt Kit Ford Crown Victoria 11-03; Lincoln Town Car 11-03. Mercury Grand Marquis 11-03; Marauder 04-03.	
K100102 K100103 K100104 K100105 NEW	.010" .015" .020" .030"			Camber/Toe Alignment Shim Chevrolet Cruze 12-11.	
K100106 NEW	-2° to +4°	0.5	2	Adjustable Control Arm - Rear Camber Adjustment Acura MDX 06-01; TSX 08-04. Honda Accord 07-03. Odyssey 04-99; Pilot 08-03.	
K100107 NEW	$\pm 1^{\circ}$	0.9	2	Adjustable Ball Joint - Upper Dodge Durango 11; Jeep Grand Cherokee 11.	






Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100108 NEW	$\pm 3^{\circ}$	0.9	2	Adjustable Ball Joint - Upper Chevrolet Avalanche 13-07. Avalanche 2500 06-02. Silverado 1500 HD 07-01. Silverado 2500 04-99. Silverado 2500 HD 10-01. Silverado 3500 07-01; Silverado 3500 HD 10-07. Suburban 2500 13-00; GMC Sierra 1500 10-07. Sierra 1500 HD 07-01; Sierra 2500 04-99. Sierra 2500 HD 10-01; Sierra 3500 07-01. Sierra 3500 HD 10-07; Yukon XL 2500 13-00; Hummer H2 09-03.	
K100109 NEW	$\pm 2^{\circ}$	0.6	2	Cam Bolt Kit Jeep Wrangler 06-98.	
K100110 NEW	$\pm 1^{\circ}$	0.3	2	Adjustable Control Arm - Rear Camber Adjustment Acura TL 14-09; TSX 14-09. Honda Accord 14-08. Accord Crosstour 11-10.	
K100111 NEW	$\pm 1 \frac{1}{2}^{\circ}$ to $\pm 2^{\circ}$	0.6	2	Control Arm Chrysler 300 13-05; Dodge Dodge Challenger 13-08. Charger 08-06; Magnum 08-05.	






Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100112 NEW	$\pm 2^\circ$ / $\pm 1\ 1/2^\circ$	0.6	2	Control Arm Chrysler 300 14-09; Dodge Charger 14-09. Dodge Challenger 14-09.	
K100113 NEW	$\pm 1\ 1/2^\circ$	0.6	2	Camber Adjusting Bushing Chrysler 300 13-05. Dodge Challenger 13-08. Charger 13-06; Magnum 08-05.	
K100114 NEW	$\pm 2^\circ$	0.5	2	Adjustable Lateral Link Replaces the non-adjustable rear upper control arm to adjust camber Incl. bushings Dodge Caliber 12-07. Jeep Compass 12-07. Jeep Patriot 14-07.	
K100115 NEW	$\pm 3^\circ$	0.9	2	Adjustable Ball Joint - Upper Dodge Ram 1500 10-06; Ram 1500 14-11.	


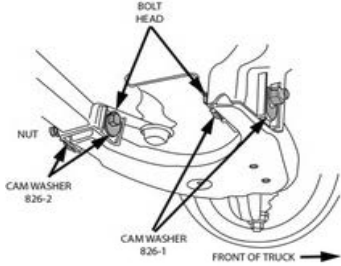

Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100116 NEW	$\pm 3^{\circ}$	0.9	2	Adjustable Ball Joint - Upper Cadillac Escalade 06-02. Escalade ESV 06-03; Escalade EXT 06-02. Chevrolet Avalanche 1500 06-02. Express 1500 08-03; Express 2500 05-03. Silverado 1500 07-99. Suburban 1500 06-00; Tahoe 06-00. GMC Savana 1500 08-03. Savana 2500 05-03; Sierra 1500 07-99. Yukon 06-00; Yukon XL 1500 06-00.	
K100117 NEW	$\pm 1 \frac{1}{2}^{\circ}$		2	Toe Compensator Link Dodge Caliber 12-07; Jeep Patriot 14-07.	
K100118 NEW	$\pm 2.5^{\circ}$		2	Lateral Link Chrysler Sebring 10-07. Dodge Avenger 10-09; Journey 10-09.	
K100119 NEW	$\pm 4^{\circ}$		2	Lateral Link Chrysler 200 14-11; Dodge Avenger 14-11. Journey 14-11.	
K100120 NEW	$\pm 2^{\circ}$		2	Control Arm Hyundai Elantra 13-07; Kia Magentis 10-07. Optima 10-07; Rondo 10-07.	

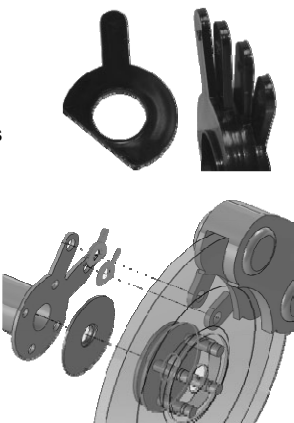
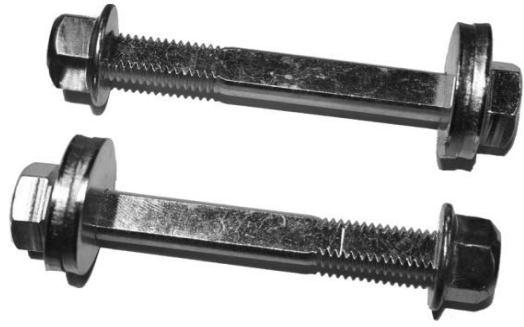
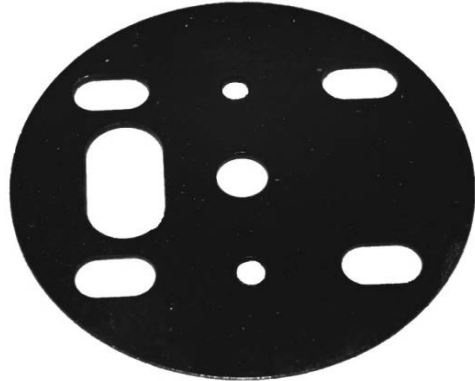
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100122 NEW	$\pm 2^{\circ}$	1		Control Arm Acura MDX 14-07; Honda Pilot 14-09.	
K100124 NEW	$\pm 3^{\circ}$	1		Adjustable Control Arm - Rear Provides positive or negative rear toe adjustments where no OE adjustments are available. Scion FR-S 14-13; Subaru BRZ 14-13. Forester 14-09; Impreza 14-08. Legacy 14-10; Outback 14-10.	
K100125 NEW		2		Rear Alignment Caliper Spacer Provides easy-to-install spacers that will bring the rotor and caliper back into alignment. Their unique snap-together design allows any required thickness to be created by interlocking as many or few spacers as needed. Assortment includes twelve .04" thick spacers and twelve .06" thick spacers. Sizes can be combined. Removable "fingertab" makes installation quick and easy.	
K100126 NEW	$\pm 1^{\circ}$	2		Camber Shim Ford Focus 14-00.	
K100127 NEW	$\pm 1 \frac{1}{2}^{\circ}$	1		Caster/camber Adjusting Kit Toyota 4Runner 02-96; Tacoma 04-95.	


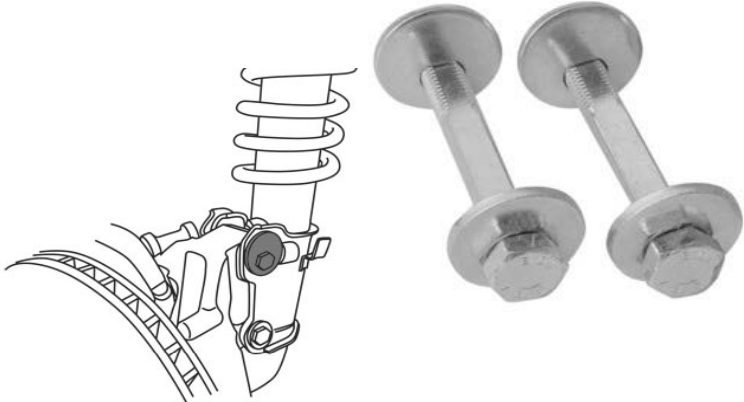

Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100128 NEW	$\pm 1\ 1/2^\circ$		1	Caster/camber Adjusting Kit Toyota 4Runner 09-03. FJ Cruiser 09-07; Tacoma 14-05.	
K100129 NEW	$\pm 1\ 1/2^\circ$		1	Caster/camber Adjusting Kit Lexus GX460 14-10. Toyota 4Runner 14-10; FJ Cruiser 14-10.	
K100130 NEW	$\pm 1\ 1/2^\circ$		2	Camber Adjusting Kit Dodge Durango 14-11; Jeep Grand Cherokee 14-11.	

Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100131 NEW	±1°		2	Caster Wedge Kit Dodge Durango 14-11; Jeep Grand Cherokee 14-11.	
K100132 NEW	±1° to ±1 1/2°	0.3	2	Cam Bolt Kit Caster Pinion Angle Adjustment Dodge Ram 2500 10-99; Ram 3500 10-99. Ram 2500 12-11; 3500 13-11.	
K100135 NEW	±1/2°		2	Camber Shim Ford Focus 14-00.	


Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100136 NEW	±2°		2	Lateral Link Adjust Toe 1.5° (Fixed) Scion FR-S 13; Subaru Forester 13-09. Impreza 13-08; XV Crosstrek 13.	
K100137 NEW	±3°	0.4	2	Cam Bolt Kit Dodge Sprinter 2500 09-07; Sprinter 3500 09-07.	
K100138 NEW	±1 1/2°	0.5	2	Adjustable Control Arm - Rear Lexus GS300 06; GS350 11-07. IS250 14-06; IS350 14-06.	
K100139 NEW	±1 1/2°		2	Caster/camber Adjusting Kit Ford Mustang 14-05.	


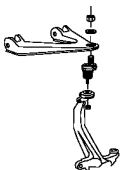
Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100141 NEW	±1° to ±2°	0.3	1	Alignment - Camber Toe Adj Kit Chevrolet Camaro 14-10; Caprice 14-12; Pontiac G8 09-08.	
K100142 NEW	±1 1/2°	1.0	1	Cam Bolt Kit Buick Enclave 14-08. Chevrolet Traverse 14-09; GMC Acadia 14-07. Saturn Outlook 10-07.	
K100143 NEW	±1 1/2°	0.5	2	Camber/Toe Alignment Shim	
K100147 K100148 K100149 K100150 NEW	.010" .015" .020" .030"	0.3 0.3 0.3 0.3		Alignment Camber / Toe Shim Fiat 500 14-12, Fiat 500L 14-12.	

Numerical List, Flat Rate Time Guide, Description and Product Illustrations

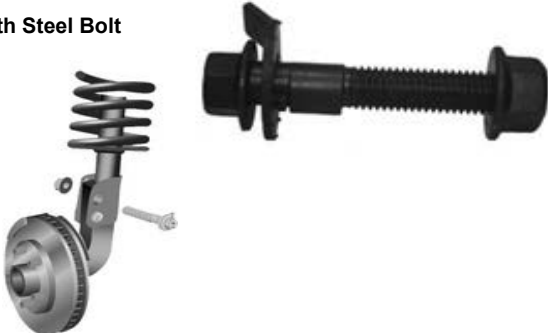Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K100152 NEW	±3°	0.3	2	Alignment Cam/Toe Bolt Rear Infiniti G35 08-06, Infiniti G37 12-08, Nissan 370Z 12-09.	
K100153 NEW	±2° to ±4°		2	Adjustable Rear Camber Arm Honda Odyssey Touring Elite 13-05.	
K100155 NEW	±2°	0.3	2	Cam Bolt Kit Chevrolet Malibu 09-05, Pontiac G6 09-05. SAAB 9-3 12-03, Saturn Aura 11-07.	
K100156 NEW	±1 3/4°	0.3	2	Cam Bolt Kit 10mm 12.9 High Strength Steel Bolt Fiat 500 13-12.	

Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used Veh.	Description/Application	Illustration
K500013	±1°	0.9	2	Adjustable Ball Joint Ford Fusion 2006-08 ,Lincoln MKZ 2007-08. Mercury Milan 2006-08, Mazda 6 Series 2003-08. Provides a fast, easy solution to the problem of non-adjustable front suspensions. Fully adj. design allows for most caster/camber combinations. FUTURE ADJUSTMENTS can be easily made. Unique design allows fast & easy "on vehicle" replacement.	 

Numerical List, Flat Rate Time Guide, Description and Product Illustrations












Adjustable Control Arm Shafts (Offset)

Offset Control Arm shafts solve negative camber problems.

Provides 0 to +1 degree of camber .


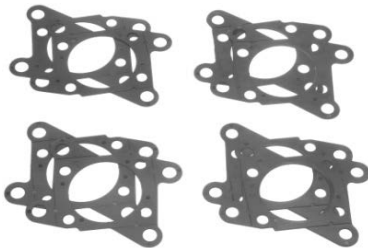
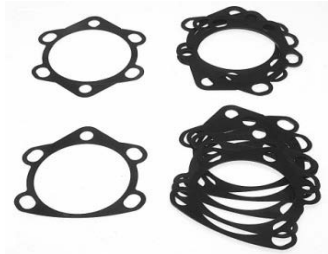

A quick and easy fix.

Kit includes one offset shaft, two bushings, and mounting hardware.






Part No.	Alignment Change	Est. Time (Hrs./Side)	Pcs. Used/ Veh.	Description/Application	Illustration
K5250	1°	1.0	2	GM passenger cars 1964-74	
K6104	1°	1.0	2	Chevrolet passenger cars 1963-82	
K6146	1°	1.0	2	GM passenger cars 1971-79	
K6148	1°	1.0	2	GM passenger cars 1971-73	
K6184	1°	1.0	2	GM light truck 1973-91	
K6210	1°	1.0	2	GM passenger cars 1980-96	
K6218	1°	1.0	2	GM passenger cars & light truck 1978-95	
K6256	1°	1.0	2	GM light truck 1963-95	
K6355	1°	1.0	2	GM light truck 1987-95	
K6449	1°	1.0	2	Astro/Safari Mini Van 1991-95	
K8233	1°	1.0	2	Ford passenger cars 1933-73	

Numerical List, Flat Rate Time Guide, Description and Product Illustrations



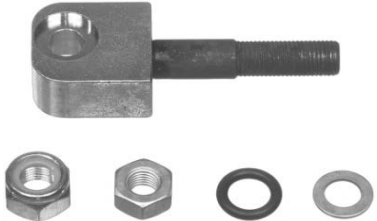




Assortments

Part No.	Description	Illustration
CAM1A	<p>Double Offset Camber Adjusting Kit - Magna Cam</p> <p>QUICK & EASY Camber adjustments on front & rear susp. NO GUESSING - Accurately adjust camber with weight of vehicle on it's wheels - simply turn the cam bolt and adjust to LIVE readings. Adjustable for FUTURE ALIGNMENTS</p> <p>Contains 4 ea. Of K928, K929, K5330, K7256, K9757, K90208 and a plastic organizer.</p>	
K6623	<p>Rear Camber Shim Assortment</p> <p>General Motors: "E" and "K" body cars with rear disc brakes, including "ABS" systems Buick Riviera/Reatta, Cadillac Allante, Eldorado, Seville. Oldsmobile Toronado 1986-94.</p> <p>Rear camber shim design allows for either positive or negative camber adjustment on rear disc brake GM "E" & "K" body vehicles while maintaining the caliper in exact alignment with the rotor.</p> <p>Contains 2 each of K6624, K6625, K6626 & K6627</p>	
K7437	<p>Rear Camber/Toe Shim Set Assortment</p> <p>Contains 20 shims (two of each size). K7438 to K7447</p> <p>Corrects rear camber from ± 1 degree and toe from $\pm .10$ to $\pm .80$ degrees.</p> <p>Dodge Caravan AWD, w/o ABS 1990-95, all 1996-07. Plymouth Voyager AWD, w/o ABS 1990-95, all 1996-04. Chrysler Town & Country AWD, w/o ABS 1990-95, all 1996-07.</p>	
K8918	<p>Heavy Duty Truck Tandem Alignment Shim and Spacer Assortment</p> <p>Fits: Freightliner, I.H.C., Kenworth, Peterbilt, Volvo/White and Wilson Trailers.</p> <p>Contains: 6 Each size of all H.D. tandem truck shims, 2 each size Kenworth spacers. Includes H.D. metal storage case.</p>	








Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Description	Illustration
K90139	Camber Adjusting Kits - "Cam Studs" Honda Accord, front. 1986-89. A fast economical means of correcting camber on front wheels, positive or negative. Replaces O.E. forward upper control arm mounting stud. Assortment 1 each K90141, K90142, K90205, K90206 & K90207	
K90478	Rear Camber/Toe Shim Set Assortment Contains 16 shims (two of each size) and special T40258 shim wrench K90479 to K90486 Corrects rear camber and toe. Combine two shims to get up to ± 1 degree of camber or $\pm .5$ degree of toe change. Caution: Check brake and rotor clearance for binding. K90487 spacers may be required. Audi TT 2000-06. VW Beetle, Golf, Gti and Jetta. 1999-06	
SHIM1A	Rear Wheel, Full Contact, Dual Angle Shim System Master Assortment Contains quantities of each size from every series (60 shims total), tab positioning templates, instructions, a shim indexing wall chart and a tab cutting tool.	
SHIM1C	Universal Rear Wheel Shim Assortment, Full Contact Dual Angle Shims. Assortment includes 6 each of K915, K916, K917 & K918 ; Templates, Tab Cutting Tool, Slide Chart, Paint Stick, Charts & Instructions.	
SHIM2B	Caster/Camber Shim Assortment Assortment - 24 of 13 different shims and plastic organizer. K957 to K972	





Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Special Chassis and Alignment Tools and Accessories		
Part No.	Description	Illustration
T412	Ball Joint Impact Sockets. 3/4" drive impact sockets easily remove and replace threaded ball joints. 1 15/16"	
	T411 2 1/8"	
T475V	Ball Joint/Disc Rotor Gage Set Checks for ball joint wear. A precision tool for measuring axial and radial play. Will also check for disc rotor run out, gear backlash, valve guide wear and camshaft wear. Special locking pliers clamp securely to any convenient object.	
T40001	Universal Ball Joint Service Tool Set With Case Includes C-Frame Press ;Receiving tubes, I.D. x O.D. 2" x 1 3/4" , 2 1/2 x 2 1/4" ,& 3" x 2 3/4" Removal & Installation Adapters	
T40002	Universal Ball Joint Service Tool Set For Use On 4WD Vehicles Includes Receiver Cup , Installation Cup & Adapter.	
T40003	Ball Joint Removal Tool For Use On Ford,Lincoln,Mercury & Mazda Trucks Used on Applications that use the K8695T or the K8695T006 (oversized ball joint)	
T40004 NEW	Bushing Press Set Easily replace press-in type control arm bushings on many domestic and imported vehicles with this new kit. Mechanical power screw quickly and easily removes worn bushings and installs them without damaging the control arm. Set includes C-Frame, Screw assembly and all adapters to do the job quickly and correctly. Packaged in a durable plastic case	
T40009 NEW	Bushing Press Adaptor The new fully adjustable rear control arm for Dodge Caliber and Jeep Compass/Patriot utilizes the bushing from the stock non-adjustable arm this adaptor is designed specifically to remove and install both control arm bushings	







Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Special Chassis and Alignment Tools and Accessories		
Part No.	Description	Illustration
T40010 NEW	3/8" Rotary File This 3/8" rotary file is specifically designed for Aluminum. Use it to quickly and cleanly expand cam slots in aluminum brackets and frames. It is an ideal tool to use when installing cams	
T40011 NEW	Steering Tie Rod End Tool Unique design allows fast and easy replacement of inner tie rod end without removing the rack and pinion.	
T40012 NEW	BSHG Press Adaptors Designed to be used with the 40920 Performance Ball Joint Press. It is designed specifically to remove the stock rear control arm bushings and to install an offset Rear Camber Bushings used on the new Chrysler LX platform cars	
T40013 NEW	Lug Nut Cover Remover Tool	
T40014 NEW	Taurus/Sable Ball Joint Adaptor Set	
T40016 NEW	Forged Universal TorsionBar Loading/Unloading Tool Kit Safely loads and unloads 5-Lug, 6Lug & 8 Lug GM, Dodge & Ford torsion bar suspensions for key replacement	
T40017 NEW	Micro Shear Rear Shim Tab Cutter This cutting tool is designed to easily remove the tabs from rear-wheel full contact/dual angle shims. Removes only those you need removed.	


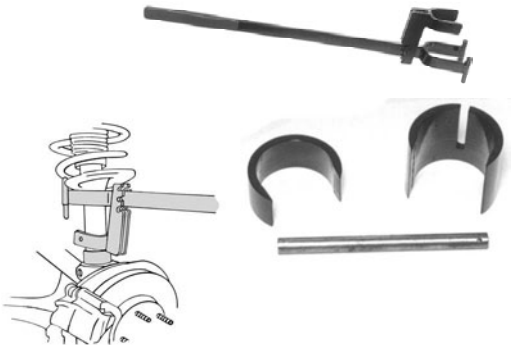
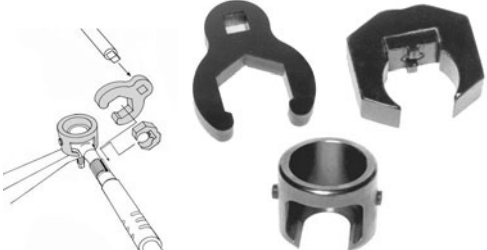

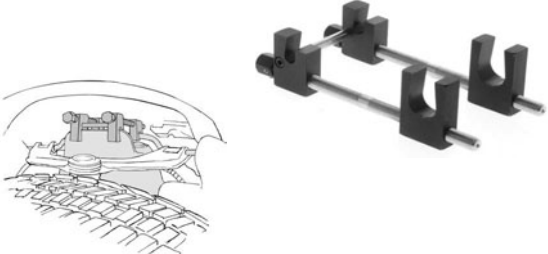

Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Special Chassis and Alignment Tools and Accessories		
Part No.	Description	Illustration
T40018 NEW	Alignment Tool Bushing This tool is designed to be used in conjunction with the K100142 Rear Link Flex Joint Bushing. Allow fast and easy removal and installation of the bushing Buick Regal 14-08 Chevrolet Traverse 14-08 Gmc Acadia 14-07 Saturn Outlook 14-07	
T40207	Ball Joint Spanner Wrench Designed for removal and installation of ball joint adjusting sleeves on 1/2, 3/4 and 1-ton Dana open yoke front axles. Used on front axles of Ford, GM, Chrysler, IHC and Jeep 4 WD vehicles. Tool permits easy torquing with 1" socket for proper upper ball joint preload. For use with K931-K936 and K3154-K3159 .	
T40209	2 1/4" Hole Saw w/Special Insert Guide. Use during installation of part no. K8574 .	
T40212	3/8" Drive Bolt/Nut Removing Tool Removes even the most stubborn bolts with ease. The tool works in conjunction with a zip gun (to provide vibration) while being turned with an open end or box wrench. Works especially well on GM hub & bearing assy. T50 torx bolts. Also available in 1/2" drive - see T40261	

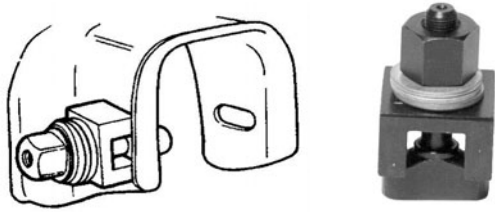


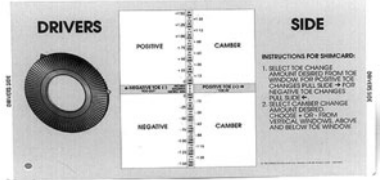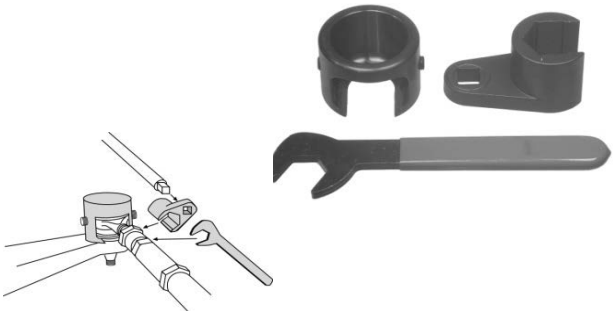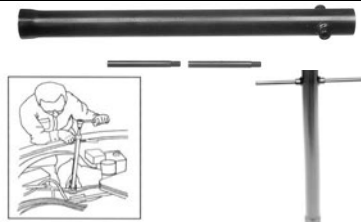


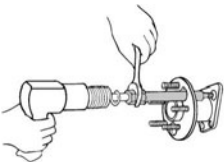

Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Description	Illustration
T40222	Upper Control Arm Knockout Tool. A required tool. Alignment inserts can be quickly removed from the upper control arm alignment brackets without . damaging alignment brackets Full size Chevrolet and GMC trucks from 1988. Astro and Safari 4WD.	
T40228	GM "W" Car, Rear Toe Adjusting Tool. Designed to provide easy adjustment to the factory rear toe system. Fits: 1990 & newer Buick Regal, Chevrolet Lumina (except van), Olds Cutlass Supreme, and Pontiac Grand Prix.	
T40232 T40233 T40234 T40235 T40236 T40237 T40238 T40239	Plastic Shim Indexing Templates. Use to position rear wheel alignment shims. Provides for the correct tab removal for easy installation. A - Chrysler, Volkswagen (w/Blue Shim) B - Chrysler Mini Van, Audi (w/White Shim) C - GM "J", "L", "N" and "X" Body and Honda (w/Gray Shim). D - GM, "A", "E" and "S" Body (w/Burgundy Shim). E - Eagle, Geo, Festiva, Isuzu (w/Blue Shim). F - Honda (w/White Shim). G - Nova, Toyota (w/Gray Shim). H - Omni, Horizon and Audi 4000 (w/Blue Shim).	
T40240	Indexing Slide Chart. This plastic slide chart instantly displays shim indexing numbers by simply pulling slide until desired changes show in toe & camber windows. Use with "universal" varying degree rear shim only. (K915, K916, K917, K918).	
T40242	Toe Adjustment Tool Set. Problem solving tool. This tool set enables the technician to easily reach (and break loose) the tie rod jam nuts while the assembly is held stable. For Chrysler "LH" cars - Concorde, New Yorker LHS, Intrepid, Vision. 1994-97 Fits OEM tie rods only	
T40243	Camber/Caster Adjusting Tool This unique tool allows for 360 degree rotation of the O.E. caster camber adjusters without interference. Ford Crown Victoria, Mercury Grand Marquis, and Lincoln Town Car. 1992-02	



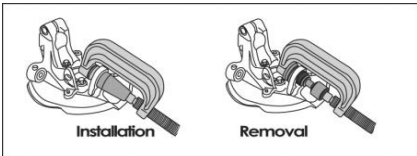



Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Description	Illustration
T40247	Heavy duty Camber Adjusting Tool. Allows camber and caster adjustments with weight on vehicle. Designed for accurate one time adjustment. For 1993-02 Camaro and Firebird.	
T40248	Strut Removal Tool This problem solving strut tool features a 'lever and fulcrum' design for fast and easy removal of even the most stubborn struts. The tool incorporates a lever arm working against the lower spring plate. The fulcrum pushes the knuckle down to create maximum leverage to free the strut from the knuckle. Fits front and rear of Taurus/Sable from 1986, Contour/Mystique from 1995, cougar from 1999 and front of Windstar from 1995	
T40251	Toe Adjustment Tool Set. Problem solving tool. This tool set enables the technician to easily reach (and break loose) the tie rod jam nuts while the assembly is held stable. For Chrysler "LH" cars - 300/LHS, Concorde, Intrepid. 1998 and newer	
T40252	Toe Adjusting Tie Rod Tool Machined to fit the large toe adjusting sleeve and the "Steer ahead" sleeve. Positive grip - no slippage. Breaks loose stubborn, rusted sleeves. Provides full 360 degree rotation. Fits Ford F250 to F550 Super Duty	
T40253	Caster/Camber Adjusting Tool Heavy duty construction - easy installation. The tool allows you to slide the upper control arm in a positive or negative direction when adjusting camber/caster. Provides LIVE adjustment readings. Ford Explorer, Lincoln Aviator, Mercury Mountaineer. 2002-04	
T40255	Tie Rod Stabilizer Set The tool is designed to center the tie rod ends in their sockets when adjusting toe. Helps to obtain a straight steering wheel. Insures proper steering performance and maximizes tire life. Universal design for passenger car, SUV and light trucks	


Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Description	Illustration
T40256	Ball Joint Adapter Set Makes a difficult job easy. Specifically designed to easily remove and install the most stubborn ball joints. Fits most popular "C" clamp style ball joint press tools. Ford Taurus, Mercury Sable 1996-06	 
T40257	Universal Metric Sway Bar Measurement Tool Metric "Star Tools" measure bar in mm and provides the correct sway bar bushing number to order. For more information on Universal Sway Bar Bushings see the Master Chassis catalog.	
T40258	Shim Wrench Designed to remove the rear hub when installing K90478 series shims. Highly recommended to ease installation and avoid damaging the bearing seal Audi TT 2000-06. VW Beetle, Golf, Gti and Jetta. 1999-06.4	
T40259	Bushing Adapter Set Use with offset camber bushings K6669 or K6670 . Designed for easy removal of OE control arm bushings and installation of offset camber bushings. Chev/GMC 1/2, 3/4 & 1 Ton trucks from 1999.	
T40260	Caster/Camber Adjusting Tool Fast and easy hookup. Adjustable jaws allow for smooth controlled adjustments. Camber adj. = -1 to +1 degree Caster adj. = -1 1/2 to +1 1/2 degrees Dodge Ram 1500 2002-05	
T40261	1/2" Drive Bolt/Nut Removing Tool Removes even the most stubborn bolts with ease. The tool works in conjunction with a zip gun (to provide vibration) while being turned with an open end or box wrench. Works especially well on GM brake caliper mounting T60 torx bolts Also available in 3/8" drive - see T40212	 

Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Description	Illustration
T40262	Adjustable Magnetic Camber Gauge Portable and accurate. Attaches to the spindle or rotor to measure camber changes when alignment work is being performed. Universal Applications	
T40264 T40265 T40266 T40267	Rotary Files 1/4" Rotary File. 3/8" Rotary File. 5/8" Rotary File. Set of Three Rotary Files High quality rotary files. Great time savers. Use to elongate lower strut mount holes.. Use with 1/4" or 3/8" electric or air drill.	
T40268	Ball Joint Adjusting Wrench Makes a difficult job EASY. The 1 5/8" open end wrench makes adjusting the ball joints a snap. Use with adjustable ball joints K7451, K7452, K90490 and K90492. Fits adjustable ball joints for Acura, Honda, Mitsubishi and Chrysler.	
T40269	Universal Rack & Pinion Tie Rod End Tool The set screws allow FAST AND EASY replacement of inner tie rod ends without removing the rack and pinion gear. Fits 1/2" drive wrench. Chrysler Mini Vans and passenger cars 1996-05. Use with EV323, EV403, EV404, EV405.	
T80275	Ball Joint Adapter Set Makes a difficult job EASY. Designed to easily remove and install stubborn ball joints. Fits most popular "C" clamp style ball joint presses.	
T80541	Ball Joint Adapter Set Chrysler 300, Dodge Charger, Magnum, 2WD 2005-08 Designed to remove and install stubborn ball joints. Makes a tough job EASY. Fits most popular "C" clamp style ball joint presses. Honda Accord Coupe, Sedan and Hybrid 2003-07. Acura TSX 2004-07. Pilot 2003-07.	

Numerical List, Flat Rate Time Guide, Description and Product Illustrations

Part No.	Description	Illustration
T80762	Caster/Camber Adjusting Tool Adjusts caster and camber smoothly to required alignment. FUTURE adjustments made easy. Heavy duty construction Installs and removes quick and easy. Allow 12 min/side Provides -1 1/4° to + 1 1/4° Caster/Camber Buick Ranier 2004-07. Chev/GMC SSR, TrailBlazer, and Envoy 2002-08. Isuzu Ascender 2003-08 Oldsmobile Bravada 2002-04. Saab 9-7x 2005-08. Two tools per kit	



VISIT MOOG® ONLINE

moogproblemsolver.com



The MOOG® website gives you instant 24/7 access to exclusive Problem Solver® and "Did You Know?" bulletins, technical videos, online parts lookup and much more. Visit today to learn about MOOG's problem-solving heritage and why MOOG is the preferred choice of professional technicians and NASCAR® crew chiefs.

PROBLEM SOLVER® BULLETIN LIBRARY

These popular one-page bulletins, prepared by expert MOOG engineers, provide answers to many undercar concerns, offering application-specific insights and product suggestions. The complete library is searchable and each bulletin is available as a printable PDF.




TECHNICAL VIDEOS AND WEBINARS

Detailed videos provide step-by-step instruction on topics ranging from suspension system inspections to proper wheel alignment.



"DID YOU KNOW?" TECHNICAL BULLETIN LIBRARY

These in-depth bulletins provide detailed diagnostic tips, removal procedures and installation steps for tackling some of the most challenging repairs. The complete library is searchable and each bulletin is available as a printable PDF.

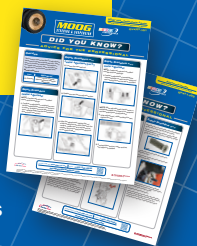

TOTAL UNDERCAR SOLUTIONS

Explore the entire range of Total Undercar Solutions that MOOG offers, as well as the latest in new MOOG products and innovations.



MOOG PROBLEM SOLVER OF THE RACE

Follow the weekly NASCAR® crew chief MOOG Problem Solver of the Race award standings. This prestigious award is presented following each NASCAR® Sprint Cup event to the crew chief whose car posts the best second-half improvement in average lap speed in the race while finishing on the lead lap.



PLUS!

Catch up on MOOG news, new product announcements and the latest promotions.

THE PROBLEM SOLVER®






TOTAL UNDERCAR SOLUTIONS

SOLUTIONS COMPLÈTES POUR LE DESSOUS DU CHÂSSIS

SOLUCIONES TOTALES PARA EL CHASIS

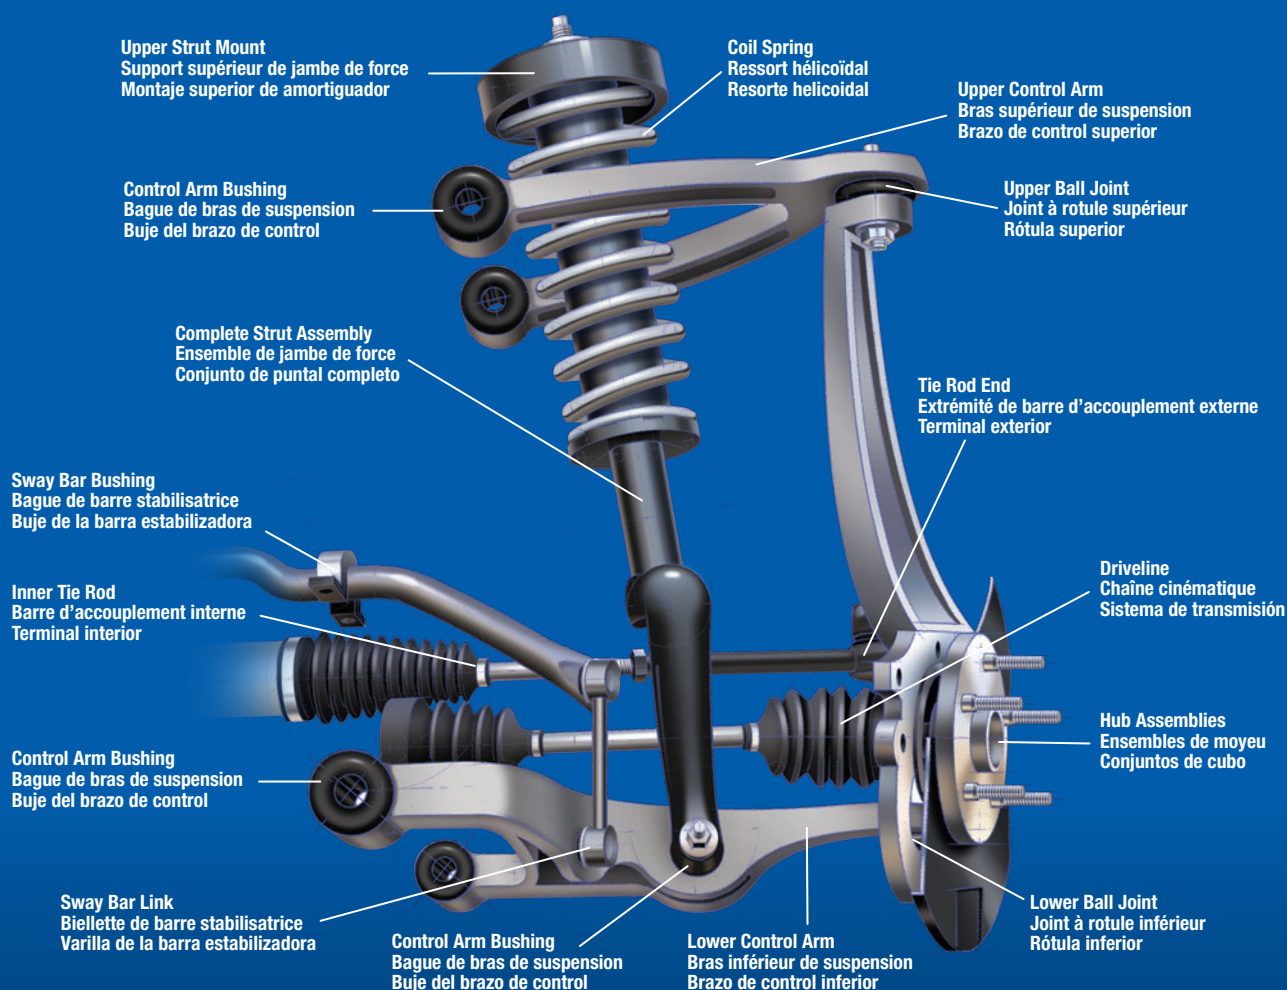

For parts lookup, visit www.FMe-cat.com

tech line: **1-800-325-8886**

moogproblemsolver.com

